GA27-2758-0 File No. S360/S370/S3-14

IBM 3270 Information Display System Custom Feature Description Dual Case Character Set RPQ 8K0366

Systems



Preface

This publication contains descriptive information, keyboard operating differences, and reference data for the Dual Case Character Set (RPQ 8K0366), which is an optional attachment to the 3270 Information Display System.

The Introduction defines the dual case character set. It is intended mainly for company executives, planners, and IBM marketing representatives. This material adds to the description of the 3270 system capabilities given in systems manual, An Introduction to the 3270 Information Display System, GA27-2739.

The Keyboard Operation section states the differences between mono and dual case operating procedures when using a keyboard attached to a 3277 or 3275 Display Station equipped with the Dual Case Character Set (RPQ 8K0366). This information supplements the keyboard operating instructions given in systems manual, *Operator's Guide for IBM 3270 Information Display Systems*, GA27-2742.

The Reference Data provided consists of coding charts used by programmers in conjunction with the systems manual, *IBM 3270 Information Display System Component Description*, GA27-2749.

When this publication is used, it is assumed that the reader has read the above-mentioned 3270 system manual(s), applicable to his needs.

First Edition (December, 1972)

Changes are periodically made to the information herein; before using this publication in connection with the operation of IBM systems, refer to the latest System/360 and System/370 SRL Newsletter, Order No. GN20-0360, for the editions that are applicable and current.

Requests for copies of IBM publications should be made to your IBM representative or to the IBM branch office serving your locality.

Text for this publication has been prepared with the IBM SELECTRIC @Composer.

A form is provided at the back of this publication for reader's comments. If the form has been removed, comments may be addressed to: IBM Systems Development Division, Product Publications, Dept. 520, Neighborhood Road, Bldg. 004, Kingston, N.Y., 12401

©Copyright International Business Machines Corporation, 1972, 1973

Introduction												5
Configurators .												5
Dual Case Keyboar	ds	3							•			5
Keyboard Operation												5
Reference Data .												5

1	Examples of the Dual Case Character Set 6	
2	3270 Display System - Local Configurator 7	
3	3270 Display System - Remote Configurator 8	
4	3275 Display Station Configurator 9	
5	French Dual Case Typewriter Keyboard, 66 and 78 Keys	
6	German Dual Case Typewriter Keyboard, 66 and 78 Keys	
7	Italian Dual Case Typewriter Keyboard, 66	
	and 78 Keys	

1	United States I/O Interface Code - EBCDIC
2	French I/O Interface Code
3	German I/O Interface Code
4	Italian I/O Interface Code
5	United Kingdom I/O Interface Code
6	Assignments for Internal 7-Bit Structured Data 18

.

INTRODUCTION

The Dual Case Character Set (RPQ 8K0366) provides primarily the ability to print or display the 26 lowercase alphabetic characters, and may be installed on the 3284 and 3286 printers, and on the 3275 and 3277 display stations that use American English, United Kingdom English, French, German, or Italian character generators. In addition, characters φ , \hat{e} , \hat{e} , \hat{a} , and \hat{u} are added in the French character set, replacing mono-case characters φ , !, #, @, and ". The $\boldsymbol{\beta}$ is added to the German character set, and in the Italian character set \hat{i} , \hat{o} , \hat{e} , \hat{u} , and a replace mono-case characters #, @, !, ", and φ . See Figure 1 for examples of the Dual Case Character Set.

The dual case feature functions only with units that employ EBCDIC transmission code.

Configurators

Figures 2, 3, and 4 show the 3270 configurators with the Dual Case Character Set added.

Dual Case Keyboards

The dual case typewriter keyboards shown in Figures 5 through 7 are available for French, German, and Italian users. These keyboards contain unique characters that are not available on the associated mono-case keyboards. The

keyboard for the United Kingdom is the same for both mono-case and dual case, and is illustrated in systems manual, An Introduction to the 3270 Information Display System, GA27-2739.

KEYBOARD OPERATION

The Dual Case Character Set can be generated from either typewriter or operator console type keyboards. When operating a keyboard attached to a display station equipped with dual case, the key functions explained in the Operator's Guide for IBM 3270 Information Display Systems, GA27-2742, are valid except for the SHIFT key operation. With dual case installed, pressing and holding the SHIFT key and then pressing a character key causes the selected characters to appear in upper case (capital letters) on the display screen. If a character key is pressed and the SHIFT key is not used, the selected letter appears on the screen in lower case.

REFERENCE DATA

The reference data in Tables 1 through 6 contain dual case modifications to existing information provided in systems manual, *IBM 3270 Information Display System Component Description*, GA27-2749.

Ava Bobby Chuck Dodd Eileen Fluffy Gregg Hugh Iris Jejune Kirk Lilly Mommy Nanny Osgood Phipps Quinque Rorry Sissy Tuttle Ursula Vivian Widow Xerxes Yancy Zozzi Anne Algau Otto Jörg Österreich Strauße ülzen Ulm Günter François René Eugène £1 "Où?" 'Voila!' to: RH & Co; e,f,g (etc.) OO* \$11 +22 33¢ 44% #55 066 77_ 1881 799 3/4 a>b<6 5-x= ABCDEFGHIJKLMNOPQRSTUVWXY Zabcdefghijklmnopqrstuvwxyz0123456789.; ;_-+=><#\$¢/%&@*()?!'"!T&Aadoodduuußaeeçou

Display Message

b d f h b d k m o q k * s u w y s u r U u h r U b d f b d f XXCXEFXXI¢X(XXIXJKXMXXPQXX\$X);XX/SXUXXXYXX,X_>X0XX3X56XX9:X@XX" XXCXEFX XXCXEFX abcdefghibcdefgqjklmnopqrkl*n;pyzstuvwxyzstuvwxhir9U5uoh9r9U5uo abcdefg abcdefg ABCDEFGHI¢.((+I&JKLMNOPQR!\$*);"-/STUVWXYZ,%_>?0123456789:#@'=" ABCDEFG ABCDEFG b d f h b d k m o q k * s u w y s u r U u h r U b d f b d f XXCXEFXXI¢X(XXIXJKXMXXPQXX\$X);XX/SXUXXXYXX,X_>X0XX3X56XX9:X@XX" XXCXEFX XXCXEFX

Printer Message

Figure 1. Examples of the Dual Case Character Set

Note: One display station with a keyboard special feature must be attached and within visual distance of the control unit. The display station and control unit model numbers must agree.

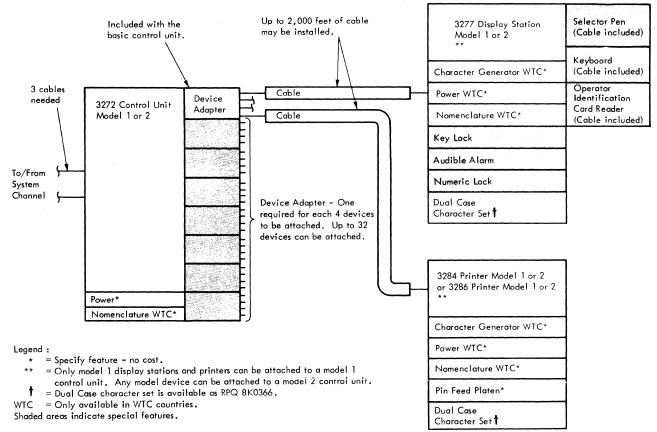


Figure 2. 3270 Display System - Local Configurator


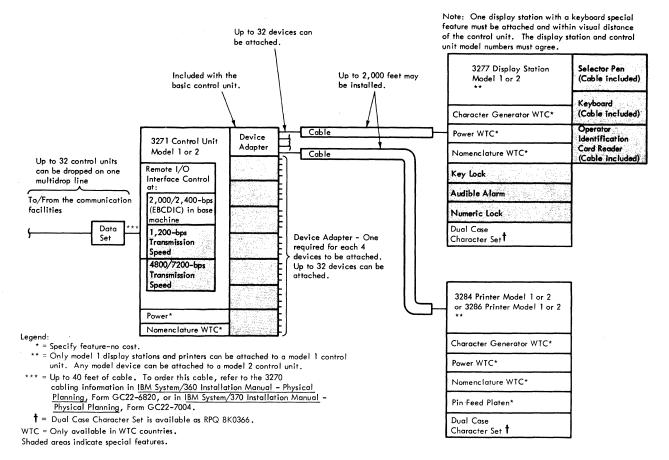


Figure 3. 3270 Display System - Remote Configurator

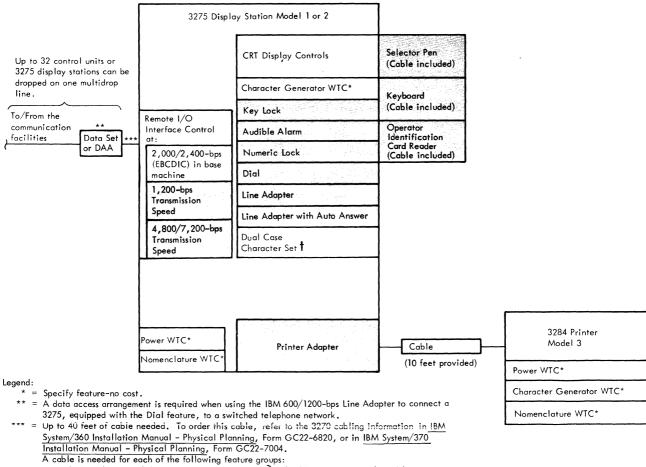

- 1. 3275 with external data sets
- The 3275 operates via leased lines or 2. 3275 with the IBM 600/1200-bps Line Adapter. with Dial feature installed, via
- switched lines.
- 3. 3275 using Dial and the IBM 600/1200-bps
- Line Adapter with Auto Answer.
- † = Dual Case Character Set is available as RPQ 8K0366.
 WTC = Only available in WTC countries.

Shaded areas indicate special features.

Figure 4. 3275 Display Station Configurator

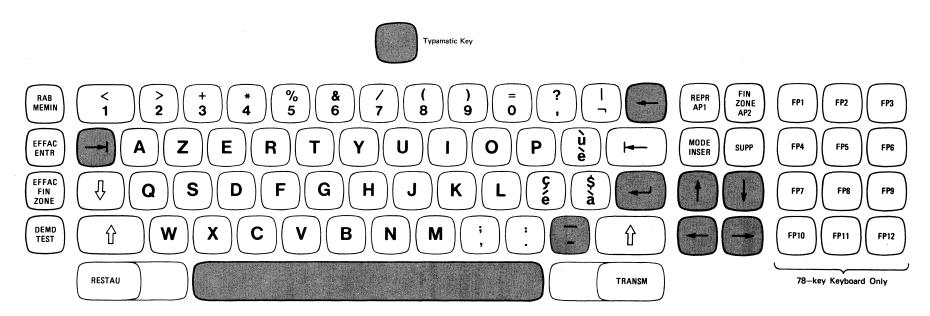


Figure 5. French Dual Case Typewriter Keyboard, 66 and 78 Keys

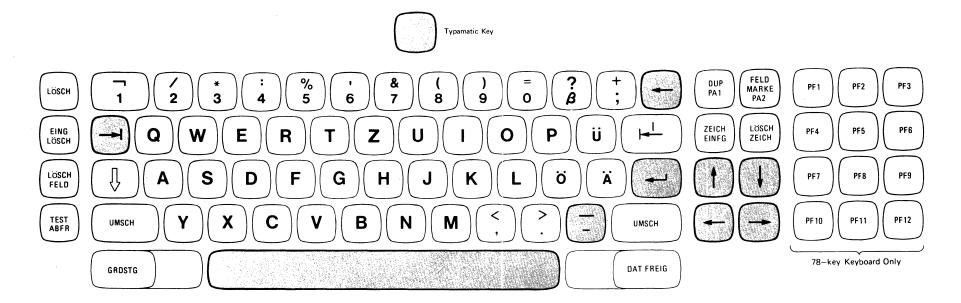


Figure 6. German Dual Case Typewriter Keyboard, 66 and 78 Keys

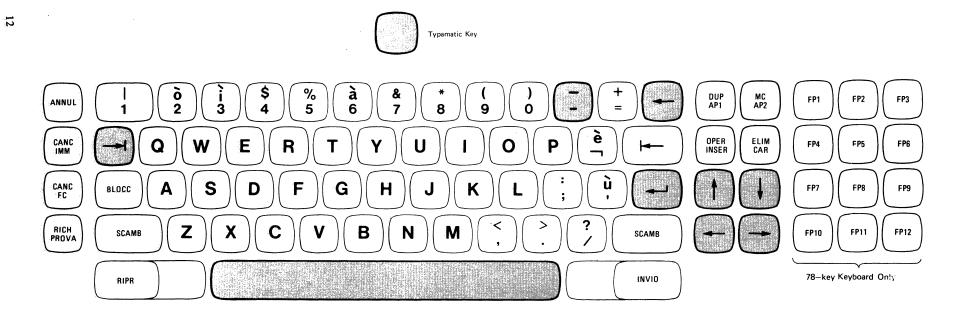


Figure 7. Italian Dual Case Typewriter Keyboard, 66 and 78 Keys

			0	0			C)1			1	0			1	1	
	Hex 1	00	01	10	11	00	01	10	11	00	01	10	11	00	01	10	11
Bits 4567		0	1	2	3	4	5	6	7	8	9	A	в	с	D	E	F
0000	0	NUL	DLE			SP	&	-									0
0001	1	зон	SBA	, ,				1		a	j			А	J		1
0010	2	stx	EUA		SYN					Ь	k	s		в	к	s	2
0011	3	ΕΤΧ	IC							l c	1	t		с	L	т	3
0100	4									d	m	u	1 	D	м	υ	4
0101	5	РТ	NL							e	n	v	1 	E	N	v	5
0110	6			ЕТВ						f	o	w	 	F	0	w	6
0111	7			ESC	EOT					9	р	×	, 	G	Р	x	7
1000	8									h	q	У	; 	н	٩	Y	8
1001	9		EM								r	z	 	I	R	z	9
1010	A				and the life of the life	¢	1	1	:								
1011	В					•	\$		#								
1100	с		DUP		RA	<	•	%	@				,				
1101	D		SF	ENQ	NAK	()	_									
1110	E		FM			+	;	>	=								
1111	F		ІТВ		SUB	1		?	"								

Notes:

- Character code assignments other than those shown within all outlined areas of this chart are undefined. If an undefined character code is programmed, the character that will be displayed is not specified. The character displayed by the 3277 or 3275 for a given undefined character code may be different for other devices. IBM reserves the right to change at any time the character displayed for an undefined character code.
- 2. Without the Dual Case Character Set (RPQ 8K0366), the 26 lowercase alphabetic characters (within the dotted outlined area) are converted to uppercase by the display station or printer and displayed or printed as uppercase characters.
- 3. NL, EM, DUP, and FM control characters are displayed or printed as 5, 9, *, and ; characters, respectively, except by the printer under format control, in which case NL and EM do not result in a character being printed.
- 4. Bits 0 and 1 are assigned for the following characters: attribute, write control (WCC), copy control (CCC), CU and device address, buffer address, sense, and status. These bits are assigned so that each character can be represented by a graphic character within the solid outlined areas of the chart. See Table 6.

Table 2. French I/O Interface Code

			0	0			 C)1			1					1	
	Hex 1	00	01	10	11	00	01	10	11	00	01	10	11	00	01	10	11
Bits																	
4567	Y	0	1	2	3	4	5	6	7	8	9	A	В	С	D,	E	F
0000	0	NUL	DLE			SP	&	-									0
0001	1	SOH	SBA			,		1		а	j			A	J		1
0010	2	STX	EUA		SYN					Ь	k	s		в	к	s	2
0011	3	ЕТХ	IC							с	1	t		с	L	т	3
0100	4									d	m	u		D	м	υ	4
0101	5	РТ	NL							е	n	v		E	N	v	5
0110	6			ЕТВ						f	o	w	 	F	ο	w	6
0111	7			ESC	EOT					9	р	×		G	Р	x	7
1000	8									h	q	У	1	н	٩	Y	8
1001	9		ЕМ							;	r	z		1	R	z	9
1010	A					¢	!										
1011	В						\$,	#								
1100	с		DUP		RA	<	•	%	@				1				
1101	D		SF	ENQ	NAK	()	_	•								
1110	E		FM			+	;	>	=				1	1			
1111	F		ІТВ		SUB	1	-	?	"								

Notes:

- Character code assignments other than those shown within all outlined portions of this chart are undefined. If an
 undefined character code is programmed, the character that will be displayed is not specified. The character displayed
 by the 3277 or 3275 for a given undefined character code may be different for other devices. IBM reserves the right to
 change at any time the character displayed for an undefined character code.
- 2. Without the Dual Case Character Set (RPQ 8K0366), the 26 lowercase alphabet characters (within the dotted outline area) are converted to uppercase by the display station or printer and are displayed or printed as uppercase characters.
- 3. Unique characters displayed with the mono-case or dual case character generators installed are as follows:

EBCDIC Hex	Mono-Case*	Dual Case	Domestic (Ref only)
5B	\$	\$	\$
7B	#	é	#
7C	@	à	e
5A	1	è	!
7F	") ù	•••
4A	Ċ,	ç	¢

*Illustrated in code chart above.

- 4. NL, EM, DUP, and FM control characters are displayed or printed as 5, 9, *, and ; characters, respectively, except by the printer under format control, in which case NL and EM do not result in a character being printed.
- 5. Bits 0 and 1 are assigned for the following characters: attribute, write control (WCC), copy control (CCC), CU and device address, buffer address, sense, and status. These bits are assigned so that each character can be represented by a graphic character within the solid outlined portions of the chart. See Table 6.

		[0	0			C)1			1	0			1	1	
	Hex 1	00	01	10	11	00	01	10	11	00	01	10	11	00	01	10	11
Bits 4567	↓	0	1	2	3	4	5	6	7	8	9	A	в	с	D	E	F
0000	0	NUL	DLE			SP	&	-									0
0001	1	зон	SBA					1		а	j			A	J		1
0010	2	ѕтх	EUA		SYN		·			Ь	k	s		в	к	s	2
0011	3	ΕΤΧ	IC							с	I	t	1	с	L	Т	3
0100	4									d	m	u	 	D	м	υ	4
0101	5	РТ	NL							е	n	v	 	E	N	v	5
01 10	6			ЕТВ						f	o	w	 	F	0	w	6
0111	7			ESC	ЕОТ					9	р	×	 	G	Р	×	7
1000	8									h	q	Y	 	н	٩	Y	8
1001	9		ЕМ								r	z	 	1	R	z	9
1010	A	ļ				ö	Ŭ		:								
1011	В						Ü		×								
1100	с		DUP		RA	<	•	%	@								
1101	D		SF	ENQ	NAK	()	_	•								
1110	E		FM			+	;	>	=								
1111	F		ІТВ		SUB	1	-	7	Ä								

Table 3. German I/O Interface Code

Notes:

Character code assignments other than those shown within all outlined portions of this chart are undefined. If an
undefined character code is programmed, the character that will be displayed is not specified. The character displayed
by the 3277 or 3275 for a given undefined character code may be different for other devices. IBM reserves the right
to change at any time that character displayed for an undefined character code.

 Without the Dual Case Character Set (RPQ 8K0366), the 26 lowercase alphabet characters (within the dotted outlined area) are converted to uppercase by the display station or printer and are displayed or printed as uppercase characters.

3. Unique characters displayed with the mono-case or dual case character generator installed are as follows:

EBCDIC Hex	Mono-Case*	Dual Case	Domestic (Ref only)
5B	Ü	ü	\$
7B	Ä	Ä	#
7C	Ö	Ö	@
5A	l Ü	ü	1
7F	Ä	a	
4A	Ö	6	¢
6A	(Blank)	β	(Blank)

*Illustrated in code chart above.

- 4. NL, EM, DUP, and FM control characters are displayed or printed as 5, 9, *, and ; characters, respectively, except by the printer under format control, in which case NL and EM do not result in a character being printed.
- 5. Bits 0 and 1 are assigned for the following characters: attribute, write control (WCC), copy control (CCC), CU and device address, buffer address, sense, and status. These bits are assigned so that each character can be represented by a graphic character within the solid outlined portions of the chart. See Table 6.

Table 4. Italian I/O Int	erface Code
--------------------------	-------------

		[0	0			c)1			1	0			1	1		Bits 0,1
	Hex 1	00	01	10	11	00	01	10	11	00	01	10	11	00	01	10	11	4 -2,3
Bits 4567	ł	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F	-Hex
0000	0	NUL	DLE			SP	&	•									0	
0001	1	зон	SBA					1		а	j			А	J		1	
0010	2	STX	EUA		SYN					Ь	k	S		В	к	S	2	
0011	3	ETX	IC							с	I	t		С	L	т	3	
0100	4									d	m	u		D	м	υ	4	
0101	5	РТ	NL							е	n	v		E	N	v	5	
0110	6			ЕТВ						f	o	w		F	0	w	6	
0111	7			ESC	ЕОТ					g	р	x		G	Р	×	7	
1000	8									h	q	У	 	н	٥	Y	8	
1001	9		ЕМ								_r	z	 	1	R	z	9	
1010	A					¢	!		:									
1011	В					•	\$,	#									
1100	С		DUP		RA	<	*	%	@									
1101	D		SF	ENQ	NAK	()		•									
1110	E		FM			+	;	>	=									
1111	F		ІТВ		SUB	1	-	?	"									

Notes:

- Character code assignments other than those shown within all outlined portions of this chart are undefined. If an undefined character code is programmed, the character that will be displayed is not specified. The character displayed by the 3277 or 3275 for a given undefined character code may be different for other devices. IBM reserves the right to change at any time the character displayed for an undefined character code.
- 2. Without the Dual Case Character Set (RPQ 8K0366), the 26 lowercase alphabet characters (within the dotted outlined areas) are converted to uppercase by the display station or printer and are displayed or printed as uppercase characters.
- 3. Unique characters displayed with the mono-case or dual case character generator installed are as follows:

EBCDIC Hex	Mono-Case*	Dual Case	Domestic (Ref only)
5B	\$	\$	\$
7B	#	ļ į	#
7C	@	ò	@
5A	1	è	!
7F	"	ù	"
4A	¢	à	¢

*Illustrated in code chart above.

- 4. NL, EM, DUP, and FM control characters are displayed or printed as 5, 9, *, and ; characters, respectively, except by the printer under format control, in which case NL and EM do not result in a character being printed.
- 5. Bits 0 and 1 are assigned for the following characters: attribute, write control (WCC), copy control (CCC), CU and device address, buffer address, sense, and status. These bits are assigned so that each character can be represented by a graphic character within the solid outlined portions of the chart. See Table 6.

Table 5. U	nited	Kingdom	1/0	Interface	Code
------------	-------	---------	-----	-----------	------

		00		01			10			11							
Dies	Hex 1	00	01	10	11	00	01	10	11	00	01	10	11	00	01	10	11
Bits 4567	¥.	0	1	2	3	4	5	6	7	8	9	A	в	с	D	Е	F
0000	0	NUL	DLE			SP	&	-									0
0001	1	SOH	SBA					1		а	j	I [А	J		1
0010	2	STX	EUA		SYN					Ь	k	s		в	к	s	2
0011	3	ΕΤΧ	IC							C	I	t]	с	L	т	3
0100.	4									d	m	u	[[D	м	υ	4
0101	5	РТ	NL							e	n	v	 	E	N	v	5
0110	6			ЕТВ						l f	o	w	[[F	0	w	6
0111	7			ESC	ЕОТ					9	р	×	 	G	Р	×	7
1000	8									 _h	q	У		н	٩	Y	8
1001	9		EM							۱ ــــــــــــــــــــــــــــــــــــ	r	z	 	1	R	z	9
1010	A					\$!		:								
1011	в						£	,	#								
1100	с		DUP		RA	<	+	%	e								
1101	D		SF	ENQ	NAK	()	-									
1110	E		FM			+	;	>	=								
1111	F		ІТВ		SUB	1		?	"								

Notes:

- Character code assignments other than those shown within all outlined portions of this chart are undefined. If an
 undefined character code is programmed, the character that will be displayed is not specified. The character displayed
 by the 3277 or 3275 for a given undefined character code may be different for other devices. IBM reserves the right
 to change at any time the character displayed for an undefined character code.
- 2. Without the Dual Case Character Set (RPQ 8K0366), the 26 lowercase alphabetic characters (within the dotted outlined area) are converted to uppercase by the display station or printer and displayed or printed as uppercase characters.
- 3. NL, EM, DUP, and FM control characters are displayed or printed as 5, 9, *, and ; characters, respectively, except by the printer under format control, in which case NL and EM do not result in a character being printed.
- 4. Bits 0 and 1 are assigned for the following characters: attribute, write control (WCC), copy control (CCC), CU and device address, buffer address, sense, and status. These bits are assigned so that each character can be represented by a graphic character within the solid outlined areas of the chart. See Table 6.

В	its			E	Bits		
123	4567	Graphic	EBCDIC	123	4567	Graphic	EBCDIC
000	0001	а	81	101	0011	L	D3
000	0010	b	82	101	0100	M	D4
000	0011	С	83	101	0101	N	D5
000	0100	d	84	101	0110	0	D6
000	0101	е	85	101	0111	P	D7
000	0110	f	86	101	1000	Q	D8
000	0111	g	87	101	1001	R	D9
000	1000	ĥ	88	101	1010	I, ü, è	5A
000	1001	i	89	101	1011	\$	5B
001	0001	j	91	101	1100	*	5C
001	0010	, k	92	101	1101)	5D
001	0011	Î.	93	101	1110		5E
001	0100	' m	94	101	1111	, 	5E 5F
001	0101	n	95	110	0000	-	60
001	0110	0	96	110	0001	1	61
001	0111	p	97	110	0010	S	E2
001	1000	q	98	110	0011	T	E3
001	1001	r	99	110	0100	U	E4
010	0010	s	A2	110	0101	v	E5
010	0010	t	A3	110	0110	Ŵ	E6
010	0100	u	A3 A4	110	0110	×	E7
010	0101	v	A5	110	1000	Y	E8
010	0110	w	A5 A6	110	1000	Z	E8 E9
010	0110		A6 A7	110	1010		6A
010	1000	x	A8	110	1010	β	6B
010	1000	y z	A8 A9	110	1100	, %	6C
100	0000	SP	49 40				
100	0000	A SP	40 C1	110 110	1101 1110	- > ?	6D 6E
100	0010	B	C2			2	6F
100	0010	В С	C2 C3	110	1111 0000	? 0	
100	0100	D	C3 C4	111	0000	, ,	F0 F1
100		E	C4 C5	111	0010		
100	0101 0110	F	C6	111	0010	2 3	F2 F3
100		F G	C6 C7	111	0100	3 4	
100	0111	G H	C7 C8	111	0100	4 5	F4
	1000			111	0101		F5
100	1001	1	C9	111	0110	6 7	F6 F7
100	1010	¢, ç, à, ö	4A	111	1000	8	
100	1011	<	, 4B	111	1000	8 9	F8 F9
100	1100	ĺ	4C	111	1010		7A
100	1101	·	4D	111	1010	#, ¤, é, ì	7A 7B
100	1110	+	4E	111	1100	#, A, e, 1 @, Ö, à, ò	7B 7C
100	1111	ľ	4F	111			
101	0000	&	50	111	1101 1110		7D
101	0001	J	D1			= ", ù	7E
101	0010	K .	D2	111	1111	", u	7F

Note: When the 3271, 3272, or 3275 is equipped with the Dual Case Character Set (RPQ 8K0366), graphic characters are handled internally as 7-bit structured data, designated as bits 1 through 7 in the table. When these units receive attribute, AID, write control (WCC), or copy control (CCC) characters or CU and device addresses or buffer addresses, only the lower-order six bits (bits 2 through 7) are decoded. All characters transmitted to the program are assigned the appropriate EBCDIC code by the 3271, 3272, or 3275. Before transmission, bit 0 is assigned when sending graphic characters. Bits 0 and 1 are assigned when transmitting attribute, AID, write control (WCC), or copy control (CCC) characters; CU and device addresses or buffer addresses; or status and sense.

To use this table to determine the hex code sent for nongraphic characters:

1. Determine the value of bits 2 through 7.

2. Assign a value of 1 to bit 1.

3. Select this bit configuration in the table.

4. Find the hex code transmitted in the EBCDIC column to the right of the bit configuration.

IBM 3270 Information Display System Custom Feature Description Dual Case Character Set RPQ 8K0366

Order No. GA27-2758-0

Your views about this publication may help improve its usefulness; this form will be sent to the author's department for appropriate action. Using this form to request system assistance or additional publications will delay response, however. For more direct handling of such request, please contact your IBM representative or the IBM Branch Office serving your locality.

Possible topics for comment are:

Cut or Fold Along Line

1


Clarity	Accuracy	Completeness	Organization	Index	Figures	Examples	Legibility
---------	----------	--------------	--------------	-------	---------	----------	------------

What is y	our occupation?			
Number	of latest Technical Newsletter (if a	ny) concerning this publ	ication:	
Please in	dicate if you wish a reply.	🗆 Yes	D No	
If yes:	Name			
	Address			

Thank you for your cooperation. No postage stamp necessary if mailed in the U.S.A. (Elsewhere, an IBM office or representative will be happy to forward your comments.)

Your comments, please ...

Your comments, together with your answer to the questions on the back of this form will help us produce better publications for your use. Your comments will be carefully reviewed by the persons responsible for writing and publishing this material. All comments and suggestions become the property of IBM.

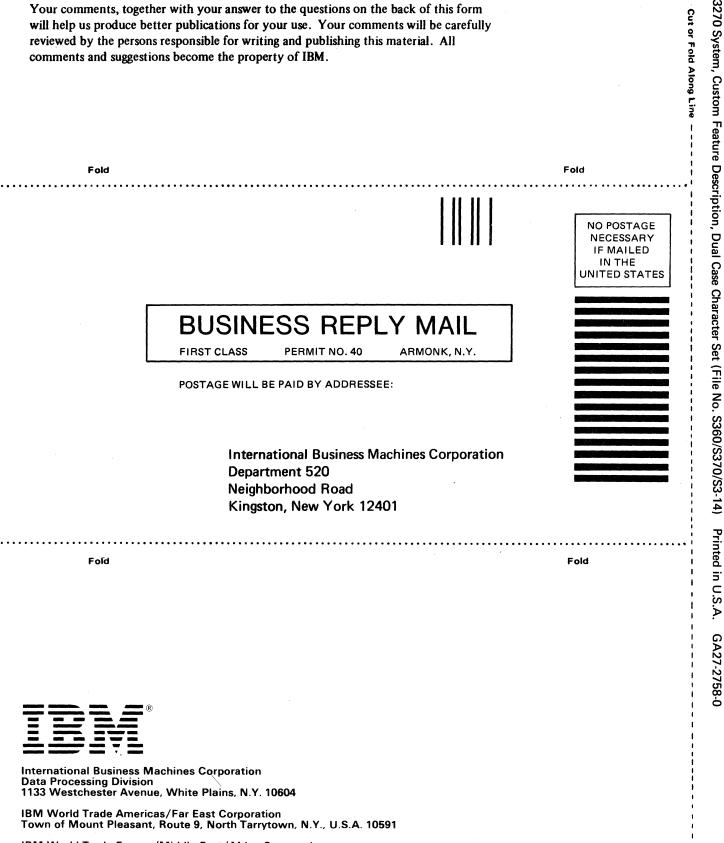

IBM World Trade Europe/Middle East/Africa Corporation 360 Hamilton Avenue, White Plains, N.Y., U.S.A. 10601

GA27-2758-0



International Business Machines Corporation Data Processing Division 1133 Westchester Avenue, White Plains, N.Y. 10604

IBM World Trade Americas/Far East Corporation Town of Mount Pleasant, Route 9, North Tarrytown, N.Y., U.S.A. 10591

IBM World Trade Europe/Middle East/Africa Corporation 360 Hamilton Avenue, White Plains, N.Y., U.S.A. 10601