

WINCHESTER PERIPHERAL CHASSIS

ISIS-II(W) SUPPLEMENT

Order Number: 121899-001

Copyright 1982, Intel Corporation
Intel Corporation, 3065 Bowers Avenue, Santa Clara, CA 95051

Additional copies of this manual or other Intel literature may be obtained from:

Literature Department
Intel Corporation
3065 Bowers Avenue
Santa Clara, CA 95051

The information in this document is subject to change without notice.

Intel Corporation makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Intel Corporation assumes no responsibility for any errors that may appear in this document. Intel Corporation makes no commitment to update nor to keep current the information contained in this document.

Intel Corporation assumes no responsibility for the use of any circuitry other than circuitry embodied in an Intel product. No other circuit patent licenses are implied.

Intel software products are copyrighted by and shall remain the property of Intel Corporation. Use, duplication or disclosure is subject to restrictions stated in Intel's software license, or as defined in ASPR 7-104.9(a)(9).

No part of this document may be copied or reproduced in any form or by any means without the prior written consent of Intel Corporation.

The following are trademarks of Intel Corporation and its affiliates and may be used only to identify Intel products:

BXP	Intel	Library Manager	Plug-A-Bubble
CREDIT	Int 1	MCS	PROMPT
i	Int ^e levision	Megachassis	RMX/80
ICE	Intellec	Micromainframe	System 2000
iCS	iOSP	Micromap	UPI
i	iRMX	Multibus	
iMMX	iSBC	Multichannel	
Insite	iSBX	Multimodule	

REV	REVISION HISTORY	DATE
-001	Original issue. Use ISIS-II(W) V4.2 operating system software.	3/82

This supplement describes the operation of a Winchester Peripheral Chassis on an Intellec Series II or Series III Microcomputer Development System, and provides operating instructions unique to the ISIS-II(W).

This supplement assumes that you:

- * Understand how to use an Intellec Microcomputer Development System
- * Have read either the Intellec Series III Microcomputer Development System Console Operating Instructions, 121609, (for a Series III development system), or the ISIS-II User's Guide, 9800306 (for a Series II development system).

Winchester Peripheral Chassis operation requires Version 4.2 or later of the ISIS-II(W) operating system software.

This supplement contains three chapters and three appendices:

- * Chapter 1 "Overview," provides an overview of the use of a Winchester Peripheral Chassis on a Series II or Series III Microcomputer Development System. It also lists the configurations supported by the ISIS-II(W) operating system and discusses the use of this supplement.
- * Chapter 2 "Initialization and Startup," describes the initialization, subsequent startup, and power off procedures involved in using the Winchester Peripheral Chassis.
- * Chapter 3 "Functionality," describes the ISIS-II(W) operating system commands and system calls that differ from the ISIS-II commands and calls.
- * Appendix A "ISIS-II(W) Error Messages," lists error codes and messages unique to ISIS-II(W).
- * Appendix B "ISIS-II(W) Confidence Test," describes the customer diagnostic test for the Winchester Peripheral Chassis.
- * Appendix C "Moving the Winchester Peripheral Chassis," describes the steps to follow when moving the Winchester Peripheral Chassis.

Related Publications

For more information on the Intellec Series III development system, refer to:

- * Intellec Series III Microcomputer Development System Console Operating Instructions, 121609
- * Intellec Series III Microcomputer Development System Programmer's Reference Manual, 121618

For more information on the Intellec Series II development system, refer to:

- * ISIS-II User's Guide, 9800306

Notational Conventions

The following conventions are used to show syntax in this supplement:

- | | |
|-------------|---|
| UPPERCASE | Information in uppercase must be entered as shown. It can be entered in uppercase or lowercase. |
| <lowercase> | Fields in lowercase indicate variable information. They are enclosed in angle brackets (< >) to show field limitation because some formats do not need a delimiting space or punctuation. The angle brackets should not be entered. |
| [] | Brackets indicate optional fields. |
| ... | Ellipses indicate that a field may be repeated. |
| { } | Braces indicate a choice. One of the items within the braces must be picked unless the field is also surrounded by brackets, in which case it is optional. |
| | A vertical bar indicates choice of syntactic elements. |
| punctuation | Punctuation other than ellipses, braces, and brackets must be entered as shown. |

	PAGE
CHAPTER 1 OVERVIEW	
Introduction.....	1-1
Configurations.....	1-1
About this supplement.....	1-2
CHAPTER 2 INITIALIZATION AND STARTUP	
Initialization.....	2-1
Subsequent Startup.....	2-2
Power Off Sequence.....	2-3
CHAPTER 3 FUNCTIONALITY	
SYSTEM COMMANDS	
DIR Command.....	3-2
FIXMAP Command.....	3-5
Mark.....	3-7
Free.....	3-8
List.....	3-9
Count.....	3-10
Record.....	3-11
Quit.....	3-11
Exit.....	3-12
FIXMAP Errors.....	3-12
FORMAT Command.....	3-15
HDCOPY Command.....	3-19
IDISK Command.....	3-20
SPINDN Command.....	3-24
VERS Command.....	3-25
SYSTEM CALLS	
SPATH Call.....	3-26
APPENDIX A- ISIS-II (W) ERROR MESSAGES	
APPENDIX B- ISIS-II (W) CONFIDENCE TEST	
APPENDIX C- MOVING THE WINCHESTER PERIPHERAL CHASSIS	
INDEX	

INTEL	TABLES
-------	--------

<u>Table</u>	<u>Title</u>	<u>Page</u>
1-1	ISIS-II(W) Supported Configurations	1-1
B-1	Summary of ISIS-II(W) Confidence Test	B-3

INTEL	ILLUSTRATIONS
-------	---------------

<u>Figure</u>	<u>Title</u>	<u>Page</u>
C-1	Front Panel	C-2
C-2	Locking Lever	C-2

INTRODUCTION

The primary function of the ISIS-II operating system is to coordinate the hardware and software elements essential to development of your programs. The ISIS-II(W) operating system is the version of ISIS designed to enable you to use a Winchester Peripheral Chassis as a mass storage device for your development system.

The Winchester Peripheral Chassis consists of a 35 megabyte disk drive and a power supply enclosed in a freestanding chassis. The Winchester disk drive is designed for use with Intellec Series II Microcomputer Development Systems equipped with an IPC-85 computer board or any Intellec Series III Microcomputer Development System.

CONFIGURATIONS

The ISIS-II(W) operating system resides on a flexible disk or a Winchester disk and can support up to six flexible disk drives and one Winchester disk drive. Table 1.1 describes the ISIS-II(W) supported configurations of disk drives.

Table 1-1.
ISIS-II(W) Supported Configurations

Configuration	Drive Numbers									
	0	1	2	3	4	5	6	7	8	9
W + D	W	W	W	W	D	D	(D)	(D)		
W + S	W	W	W	W	S	S	(S)	(S)		
W + IS	W	W	W	W	IS	*				
W + D + S	W	W	W	W	D	D	(D)	(D)	S	S
W + D + IS	W	W	W	W	D	D	(D)	(D)	IS	*
W + S + IS	W	W	W	W	S	S	(S)	(S)	IS	*
D	D	D	(D)	(D)						
S	S	S	(S)	(S)						
IS	IS	*								
D + S	D	D	(D)	(D)	S	S				
D + IS	D	D	(D)	(D)	IS	*				
S + IS	S	S	(S)	(S)	IS	*				

D = Double density flexible disk
IS = Integrated single density flexible disk
S = Single density flexible disk
W = Winchester disk
* = Not available
() = Optional drive with particular configuration

NOTE

When using ISIS-II(W) on a development system with the Winchester Peripheral Chassis turned off:

1. The ISIS-II(W) operating system delays approximately 1 1/2 minutes before displaying the ISIS prompt after RESET is pressed. This delay occurs because the ISIS-II(W) operating system is waiting for the Winchester Peripheral Chassis to respond to the drive initialization sequence.

2. The Winchester Peripheral Chassis retains the device numbers :F0: through :F3:. The drive containing the ISIS-II(W) operating system remains :F4:. Because the ISIS-II(W) operating system retains the :F0: default all commands must include the device number (:F4: through :F9:). Failure to include the device number in the command will result in an error message and necessitate resetting the system.

ABOUT THIS SUPPLEMENT

This supplement is designed for use with the ISIS-II User's Guide, (for Series II user's), and the Intellec Series III Microcomputer Development System Console Operating Instructions and the Intellec Series III Programmer's Reference Manual (for Series III users).

Only the initialization and startup procedures, system commands and calls, and error messages that have changed are discussed in this supplement. For information on ISIS-II material that has not changed, refer to the manuals listed in the preface under Related Publications.

This chapter describes the initialization and subsequent startup procedures required when using the Winchester Peripheral Chassis on a Series II or Series III development system.

CAUTION

Do not turn the Winchester Peripheral Chassis on or off unless the development system is on. Failure to follow this precaution may result in damage to the disk drive recording head or surface.

INITIALIZATION- WINCHESTER NON-SYSTEM DISK

When the Winchester disk has not yet been formatted as a system disk, the procedure that follows should be used. (This procedure initializes and builds a system disk on the Winchester disk drive (F0) before booting from the Winchester disk drive.)

NOTE

When using the Winchester Peripheral Chassis, the Winchester disk drives are identified as :F0:, :F1:, :F2:, and :F3;; the flexible disk drives become :F4: through :F9:.

1. Power on the Series II or Series III development system.
2. Power on the Winchester Peripheral Chassis and the flexible disk device that corresponds to drive 4.
3. Insert the ISIS-II(W) Operating Software flexible disk into drive 4.
4. Press RESET, then type F.
5. Type:

```
:F4:FORMAT :F0:SYSTEM.DSK S FROM 4
```

The following message will appear:

```
FORMATTING WILL DESTROY ALL FILES AND DATA ON DEVICE :F0:  
DO YOU WANT TO CONTINUE?
```

6. Type:

YES <CR> or Y <CR> to continue formatting. Type NO <CR> or N <CR> to abort the format command.

If YES <CR> or Y <CR> is typed the following display message will appear:

```
FORMATTING . . .
CHECK READ . . .
COPY SYSTEM FILES
ISIS.TO
ISIS.BIN
ISIS.CLI
.
.
.
SYSTEM.LIB
LINK
LINK.OVL
-
```

Note: This step requires approximately 10 minutes.

7. Press RESET or Interrupt 1 when formatting is completed.

The system will now boot from drive 0 and the following message display will appear:

```
ISIS-II(W) Vn.m
-
```

where

Vn.m is the version number of the ISIS-II(W) software and the dash indicates the system is ready to accept commands.

Drive 0 is now the system disk. The system will reboot from the Winchester disk drive whenever the Interrupt 1 button is pushed or whenever an ISIS abort occurs. The system will reboot from the flexible disk drive whenever the ISIS-II(W) operating system disk is in place and RESET is pressed.

SUBSEQUENT STARTUP- WINCHESTER SYSTEM DISK

Use the following procedure for the subsequent startup of any Series II or Series III development system with a formatted Winchester disk drive.

1. Power on the Intellec Series II or Series III.
2. Power on the Winchester Peripheral Chassis and the flexible disk device that corresponds to drive 4.

3. Insert the ISIS-II(W) Operating Software flexible disk into drive 4.

4. Press RESET.

The system will now boot from drive 4 and the following display will appear:

ISIS-II(W) Vn.m

-

where

Vn.m is the version number of the ISIS-II(W) software and the dash indicates the system is now ready to accept commands.

POWER OFF SEQUENCE

Use the following sequence when turning off a development system with an attached Winchester Peripheral Chassis:

1. Type SPINDN and wait for the Winchester drive to spin down.
2. Turn off the power to the Winchester Peripheral Chassis.
3. Turn off the power to the development system.

INTEL

Chapter 3
SYSTEM COMMANDS AND CALLS

This chapter discusses the following system commands and calls that have changed under the ISIS-II(W) version of ISIS:

System Commands

DIR
FIXMAP
FORMAT
HDCOPY
IDISK
SPINDN
VERS

System Calls

SPATH

DIR- Disk Directory Listing

The DIR command lists one or more directory entries of the disk in a specific drive and sends the list to the console output device or to a list file.

COMMAND SYNTAX

The syntax of the DIR command is:

```
DIR [FOR<file>][TO<listfile>][<switch>]
```

The positions of these fields are not fixed.

where

<file> is the file or group of files (specified with the wild card construction) whose directory entry is to be listed. If FOR<file> is omitted, the entire directory is listed. If <file> is not a wild card name (that is, does not contain * or ?) it is listed even if it has the invisible attribute.

<listfile> is the name of the file to contain the directory listing. If TO<listfile> is omitted, the listing is sent to the console output device.

<switch> can be one or more of the following:

- 0-9 Lists the directory of the disk in drives :F0: through :F9:. If this parameter is omitted, the directory of the disk in :F0: is listed. More than one drive number can be specified but only the directory for the rightmost drive is displayed. The drive number also overrides any device specification in FOR<file>.
- I Lists all files, including files with the invisible attribute set. If this parameter is omitted, only files with the invisible attribute not set are listed.
- F Gives fast output, listing only name.ext of files.
- O Prints directory in a single column format. The default is double column format.
- Z Prints the number of sectors presently used on the specified disk as a fraction of the number of available sectors.
- P Pauses after loading the command. The system displays the message:

```
LOAD SOURCE DISK, TYPE (CR)
```

After the disk is loaded and CR is pressed, the requested directory is output to the console output device. The system will then request that the system disk be replaced.

LOAD SYSTEM DISK, TYPE (CR)

DISCUSSION

The DIR default is the directory output in two columns with the following headings:

```
DIRECTORY of name.ext
NAME .EXT BLKS LENGTH ATTR      NAME .EXT BLKS LENGTH ATTR
```

XXX/XXXX

BLOCKS USED

where

name.ext is the label of the disk volume that is assigned by the FORMAT or IDISK command. It has the same syntax as a filename.

XXX/XXXX shows the number of blocks in use and the total number of blocks within the disk. A total of 44,520 blocks per logical device are available on the Winchester Peripheral Chassis and a total of 4,004 blocks are available on a double-density flexible disk. On a single-density flexible disk a total of 2,002 blocks are available.

EXAMPLES

Example 1.

The following example lists three files on a Winchester disk drive. The system files, which have the invisible attribute set, are not listed.

```
-DIR
DIRECTORY OF :F0:SYSTEM.DSK
NAME .EXT BLKS LENGTH ATTR      NAME .EXT BLKS LENGTH ATTR
PROGA .HEX 75 9263 W           SUMS           51 6357
SYSTEM.LIB 26 3128 WS
```

152

1691/44520 BLOCKS USED

Example 2.

This is the same as example 1 except a fast listing is requested.

```
-DIR F
DIRECTORY OF :F0:SYSTEM.DSK
PROGA .HEX      SUMS
SYSTEM.LIB
1691/44520 BLOCKS USED
```

Example 3.

This example requests a directory listing of all format files be sent to the line printer. The format files have the invisible attribute and ISIS.* is a wild card filename, so the I switch must be specified.

```
-DIR I FOR ISIS.* TO :LP:
```

Example 4.

A single-column fast directory listing of all files (including the invisible files) on the Winchester drive :F0: is requested by the following command:

```
-DIR O F I
DIRECTORY OF DISK :F0:SYSTEM.DSK
ISIS .DIR
ISIS .MAP
ISIS .TO
ISIS .LAB
ISIS .BAD
ISIS .BIN
ISIS .CLI
ISIS .OV0
HEXOBJ
ATTRIB
COPY
IDISK
SUBMIT
DIR
LIB
FIXMAP
RENAME
SPINDN
VERS
DELETE
FORMAT
LOCATE
EDIT
SYSTEM.LIB
PROGA .HEX
SUMS
OBJEX
LINK .OVL
LINK
1691/44520 BLOCKS USED
```

FIXMAP- Map Bad Sectors on Winchester Disk

The FIXMAP command records the presence of bad sectors on a Winchester disk. Flexible disks do not have a corresponding command.

COMMAND SYNTAX

The syntax of the FIXMAP command is:

```
FIXMAP<drive>
```

where

<drive> is the number of the Winchester disk on which the command is to operate. Unlike IDISK or FORMAT, FIXMAP requires a drive number, not a drive name, for <drive>.

DISCUSSION

Various hardware and software problems can cause a sector on a disk to become bad, or unreliable. The FORMAT and IDISK commands in ISIS recognize some bad sectors and record the numbers of those sectors to prevent their allocation to files. The following message reports that on drive 1, track 137, sector 106, is bad:

```
BAD SPOT AT LOGICAL ADDRESS (137,106), STATUS = 0040
```

When the FIXMAP command is entered, the console displays the message:

```
ISIS-II MAP FIXER Vx.y
```

where

x.y is the version number of the FIXMAP program.

FIXMAP commands

The operation of FIXMAP is directed by entering commands from the following list. FIXMAP prompts with an asterisk whenever it is ready to accept a command.

Mark<disk address> Change the known state of a sector from good to bad.

Free<disk address> Change the known state of a sector from bad to good.

List[<filename>] List all known bad sectors.

Count	List the number of known bad sectors.
Record	Record changes specified by Mark and Free.
Quit	Exit to ISIS without recording changes.
Exit	Record changes and exit to ISIS.

A command may be truncated at any point after its first character. For example, M, MA, or MAR may be used to stand for Mark.

When a command calls for a disk address, that address should have the form:

`<track><sector>[T]`

where

`<track>` is a number from 0 to 211 that specifies the track on which the bad sector exists.

`<sector>` is a number from 1 to 210 that specifies the number of the bad sector within the track.

[T] is an optional switch that indicates a group of 70 sectors should be processed.

The T switch is appropriate if the STATUS reported in the error message was 0001,000A, or 000E. (See ISIS-II(W) Error Messages in Appendix A.)

If the T switch is present, the `<sector>` number specifies a group of 70 sectors on `<track>`.

If `<sector>` is in the range 1-70, that group of sectors is processed.

If `<sector>` is in the range 71-140, that group of sectors is processed.

If `<sector>` is in the range 141-210, that group of sectors is processed.

After all of the sectors have been processed, the console displays the message: TRACK PROCESSED.

Track and sector numbers, and the T switch, if present, should be separated by spaces. The track and sector numbers should be those reported in the error message that identified the bad sector.

Mark Command. The Mark command changes the known state of a sector from good to bad.

The syntax of the Mark command is:

```
MARK<disk address>
```

where

<disk address> is the track-and-sector to be marked as bad.

If the T switch is present, a group of 70 sectors is marked as bad. A sector known to be bad is not allocated to any file.

If the sector specified in the Mark command is not associated with an existing file, the sector is marked as bad. If the T switch is not present, the system displays

```
SECTOR MARKED
```

If the T switch is present, no message appears when a single sector is marked; instead, when all 70 sectors have been processed, the system displays the message:

```
TRACK PROCESSED
```

If the sector belongs to an existing file, it cannot be marked as bad. Under any of the following conditions, the sector is not marked:

If the sector belongs to one of the required ISIS format files, the system displays:

```
(track,sector)REQUIRED BY ISIS-II
```

The system will be unreliable when the questionable disk is being used. Reformat the Winchester disk and copy the program and data files onto it.

If the sector is already known to be bad, it is redundant to mark the sector. The system displays:

```
(track,sector)ALREADY MARKED
```

If the sector belongs to a file other than a required format file, the system displays:

```
(track,sector)IN USE
```

If the name of the file is known, exit to ISIS and delete the file; then use FIXMAP to mark the bad sector. If the name of the file is not known, follow this procedure:

1. Exit to ISIS, using either the Quit or the Exit command (described below).

2. Give the command

```
COPY :Fm:*. * TO :Fn: Q C
```

where

Fm is the device name of the disk being fixed, and Fn is the name of another disk. Because of the Q switch, a list of copied files will be generated. (See the COPY description in the ISIS-II User's Guide or the Series III Console Operating Instructions.)

3a. If the copy is successful, disk :Fn: contains a usable copy of disk :Fm:. Use FIXMAP to get a list of bad sectors on :Fm;; then use IDISK or FORMAT to reformat :Fm:, and use FIXMAP to mark any bad sectors missed by the formatting command.

3b. If an error occurs while the disk is being copied, note the last filename displayed by COPY and the track and sector numbers that appear in the error message. Use the DELETE command to delete the bad file from :Fm;; then use FIXMAP to mark the bad sector. (See the DELETE description in the ISIS-II User's Guide or the Series III Console Operating Instructions.) If an error occurs and prevents you from deleting the file, repeat step 2. The file you attempted to delete will not be copied to the new disk. Then repeat step 3a.

EXAMPLES

Example 1.

The following example illustrates the use of the Mark command.

```
*MARK 27 83
SECTOR MARKED
*MARK 27 83
(27,83) ALREADY MARKED
```

Free Command. The Free command changes the known state of a sector from bad to good.

The syntax of the Free command is:

```
FREE<disk address>
```

where

<disk address> is the track-and-sector address of the sector to be freed for allocation.

If the T switch is present, a group of 70 sectors is freed. Use this command if a sector has been marked by mistake.

If the sector specified in the Free command is known to be bad, it is freed for allocation. If the T switch is not present, the system displays:

SECTOR FREED

If the T switch is present, no message appears when a single sector is freed; instead, when all 70 sectors have been processed, the system displays the message:

TRACK PROCESSED

Under either of the following conditions, the sector is not freed:

If a sector is already free for allocation, it is redundant to free the sector. The system displays:

(track,sector) ALREADY FREE

If the sector is not free because it is being used by a file, the system displays:

(track,sector) NOT A BAD SECTOR

A good sector that is part of an existing file should not be freed.

Example 2.

The following example illustrates the use of the Free command. Note that 8 5 T and 8 10 T identify the same group of 70 sectors, i.e., sectors 1-70 on track 8.

```
*FREE 180 51
  SECTOR FREED
*MARK 8 5 T
  TRACK PROCESSED
*FREE 8 10
  SECTOR FREED
*FREE 8 10 T
  (8,10) ALREADY FREE
  TRACK PROCESSED
```

List Command. The List command writes a list of all known bad sectors on the named file.

The syntax of the List command is:

```
LIST[<filename>]
```

where

[<filename>] is an optional parameter that specifies the listing file.

The listing file may be either an output device or a disk file. It may not reside on the disk being fixed. If no filename is given, the list is printed on the console.

The format of the output is one sector per line, with track and sector number separated by a comma. The list includes all sectors marked by FIXMAP, and bad sectors found by IDISK and FORMAT.

If there are no known bad sectors, the system displays:

```
NO BAD SECTORS
```

If output is directed to a device other than the console, the following message is displayed after the list is written to the device:

```
LIST WRITTEN
```

If the named file resides on the disk being fixed, the system displays:

```
CANNOT LIST TO TARGET DRIVE
```

Example 3.

The following example illustrates the use of the List command. The list is written first to the console, then to a disk file.

```
*LIST
 180,63
 182,115
 182,116
 182,117
*LIST DISK.FIL
LIST WRITTEN
```

Count Command. The Count command reports the number of known bad sectors on the disk.

The syntax of the Count command is:

```
COUNT
```

The command displays the following message on the console:

```
xxxxx BAD SECTORS
```

where

xxxxx is a decimal number, the number of known bad sectors on the disk. A sector that has not been marked, or a sector that has been marked and then freed, is not a known bad sector.

Example 4.

The following example illustrates the use of the Count command.

```
*LIST
 180,63
 182,115
 182,116
 182,117
*COUNT
 4 BAD SECTORS
```

Record Command. The Record command records the changes specified by Mark and Free.

The syntax of the Record command is:

```
RECORD
```

When this command is entered, the changes specified by Mark and Free are recorded on the disk.

When the Exit command is used to leave the FIXMAP program, the Record command is unnecessary. (Exit is described below.) When using the Quit command, the Record command is required; otherwise, none of the marking and freeing specified during the work session- or since the last Record command- will actually take effect.

When the recording is complete, the system displays:

```
CHANGES RECORDED
```

If no sector has been marked or freed during the work session- or since the last Record command- the system displays:

```
NO CHANGES
```

Example 5.

The following example illustrates the use of the Record command.

```
*RECORD
  CHANGES RECORDED
*RECORD
  NO CHANGES
```

Quit Command. The Quit command stops the operation of FIXMAP and returns control to ISIS.

The syntax of the Quit command is:

QUIT

If the Record command has not been given, changes specified by Mark and Free are not recorded on the disk.

Example 6.

The following example illustrates the use of the Quit command. Note that the freeing of sector 12,86 is not recorded on the disk; therefore, upon reentry to FIXMAP, that sector is still known as bad.

```
*FREE 12 86
SECTOR FREED
*QUIT
-FIXMAP 1
ISIS-II MAP FIXER Vx.y
*LIST
 12,86
```

Exit Command. The Exit command records changes and returns command to ISIS.

The syntax of the Exit command is:

EXIT

The Exit command is equivalent to the Record command followed by the Quit command: changes specified by Mark and Free are recorded on the disk, and control returns to ISIS.

Example 7.

The following example illustrates the use of the Exit command. (Compare this example with example 6, above.)

```
*FREE 12 86
SECTOR FREED
*EXIT
CHANGES RECORDED
-FIXMAP 1
ISIS-II MAP FIXER Vx.y
*LIST
NO BAD SECTORS
```

FIXMAP Errors

The following errors cause immediate termination of FIXMAP and returns control to ISIS. If execution terminates because of one of the errors, work done since the last Record command is not recorded on the disk.

If no Winchester disk drive is present, the system displays:

USE ON WINCHESTER SYSTEM ONLY

If no drive number is given in the FIXMAP command, or if an illegal switch is present, the system displays:

INVALID SYNTAX

If this message appears in response to a command within FIXMAP, the command was typed incorrectly. However, the incorrectly typed command will not terminate the session.

If the specified drive number is greater than 3, the system displays:

DRIVE NUMBER OUT OF RANGE

(In the maximum configuration of the system, the Winchester system disk drive is number 0.)

If the disk does not exist in the system, is not on-line, or is not properly connected, the system displays:

ERROR 30 USER PCXXXX

where

xxxx is a hexadecimal number.

Example 8.

The following example illustrates a typical work session with FIXMAP. Invoke the command and begin by getting a list of all bad sectors on the target drive (drive 1, as indicated in the FIXMAP command). The Count command reports eight bad sectors, and the Record command shows that no sectors have been marked or freed during this work session. Free the last 36 sectors on the track that contains track 170, sector 113; all sectors except the eight known bad sectors are reported already to be free. Mark track 170, sector 113 as a bad sector, and again list and count the number of bad sectors. This time, the record command reports that changes have been made. Free the remaining bad sector, list again, and return to the ISIS operating system.

```
-FIXMAP 1
ISIS-II MAP FIXER V1.0
*LIST
170,113
170,114
170,115
170,116
170,117
170,118
```

170,119
170,120
*COUNT
8 BAD SECTORS
*RECORD
NO CHANGES
*FREE 170 113 T
(170,109) ALREADY FREE
(170,110) ALREADY FREE
(170,111) ALREADY FREE
(170,112) ALREADY FREE
(170,121) ALREADY FREE
(170,122) ALREADY FREE
(170,123) ALREADY FREE
(170,124) ALREADY FREE
(170,125) ALREADY FREE
(170,126) ALREADY FREE
(170,127) ALREADY FREE
(170,128) ALREADY FREE
(170,129) ALREADY FREE
(170,130) ALREADY FREE
(170,131) ALREADY FREE
(170,132) ALREADY FREE
(170,133) ALREADY FREE
(170,134) ALREADY FREE
(170,135) ALREADY FREE
(170,136) ALREADY FREE
(170,137) ALREADY FREE
(170,138) ALREADY FREE
(170,139) ALREADY FREE
(170,140) ALREADY FREE
(170,141) ALREADY FREE
(170,142) ALREADY FREE
(170,143) ALREADY FREE
(170,144) ALREADY FREE
TRACK PROCESSED
*MARK 170,113
SECTOR MARKED
*LIST
170,113
*COUNT
1 BAD SECTOR
*RECORD
CHANGES RECORDED
*FREE 170,113
SECTOR FREE
*LIST
NO BAD SECTORS
*EXIT
CHANGES RECORDED

FORMAT- Disk Formatting Command

The FORMAT command formats a new disk for use with ISIS.

COMMAND SYNTAX

The syntax of the FORMAT command is:

```
FORMAT <device><label>[<switches>]
```

where

<device> is the name of the drive that contains the disk to be formatted. If :F0: is specified without a FROM switch, or if :F0: and FROM 0 are specified, then an error will result.

<label> is the name to be given to the disk. The syntax of <label> is the same as for filename, with up to six characters for name and three characters for extension.

<device><label> must be entered with no intervening space or comma, as in :F1:MYDISK. At least one space must be entered before and after <device><label>.

<switches> are one or more of the following:

A copies all files to the specified drive. The new disk contains all the files that were on the source disk. If the source disk is a system disk, the new disk becomes a system disk. (The S switch functions differently under FORMAT than it does under IDISK.)

FROM n specifies the disk drive that contains the disk files needed for formatting. n is an integer 0-9, specifying drives :F0: through :F9:. If the FROM n switch is not specified the default is to :F0:. If n is not a valid integer 0-9, the following error message appears on the :CO: device:

```
XX,UNRECOGNIZED SWITCH
```

where

XX is the invalid integer.

DISCUSSION

ISIS disks are of two types: system and non-system. A disk is formatted as a system or non-system disk depending on the type of source disk used and on the switches specified in the FORMAT command.

When a system disk is formatted, FORMAT copies other files in

addition to the basic format files. When a non-system disk is formatted, however, FORMAT copies only the basic format files: ISIS.DIR, ISIS.MAP, ISIS.T0, ISIS.LAB, and ISIS.BAD. Any other files that are to be on the new disk must be copied with the COPY command. (See the COPY description in the ISIS-II User's Guide or the Series III Console Operating Instructions.)

Before formatting a Winchester disk, FORMAT will print the following message:

```
FORMATTING WILL DESTROY ALL FILES AND DATA ON DISK DRIVE :F0:
DO YOU WANT TO CONTINUE? (Y/N)
```

If an error occurs during the formatting of the Winchester disk, the following message will be displayed:

```
FORMAT ERROR: XX
```

where

XX is a Winchester disk drive error number. (See ISIS-II(W) Error Messages in Appendix A.)

If <device> is :F0: and :F0: is a Winchester disk drive and the S switch is not specified, the following error message appears on the :C0: device:

```
NON-SYSTEM WINCHESTER DRIVE 0 NOT ALLOWED
```

:F0: must be formatted as a system disk.

When the FORMAT Command is used to format a Winchester disk it reads defective track information supplied and stored on the disk. If FORMAT cannot read this information, the following error message appears:

```
CANNOT READ DEFECTIVE TRACK INFORMATION
```

When this message appears contact an Intel Customer Engineer.

When FORMAT is used with a Winchester disk, it verifies each sector. If FORMAT cannot read a sector reserved for an ISIS file, the message

```
FATAL BAD SPOT AT LOGICAL ADDRESS (ttt,sss),STATUS=nnnn
```

appears on the console, and ISIS.CLI is reloaded. ttt is the logical track address (in decimal); sss is the sector track address (in decimal); and nnnn is the Winchester disk error status (in hexadecimal). If the unreadable sector does not correspond to an ISIS file, then the message

```
BAD SPOT AT LOGICAL ADDRESS (ttt,sss),STATUS=nnnn
```

is displayed. ISIS allocates Winchester disk sectors serially,

thus if no mechanism existed to "skip over" bad hard disk sectors, the remaining sectors would remain unallocated. Instead, ISIS checks Winchester disk sectors for irregularities during FORMAT and IDISK operations. If a bad sector is encountered, it is allocated to ISIS.BAD and disk formatting continues.

EXAMPLES

Example 1.

This example shows the creation of a duplicate system disk in :F4:. This example does not copy any non-system files on that disk.

```
-FORMAT :F4:IS00AS.SYS S
COPYING SYSTEM FILES
ISIS.TO
ISIS.BIN
ISIS.CLI
ISIS.OV0
HEXOBJ
ATTRIB
COPY
IDISK
SUBMIT
DIR
LIB
FIXMAP
VERS
RENAME
SPINDN
FORMAT
DELETE
EDIT
LOCATE
OBJHEX
SYSTEM.LIB
LINK
LINK.OVL
-
```

Example 2.

This example formats a basic non-system disk on drive :F1:, giving it the name LIB.V1. System files are not copied.

-FORMAT :F1:LIB.V1
NON-SYSTEM DISK
-

Example 3.

This example formats a Winchester disk in drive :F0: as a system disk; the files with the system or format attribute set are copied from a system disk in :F4:.

```
-:F4:FORMAT :F0:SYSTEM.DSK S FROM 4
FORMATTING WILL DESTROY ALL FILES AND DATA ON DRIVE :F0:
DO YOU WANT TO CONTINUE? (Y/N)
  FORMATTING . . .
  CHECK READ . . .
COPYING SYSTEM FILES
ISIS.TO
ISIS.BIN
ISIS.CLI
.
.
.
SYSTEM.LIB
LINK
LINK.OVL
-
```

HDCOPY

ISIS-II(W) does not support the command HDCOPY. This command is not applicable since the Winchester Peripheral Chassis does not contain removable platters.

IDISK- Disk Formatting Command

The IDISK Command formats a new disk for use with ISIS.

COMMAND SYNTAX

The syntax of the IDISK command is:

```
IDISK<device><label>[<switch>]
```

where

<device> is the name of the drive that contains the disk to be formatted. If :F0: is specified without a FROM switch, the system assumes a single disk system and prompts for disk swaps as needed. Disk swapping is not required if any drive other than :F0: is specified. :F0: must be formatted as a system disk.

If <device> is :F0: and :F0: is a Winchester disk and the S switch is not specified, the following error message appears on the :CO: device:

```
NON-SYSTEM WINCHESTER DRIVE 0 NOT ALLOWED
```

<label> is the name to be given to the disk. The syntax of label is the same as for filename, with up to six characters for name and three for extension.

<device><label> must be entered with no intervening space or comma, as in :F1:MYDISK. At least one space must be entered before and after <device><label>.

<switches> are one or more of the following:

S specifies that the new disk is formatted as a basic system disk. If S is not specified, the disk is formatted as a basic non-system disk.

P specifies that IDISK operates in single drive mode, prompts for output and system disks, and pauses to display the prompt messages and to allow changes of disks.

FROM n specifies the disk drive that contains the disk files needed for formatting. n is an integer 0-9, that specifies drives :F0: through :F9:. If the FROM n switch is not specified, the default is to :F0:. If n is not a valid integer 0-9, the following error message appears on the :CO: device:

```
XX,UNRECOGNIZED SWITCH
```

where

XX is the last digit or digits of the invalid integer.

DISCUSSION

A blank disk must be formatted before it can be used by ISIS. ISIS disks are of two types: system and non-system. The type of disk to be formatted is specified by the presence or absence of a switch with the command.

IDISK copies only the files needed for a basic disk (whether system or non-system). A basic disk contains only the files needed to format the disk: ISIS.DIR, ISIS.MAP, ISIS.T0, ISIS.LAB and ISIS.BAD. For a basic system disk, IDISK copies two additional files: ISIS.BIN and ISIS.CLI.

If any additional files such as command files are to be on the new disk, they must be copied with the COPY command. (See the COPY description in the ISIS-II User's Guide or the Series III Console Operating Instructions.)

Before formatting a Winchester disk, IDISK will print the following message:

```
FORMATTING WILL DESTROY ALL FILES AND DATA ON DISK DRIVE :F0:  
DO YOU WANT TO CONTINUE (Y/N)
```

If an error occurs during the formatting of the Winchester disk, the following message will be displayed:

```
FORMAT ERROR: XX
```

where

XX is a Winchester disk error number. (See ISIS-II(W) Error Messages in Appendix A.)

IDISK can be used on single drive and multiple drive disk systems. On single drive systems, the user is prompted to remove the system disk and to insert the blank disk. When formatting is completed, the user is prompted to insert the original system disk. In systems with only 32K of RAM, two swaps of disks are required.

The IDISK Command reads defective track information supplied and stored on the Winchester disk. If IDISK cannot read this information, the following error message appears:

```
CANNOT READ DEFECTIVE TRACK INFORMATION
```

When this message appears contact an Intel Customer Engineer.

When IDISK is used with a Winchester disk, IDISK verifies each sector. If IDISK cannot read a sector reserved for an ISIS file,

then the message

```
FATAL BAD SPOT AT LOGICAL ADDRESS(ttt,sss),STATUS=nnnn
```

appears on the console, and ISIS.CLI is reloaded. ttt is the logical track address (in decimal); sss is the logical sector address (in decimal); and nnnn is the Winchester disk error status (in hexadecimal). If the unreadable sector does not correspond to an ISIS file, then the message

```
BAD SPOT AT LOGICAL ADDRESS(ttt,sss),STATUS=nnnn
```

is displayed. ISIS allocates Winchester disk sectors serially; thus, if no mechanism existed to "skip over" bad disk sectors, the remaining sectors would remain unallocated and unusable. Instead, ISIS checks Winchester disk sectors for irregularities during FORMAT and IDISK operations. If a bad sector is encountered, it is allocated to ISIS.BAD and hard disk formatting continues.

EXAMPLES

Example 1.

This example formats a flexible disk in :F4: as a basic system disk and gives the disk the name NSYS.V1. The COPY command copies all other non-format files from the disk in drive :F0: to the disk in drive :F4:.

```
-IDISK :F4:NSYS.V1 S
SYSTEM DISK
-COPY *.* TO :F4: C B
COPIED :F0:ASM80 TO :F4:ASM80
COPIED :F0:ASM80.OV0 TO :F4:ASM80.OV0
COPIED :F0:ASM80.OV1 TO :F4:ASM80.OV1
.
.
.
COPIED :F0:FPAL.LIB TO :F4:FPAL.LIB
COPIED :F0:PLM80.LIB TO :F4:PLM80.LIB
COPIED :F0:SYSTEM.LIB TO :F4:SYSTEM.LIB
-
```

Example 2

This example formats a Winchester disk in drive :F0: as a basic system disk; the basic files needed to format the disk are copied from a system disk in drive :F4:. The COPY command should then be used to copy other files onto the newly formatted disk, as in the previous example.

-:F4:IDISK :F0:SYSTEM.DSK S FROM 4
FORMATTING WILL DESTROY ALL FILES AND DATA ON DRIVE :F0:
DO YOU WANT TO CONTINUE? (Y/N)
SYSTEM DISK
 FORMATTING . . .
 CHECK READ . . .
-

SPINDN- Spindown Winchester Peripheral Chassis

The SPINDN command positions the drive head in a safe area and then brings the spindle motor to a stop.

COMMAND SYNTAX

The syntax of the SPINDN command is:

SPINDN

DISCUSSION

The SPINDN command moves the drive head to the landing zone and then brakes the spindle motor to a halt.

This command should always be used before turning off power to the Winchester Peripheral Chassis.

EXAMPLE

Example 1.

The following example demonstrates the usage of the SPINDN command:

```
-SPINDN  
SYSTEM LOGGED OFF
```

VERS- Display Version Number

The VERS command lists the version number of the ISIS operating system commands.

COMMAND SYNTAX

The syntax of the VERS command is:

```
VERS <command>
```

where

<command> is one of the ISIS command.

DISCUSSION

The VERS command identifies the version number of the different versions of the ISIS operating system command. Each version only works correctly with the corresponding version of ISIS.

ISIS-II(W) operates with any command that displays a version number followed by W.

EXAMPLE

Example 1.

The following example displays the version of the IDISK command:

```
-VERS IDISK  
V4.2W
```

SPATH- Obtain File Information

The SPATH call allows your program to obtain information relating to a specified file. The information returned by this call includes the device number, file name and extension, device type, and if a disk file, the drive type.

COMMAND SYNTAX

A parameter list of three variables must be passed with the SPATH call:

1. The address of an ASCII string that contains the name of the file for which information is requested. The string can contain leading spaces but cannot contain embedded spaces. The string must be terminated by a character other than a letter, digit, colon (:), or period (.). A space can be used.
2. The address of a 12-byte memory location in which the system will return the information. After the call is completed, the buffer will contain the following information:

Byte 0- Device number

Bytes 1 through 6- file name

Bytes 7 through 9- file name extension

Byte 10- Device type

Byte 11- Device type

The possible values for device number are:

- 0- disk drive 0
- 1- disk drive 1
- 2- disk drive 2
- 3- disk drive 3
- 4- disk drive 4
- 5- disk drive 5
- 6- teletype input
- 7- teletype output
- 8- CRT input
- 9- CRT output
- 10- user console input
- 11- user console output
- 12- teletype paper tape reader
- 13- high speed paper tape reader
- 14- user reader 1
- 15- user reader 2

- 16- teletype paper tape punch (teletype)
- 17- high speed paper tape punch
- 18- user punch 1
- 19- user punch 2
- 20- line printer
- 21- user list 1
- 22- byte bucket (a pseudo input/output device)
- 23- console input
- 24- console output
- 25- disk drive 6
- 26- disk drive 7
- 27- disk drive 8
- 28- disk drive 9

The file name and extension are the ISIS file name.

The device type specifies the type of peripheral with which the file is associated. The possible values for this field are:

- 0- sequential input device
- 1- sequential output device
- 2- sequential input/output device
- 3- random access input/output device

The drive type field specifies the type of drive controller if the device type field is 3. If the device type is anything except 3, the drive type is undefined. The possible values for a device type of 3 are:

- 0- controller not present
- 1- two-board double density
- 2- two-board single density
- 3- integrated single density
- 9- Winchester disk device

3. The address of a memory location for the return of a nonfatal error number. The nonfatal error numbers issued by the SPATH call are: 4, 5, 23, and 28.

EXAMPLES

1. PL/M SPATH Call Example:

```

SPATH:
  PROCEDURE (FILE,BUFFER,STATUS)EXTERNAL;
  DECLARE (FILE,BUFFER,STATUS)ADDRESS;
  END SPATH;
.
.
.
DECLARE FILENAM(15)BYTE;
DECLARE BUF$IN(12)BYTE;
DECLARE STATUS ADDRESS;

```

```

.
.
CALL SPATH (.FILENAM,.BUF$IN,.STATUS);
IF STATUS < > 0 THEN...
.
.
.

```

2. Assembly Language SPATH Call Example:

```

SPATH      EXTRN      ISIS      ;LINK TO ISIS ENTRY POINT
           EQU        14        ;SYSTEM CALL IDENTIFIER
;
           MVI        C,SPATH   ;LOAD IDENTIFIER
           LXI        D,SBLK    ;LOAD PARAM ADDR
           CALL       ISIS
           LDA        SSTAT     ;TEST ERROR STATUS
           ORA        A
           JNZ       EXCEPT   ;BRANCH TO EXCEPTION
                                           ;ROUTINE
.
.
.
SBLK                                ;PARAMETER BLOCK FOR
                                   ;SPATH
           DW        FILEN     ;POINTER TO FILE NAME
           DW        BUFIN     ;POINTER TO BUFFER
           DW        SSTAT     ;POINTER TO STATUS
;
FILEN:    DS        15        ;FILE NAME FIELD
BUFIN:    DS        12        ;BUFFER FOR DATA
SSTAT:    DS        2        ;STATUS (RETURNED)
;

```

INTEL

Appendix A
ISIS-II(W) ERROR MESSAGES

ISIS-II(W) error messages are identical to ISIS-II error messages with the following exceptions:

When error number 24 occurs, the following message is output to the console:

```
STATUS = 00nn  
D = x T = yyy S = zzz
```

where

x represents the drive number, yyy represents the track address, zzz represents the sector address, and where nn has the following meaning for the Winchester disk drive:

```
01 Cylinder address miscompare  
02 Seek error  
03 Controller RAM error  
04 Controller ROM error  
05 Seek in progress error  
06 Illegal track format  
07 End of media detected during transfer  
08 Illegal sector size detected  
09 Diagnostic fault  
0A No index pulse detected  
0B Invalid controller command issued  
0C Sector not found  
0D Invalid disk address issued  
0E Drive not ready  
0F Attempt to write to write protected unit  
0F Seek error  
20 Data field ECC error  
40 ID field ECC error  
80 Drive fault
```


INTEL

Appendix B
ISIS-II (W) CONFIDENCE TEST

The SERIES II/III CUSTOMER WINCHESTER DIAGNOSTIC flexible disk provides the Winchester disk drive user with a convenient user confidence test. This confidence test is designed to check a variety of hardware related functions on the Winchester disk drive.

This test should be performed whenever a disk malfunction is suspected or whenever the Winchester Peripheral Chassis has been physically relocated.

CAUTION

Do not turn the Winchester Peripheral Chassis on or off unless the development system is on. Failure to follow this precaution may result in damage to the the disk drive recording head or surface.

To run the confidence test:

1. Power on the Intellec Series II or Series III development system.
2. Power on the Winchester Peripheral Chassis and the flexible disk drive that corresponds to drive 4.
3. Insert the SERIES II/III CUSTOMER WINCHESTER DIAGNOSTIC flexible disk into drive 4.
4. Press RESET, then type F.

The system will now boot from drive 4 and the following display will appear:

```
ISIS-II(W) Vn.m
```

```
-
```

where

Vn.m is the version number of the ISIS-II(W) software and the dash indicates the system is now ready to accept commands.

5. Type :F4:STFS <CR>

The following display will appear:

ISIS-II STFS, V1.1

*

6. Type INI:F4:SIIWIN <CR>

The following display will appear:

```
WINCHESTER CONFIDENCE TEST
      FOR ISIS-II(W) PERIPHERAL CHASSIS V 1.0
PASS
MIO/VERSION 1.07
USER RETURN
*
```

7. Type T to begin the test.

The following display will appear as each component of the test is run:

```
TEST 000BH          ****IGNORED****
TEST 000EH          ****IGNORED****
TEST 0010H          ****IGNORED****
0000H RESET TEST   "PASSED"
0001H TRANSFER STATUS "PASSED"
0002H BUFFER I/O TEST "PASSED"
0003H ROM CHECKSUM TEST "PASSED"
0004H RAM WINDOW TEST "PASSED"
0005H RAM ADDRESS TEST "PASSED"
0006H FORMAT TEST   "PASSED"
0007H MICRO-DIAGNOSTICS "PASSED"
0008H SEEK/VERIFY TEST "PASSED"
0009H WORST CASE SEEK TEST "PASSED"
000AH WRITE/READ TEST "PASSED"
000CH PLATTER/HEAD TEST "PASSED"
000DH SECTOR SELECTION "PASSED"
000FH TRACK VERIFY  "PASSED"
0011H ALTERNATE TRACK TEST "PASSED"
0012H ZERO FILL TEST  "PASSED"
0013H DATA OVERRUN TEST "PASSED"
0014H AUTO-INCREMENT TEST "PASSED"
*
```

After the confidence test is completed, the status of each test should read "PASSED" (except for 000BH, 000EH, and 0010H, all of which should read "****IGNORED****").

If the status of any test is reported as "FAILED", contact an Intel Customer Engineer.

8. Type EXIT to return to the ISIS operating system.

Table B-1.
Summary of ISIS-II(W) Confidence Test

TEST NO.	TEST NAME	TEST DESCRIPTION
000H	RESET	Restarts the controller and initializes drive specified at initialization.
0001H	TRANSFER STATUS	Checks communication lines to and from the controller by enabling the transfer status function.
0002H	BUFFER I/O	Verifies the transfer of data to and from the controller.
0003H	ROM CHECKSUM	Checks the controller ROM by running the ROM on-board checksum test.
0004H	RAM WINDOW	Checks RAM data integrity by walking ones and then zeros through all memory locations.
0005H	RAM ADDRESS	Checks that all RAM address lines are working and that each bit of RAM can be turned on or off.
0006H	FORMAT	Formats and verifies diagnostic tracks on the drive specified at initialization.
0007H	MICRO-DIAGNOSTICS	Checks controller functions by executing the controller on-board micro-diagnostic.
0008H	SEEK/VERIFY	Checks seek and verify functions by verifying a sector on the last track and then verifying a sector on the first track.
0009H	WORST CASE SEEK	Checks seek and verify functions by seeking from track 0 to track 0+1, track 0 to track 0+2, etc., until seeking is performed from track 0 to all other tracks.
000AH	WRITE/READ	Checks the controller write and read functions by writing to and reading from diagnostic tracks.
000BH	DRIVE SELECTION	This test is reserved for future system use.

000CH	PLATTER/HEAD	Verifies that each platter and head can be accessed individually.
000DH	SECTOR SELECTION	Checks that each sector of a track can be addressed.
000EH	OVERLAP	This test is reserved for future system use.
00FH	TRACK VERIFY	Verifies that a predetermined number of tracks is available on the drive.
0010H	PLATTER VERIFY	This test is reserved for future system use.
0011H	ALTERNATE TRACK	Checks alternate track capability by using the first and last diagnostic tracks.
0012H	ZERO FILL	Checks the controller's zero fill capability by verifying that partial sectors are zero-filled.
0013H	DATA OVERRUN	Checks the area immediately following a partial sector read to determine if extra (overrun) data is being read.
0014H	AUTO-INCREMENT	Verifies the controller's ability to increment to the next sector, head, or cylinder.

CAUTION

Moving the Winchester Peripheral Chassis without locking the drive head into position may result in damage to the drive head or to the recording surface. Always lock the head before moving the Winchester Peripheral Chassis.

Before moving the Winchester Peripheral Chassis:

1. Type SPINDN.
2. Turn off the power to the Winchester Peripheral Chassis and wait for the drive to stop.
3. Loosen the front panel by pulling out the fasteners located in each corner, and then remove the panel. (See figure C-1.)
4. Move the locking lever to the right, then up and to the left, to lock the head into position. (See figure C-2.)
5. Move the Winchester Peripheral Chassis to the desired location.
6. Move the locking lever to the right, and then down, to unlock the drive head.
7. Replace the front panel and push in the four fasteners.
8. Turn on the power to the the Winchester Peripheral Chassis.
9. Run the ISIS-II(W) Confidence Test. (See Appendix B.)

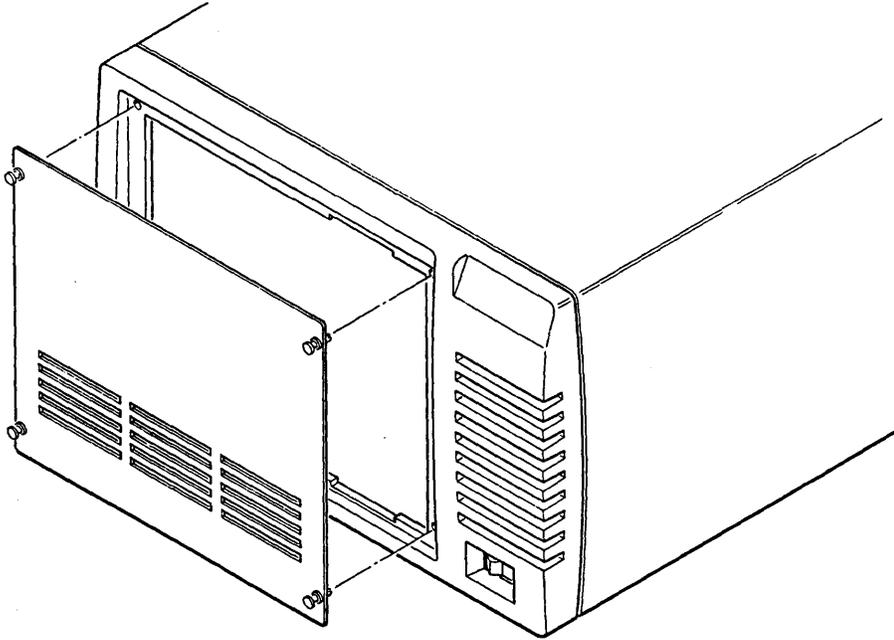


Figure C-1.
Front Panel

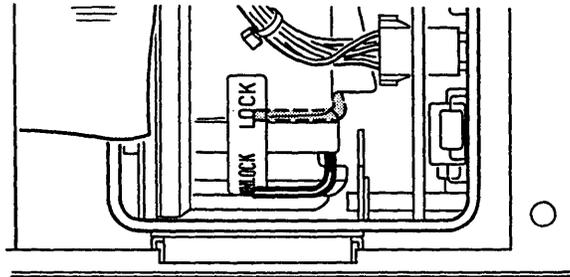


Figure C-2.
Locking Lever

Ø-9 switch of FORMAT command, 3-2

A switch of FORMAT command, 3-15

calls, system

SPATH, 3-26

commands

DIR, 3-2

FIXMAP, 3-5

FORMAT, 3-15

HDCOPY, 3-19

IDISK, 3-20

SPINDN, 3-24

VERS, 3-25

confidence test, B-1

configurations, 1-1

COUNT(FIXMAP), 3-10

device number, 1-2

DIR command, 3-2

F switch, 3-2

FOR parameter, 3-2

I switch, 3-2

O switch, 3-2

P switch, 3-2

TO parameter, 3-2

Z switch, 3-2

directory

listing command, 3-2

disk

confidence test, B-1

directory listing command, 3-2

drives, 1-1

formatting, 2-1, 3-5

initialization sequence, 2-1

ERRORS(FIXMAP), 3-12

error messages

FIXMAP, 3-5, 3-12, 3-13

FORMAT, 3-15, 3-16

IDISK, 3-20 thru 3-22

ISIS-II(W), A-1

EXIT(FIXMAP), 3-12

F switch of DIR command, 3-2
 FIXMAP
 commands, 3-5
 Count, 3-10
 Exit, 3-12
 Free, 3-8
 List, 3-9
 Mark, 3-7
 Quit, 3-11
 Record, 3-11
 Errors, 3-12
 FOR parameter of DIR command, 3-2
 FORMAT command, 3-15
 A switch, 3-15
 FROM parameter, 3-15
 in initialization sequence, 2-1
 S switch, 3-15
 formatting nonsystem disks, 3-15
 formatting system disks, 3-15
 in initialization sequence, 2-1
 FREE(FIXMAP), 3-8
 FROM parameter
 of FORMAT command, 3-15
 of IDISK command, 3-20

 hardware configurations, 1-1

 I switch of DIR command, 3-2
 IDISK command, 3-20
 FROM parameter, 3-20
 P switch, 3-20
 S switch, 3-20
 initialization of confidence test, B-1
 initializing (formatting) disk
 Winchester nonsystem disk, 2-1
 Winchester system disk, 2-1
 introduction, 1-1
 ISIS-II(W) commands
 DIR, 3-2
 FIXMAP, 3-5
 FORMAT, 3-15
 HDCOPY, 3-19
 IDISK, 3-20
 SPINDN, 3-24
 VERS, 3-25
 ISIS-II(W) calls
 SPATH, 3-26

 LIST(FIXMAP), 3-9
 listing directory, command, 3-2
 locking lever, C-1

 MARK(FIXMAP), 3-7

 nonsystem disk formatting, 3-15

O switch of DIR command, 3-2
operating system, 1-1

P switch
of DIR command, 3-2
of IDISK command, 3-20
pause switch
DIR command, 3-2
power off sequence, 2-3

QUIT(FIXMAP), 3-11

RECORD(FIXMAP), 3-11

S switch
of FORMAT command, 3-15
of IDISK command, 3-20
SPATH, 3-26
device numbers, 3-26
drive type fields, 3-27
error numbers, 3-27
SPINDN
command, 3-24
moving Winchester Peripheral Chassis, C-1
power off sequence, 2-3
starting the system, 2-1
subsequent startup, 2-2
System Calls, 3-1
System Commands, 3-1

TO parameter of DIR command, 3-2

VERS command, 3-25

Winchester Peripheral Chassis
confidence test, B-1, C-1
device number, 1-1
front panel, C-1, C-2
locking lever, C-1
moving, C-1
use of ISIS-II(W) without the Winchester drive, 1-2

Z switch of DIR command, 3-2



REQUEST FOR READER'S COMMENTS

Intel's Technical Publications Departments attempt to provide publications that meet the needs of all Intel product users. This form lets you participate directly in the publication process. Your comments will help us correct and improve our publications. Please take a few minutes to respond.

Please restrict your comments to the usability, accuracy, readability, organization, and completeness of this publication. If you have any comments on the product that this publication describes, please contact your Intel representative. If you wish to order publications, contact the Intel Literature Department (see page ii of this manual).

1. Please describe any errors you found in this publication (include page number).

2. Does the publication cover the information you expected or required? Please make suggestions for improvement.

3. Is this the right type of publication for your needs? Is it at the right level? What other types of publications are needed?

4. Did you have any difficulty understanding descriptions or wording? Where?

5. Please rate this publication on a scale of 1 to 5 (5 being the best rating).

NAME _____ DATE _____

TITLE _____

COMPANY NAME/DEPARTMENT _____

ADDRESS _____


CITY _____ STATE _____ ZIP CODE _____

(COUNTRY)

Please check here if you require a written reply.

WE'D LIKE YOUR COMMENTS ...

This document is one of a series describing Intel products. Your comments on the back of this form will help us produce better manuals. Each reply will be carefully reviewed by the responsible person. All comments and suggestions become the property of Intel Corporation.



**NO POSTAGE
NECESSARY
IF MAILED
IN U.S.A.**

BUSINESS REPLY MAIL
FIRST CLASS PERMIT NO. 1040 SANTA CLARA, CA

POSTAGE WILL BE PAID BY ADDRESSEE

**Intel Corporation
Attn: Technical Publications M/S 6-2000
3065 Bowers Avenue
Santa Clara, CA 95051**





INTEL CORPORATION, 3065 Bowers Avenue, Santa Clara, California 95051 (408) 987-8080

Printed in U.S.A.