

Microsoft(R)

Programmer's Reference Manual

for 8086 and 8088 Microprocessors

and the MS(tm)-DOS Operating System

Information in this document is subject to change without notice and does not represent a commitment on the part of Microsoft Corporation. The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement. It is against the law to copy the Programmer's Reference Manual on magnetic tape, disk, or any other medium for any purpose other than the purchaser's personal use.

(C) Microsoft Corporation 1981, 1983

Comments about this documentation may be sent to:

Microsoft Corporation
Microsoft Building
10700 Northup Way
Bellevue, WA 98004

Microsoft is a registered trademark of Microsoft Corporation.

MS is a registered trademark of Microsoft Corporation.

CP/M is a registered trademark of Digital Research, Inc.

Document No. 8411-200-00

System Requirements

Disk drive(s)

One disk drive if and only if output is sent to the same physical disk from which the input was taken. None of the programs allows time to swap disks during operation on a one-drive configuration. Therefore, two disk drives is a more practical configuration.

For more information about other Microsoft products, contact:

Microsoft Corporation
10700 Northup Way
Bellevue, WA 98004
(206) 828-8080

Contents

General Introduction

Chapter 1 System Calls

1.1	Introduction	1-1
1.2	Programming Considerations	1-1
1.2.1	Calling From Macro Assembler	1-1
1.2.2	Calling From a High-Level Language	1-1
1.2.3	Returning Control to MS-DOS	1-2
1.2.4	Console and Printer Input/Output Calls	1-3
1.2.5	Disk I/O System Calls	1-3
1.3	File Control Block (FCB)	1-3
1.3.1	Fields of the FCB	1-4
1.3.2	Extended FCB	1-6
1.3.3	Directory Entry	1-6
1.3.4	Fields of the FCB	1-7
1.4	System Call Descriptions	1-9
1.4.1	Programming Examples	1-10
1.5	Xenix-Compatible Calls	1-11
1.6	Interrupts	1-14
	20H Program Terminate	1-16
	21H Function Request	1-18
	22H Terminate Address	1-19
	23H CONTROL-C Exit Address	1-19
	24H Fatal Error Abort Address	1-20
	25H Absolute Disk Read	1-23
	26H Absolute Disk Write	1-25
	27H Terminate But Stay Resident	1-27
1.7	Function Requests	1-28
1.7.1	CP/M-Compatible Calling Sequence	1-28
1.7.2	Treatment of Registers	1-29
	Function Requests	
	00H Terminate Program	1-33
	01H Read Keyboard and Echo	1-34
	02H Display Character	1-35
	03H Auxiliary Input	1-36
	04H Auxiliary Output	1-37
	05H Print Character	1-38
	06H Direct Console I/O	1-40
	07H Direct Console Input	1-42
	08H Read Keyboard	1-43
	09H Display String	1-44
	0AH Buffered Keyboard Input	1-45
	0BH Check Keyboard Status	1-47
	0CH Flush Buffer, Read Keyboard	1-48
	0DH Disk Reset	1-49
	0EH Select Disk	1-50
	0FH Open File	1-50
	10H Close File	1-53
	11H Search for First Entry	1-55
	12H Search for Next Entry	1-57
	13H Delete File	1-59

14H	Sequential Read	1-61
15H	Sequential Write	1-63
16H	Create File	1-65
17H	Rename File	1-67
19H	Current Disk	1-69
1AH	Set Disk Transfer Address	1-70
21H	Random Read	1-72
22H	Random Write	1-74
23H	File Size	1-76
24H	Set Relative Record	1-78
25H	Set Vector	1-80
27H	Random Block Read	1-81
28H	Random Block Write	1-84
29H	Parse File Name	1-87
2AH	Get Date	1-90
2BH	Set Date	1-92
2CH	Get Time	1-94
2DH	Set Time	1-95
2EH	Set/Reset Verify Flag	1-97
2FH	Get Disk Transfer Address	1-99
30H	Get DOS Version Number	1-100
31H	Keep Process	1-101
33H	CONTROL-C Check	1-102
35H	Get Interrupt Vector	1-104
36H	Get Disk Free Space	1-105
38H	Return Country-Dependent Information	1-106
39H	Create Sub-Directory	1-109
3AH	Remove a Directory Entry	1-110
3BH	Change Current Directory	1-111
3CH	Create a File	1-112
3DH	Open a File	1-112
3EH	Close a File Handle	1-115
3FH	Read From File/Device	1-116
40H	Write to a File/Device	1-117
41H	Delete a Directory Entry	1-118
42H	Move a File Pointer	1-119
43H	Change Attributes	1-120
44H	I/O Control for Devices	1-121
45H	Duplicate a File Handle	1-125
46H	Force a Duplicate of a Handle	1-126
47H	Return Text of Current Directory	1-127
48H	Allocate Memory	1-128
49H	Free Allocated Memory	1-129
4AH	Modify Allocated Memory Blocks	1-130
4BH	Load and Execute a Program	1-131
4CH	Terminate a Process	1-134
4DH	Retrieve the Return Code of a Child	1-135
4EH	Find Match File	1-136
4FH	Step Through a Directory Matching Files	1-138
54H	Return Current Setting of Verify	1-139
56H	Move a Directory Entry	1-140
57H	Get/Set Date/Time of File	1-141

	Call Examples (00H-57H)	1-142
1.9	Extended Example of MS-DOS System Calls	1-149
Chapter 2 MS-DOS 2.0 Device Drivers		
2.1	What is a Device Driver?	2-1
2.2	Device Headers	2-3
2.2.1	Pointer to Next Device Field . . .	2-3
2.2.2	Attribute Field	2-4
2.2.3	Strategy and Interrupt Routines .	2-5
2.2.4	Name Field	2-5
2.3	How to Create a Device Driver . . .	2-5
2.4	Installation of Device Drivers . . .	2-6
2.5	Request Header	2-6
2.5.1	Unit Code	2-7
2.5.2	Command Code Field	2-7
2.5.3	MEDIA CHECK and BUILD BPB	2-8
2.5.4	Status Word	2-9
2.6	Function Call Parameters	2-11
2.6.1	INIT	2-12
2.6.2	MEDIA CHECK	2-12
2.6.3	BUILD BPB	2-13
2.6.4	Media Descriptor Byte	2-15
2.6.5	READ OR WRITE	2-16
2.6.6	NON DESTRUCTIVE READ NO WAIT . . .	2-17
2.6.7	STATUS	2-18
2.6.8	FLUSH	2-18
2.7	The CLOCK Device	2-19
2.8	Example of Device Drivers	2-20
2.8.1	Block Device Driver	2-20
2.8.2	Character Device Driver	2-34
Chapter 3 MS-DOS Technical Information		
3.1	MS-DOS Initialization	3-1
3.2	The Command Processor	3-1
3.3	MS-DOS Disk Allocation	3-3
3.4	MS-DOS Disk Directory	3-3
3.5	File Allocation Table	3-7
3.5.1	How to Use the File Allocation Table	3-8
3.6	IBM 5 1/4" MS-DOS Disk Formats . . .	3-9
Chapter 4 MS-DOS Control Blocks and Work Areas		
4.1	Typical MS-DOS Memory Map	4-1
4.2	MS-DOS Program Segment	4-2
Chapter 5 EXE File Structure and Loading		
Index		

GENERAL INTRODUCTION

The Microsoft(R) MS(tm)-DOS Programmer's Reference Manual is a technical reference manual for system programmers. This manual contains a description and examples of all MS-DOS 2.0 system calls and interrupts (Chapter 1). Chapter 2, "MS-DOS 2.0 Device Drivers" contains information on how to install your own device drivers on MS-DOS. Two examples of device driver programs (one serial and one block) are included in Chapter 2. Chapters 3 through 5 contain technical information about MS-DOS, including MS-DOS disk allocation (Chapter 3), MS-DOS control blocks and work areas (Chapter 4), and EXE file structure and loading (Chapter 5).

CHAPTER 1

SYSTEM CALLS

1.1 INTRODUCTION

MS-DOS provides two types of system calls: interrupts and function requests. This chapter describes the environments from which these routines can be called, how to call them, and the processing performed by each.

1.2 PROGRAMMING CONSIDERATIONS

The system calls mean you don't have to invent your own ways to perform these primitive functions, and make it easier to write machine-independent programs.

1.2.1 Calling From Macro Assembler

The system calls can be invoked from Macro Assembler simply by moving any required data into registers and issuing an interrupt. Some of the calls destroy registers, so you may have to save registers before using a system call. The system calls can be used in macros and procedures to make your programs more readable; this technique is used to show examples of the calls.

1.2.2 Calling From A High-Level Language

The system calls can be invoked from any high-level language whose modules can be linked with assembly-language modules.

Calling from Microsoft Basic: Different techniques are used to invoke system calls from the compiler and interpreter. Compiled modules can be linked with assembly-language modules; from the interpreter, the CALL statement or USER function can be used to execute the appropriate 8086 object code.

Calling from Microsoft Pascal: In addition to linking with an assembly-language module, Microsoft Pascal includes a function (DOSXQQ) that can be used directly from a Pascal program to call a function request.

Calling from Microsoft FORTRAN: Modules compiled with Microsoft FORTRAN can be linked with assembly-language modules.

1.2.3 Returning Control To MS-DOS

Control can be returned to MS-DOS in any of four ways:

1. Call Function Request 4CH

```
MOV AH,4CH
INT 21H
```

This is the preferred method.

2. Call Interrupt 20H:

```
INT 20H
```

3. Jump to location 0 (the beginning of the Program Segment Prefix):

```
JMP 0
```

Location 0 of the Program Segment Prefix contains an INT 20H instruction, so this technique is simply one step removed from the first.

4. Call Function Request 00H:

```
MOV AH,00H
INT 21H
```

This causes a jump to location 0, so it is simply one step removed from technique 2, or two steps removed from technique 1.

1.2.4 Console And Printer Input/Output Calls

The console and printer system calls let you read from and write to the console device and print on the printer without using any machine-specific codes. You can still take advantage of specific capabilities (display attributes such as positioning the cursor or erasing the screen, printer attributes such as double-strike or underline, etc.) by using constants for these codes and reassembling once with the correct constant values for the attributes.

1.2.5 Disk I/O System Calls

Many of the system calls that perform disk input and output require placing values into or reading values from two system control blocks: the File Control Block (FCB) and directory entry.

1.3 FILE CONTROL BLOCK (FCB)

The Program Segment Prefix includes room for two FCBs at offsets 5CH and 6CH. The system call descriptions refer to unopened and opened FCBs. An unopened FCB is one that contains only a drive specifier and filename, which can contain wild card characters (* and ?). An opened FCB contains all fields filled by the Open File system call (Function 0FH). Table 1.1 describes the fields of the FCB.

Table 1.1 Fields of File Control Block (FCB)

Name	Size (bytes)	Offset	
		Hex	Decimal
Drive number	1	00H	0
Filename	8	01-08H	1-8
Extension	3	09-0BH	9-11
Current block	2	0CH,0DH	12,13
Record size	2	0EH,0FH	14,15
File size	4	10-13H	16-19
Date of last write	2	14H,15H	20,21
Time of last write	2	16H,17H	22,23
Reserved	8	18-1FH	24-31
Current record	1	20H	32
Relative record	4	21-24H	33-36

1.3.1 Fields Of The FCB

Drive Number (offset 00H): Specifies the disk drive; 1 means drive A: and 2 means drive B:. If the FCB is to be used to create or open a file, this field can be set to 0 to specify the default drive; the Open File system call Function (0FH) sets the field to the number of the default drive.

Filename (offset 01H): Eight characters, left-aligned and padded (if necessary) with blanks. If you specify a reserved device name (such as LPT1), do not put a colon at the end.

Extension (offset 09H): Three characters, left-aligned and padded (if necessary) with blanks. This field can be all blanks (no extension).

Current Block (offset 0CH): Points to the block (group of 128 records) that contains the current record. This field and the Current Record field (offset 20H) make up the record pointer. This field is set to 0 by the Open File system call.

Record Size (offset 0EH): The size of a logical record, in bytes. Set to 128 by the Open File system call. If the record size is not 128 bytes, you must set this field after opening the file.

File Size (offset 10H): The size of the file, in bytes. The first word of this 4-byte field is the low-order part of the size.

Date of Last Write (offset 14H): The date the file was created or last updated. The year, month, and day are mapped into two bytes as follows:

Offset 15H

Y	Y	Y	Y	Y	Y	Y	M
15						9	8

Offset 14H

M	M	M	D	D	D	D	D
		5	4				0

Time of Last Write (offset 16H): The time the file was created or last updated. The hour, minutes, and seconds are mapped into two bytes as follows:

Offset 17H

H	H	H	H	H	M	M	M
15				11	10		

Offset 16H

M	M	M	S	S	S	S	S
		5	4				0

Reserved (offset 18H): These fields are reserved for use by MS-DOS.

Current Record (offset 20H): Points to one of the 128 records in the current block. This field and the Current Block field (offset 0CH) make up the record pointer. This field is not initialized by the Open File system call. You must set it before doing a sequential read or write to the file.

Relative Record (offset 21H): Points to the currently selected record, counting from the beginning of the file (starting with 0). This field is not initialized by the Open File system call. You must set it before doing a random read or write to the file. If the record size is less than 64 bytes, both words of this field are used; if the record size is 64 bytes or more, only the first three bytes are used.

NOTE

If you use the FCB at offset 5CH of the Program Segment Prefix, the last byte of the Relative Record field is the first byte of the unformatted parameter area that starts at offset 80H. This is the default Disk Transfer Address.

1.3.2 Extended FCB

The Extended File Control Block is used to create or search for directory entries of files with special attributes. It adds the following 7-byte prefix to the FCB:

Name	Size (bytes)	Offset (Decimal)
Flag byte (255, or FFH)	1	-7
Reserved	5	-6
Attribute byte:	1	-1
02H = Hidden file		
04H = System file		

1.3.3 Directory Entry

A directory contains one entry for each file on the disk. Each entry is 32 bytes; Table 1.2 describes the fields of an entry.

Table 1.2 Fields of Directory Entry

Name	Size (bytes)	Offset	
		Hex	Decimal
Filename	8	00-07H	0-7
Extension	3	08-0AH	8-10
Attributes	1	0BH	11
Reserved	10	0C-15H	12-21

Time of last write	2	16H,17H	22,23
Date of last read	2	18H,19H	24,25
Reserved	2	1AH,1BH	26,27
File size	4	1C-1FH	28-31

1.3.4 Fields Of The *FCB Directory*

Filename (offset 00H): Eight characters, left-aligned and padded (if necessary) with blanks. MS-DOS uses the first byte of this field for two special codes:

00H (0)	End of allocated directory
E5H (229)	Free directory entry

Extension (offset 08H): Three characters, left-aligned and padded (if necessary) with blanks. This field can be all blanks (no extension).

Attributes (offset 0BH): Attributes of the file:

Value				
Hex	Binary	Dec		Meaning
01H	0000 0001	1		Read-only
02H	0000 0010	2		Hidden
04H	0000 0100	4		System
07H	0000 0111	7		Changeable with CHGMOD
08H	0000 1000	8		Volume-ID
0AH	0001 0000	10		Directory
16H	0001 0110	22		Hard attributes for FINDENTRY
20H	0020 0000	32		Archive

Reserved (offset 0CH): Reserved for MS-DOS.

Time of Last Write (offset 16H): The time the file was created or last updated. The hour, minutes, and seconds are mapped into two bytes as follows:

Offset 17H

	H		H		H		H		M		M		M	
	15						11		10					

Offset 16H

	M		M		M		S		S		S		S		S	
					5		4								0	

Date of Last Write (offset 18H): The date the file was created or last updated. The year, month, and day are mapped into two bytes as follows:

Offset 19H

	Y		Y		Y		Y		Y		Y		Y		M	
	15										9		8			

Offset 18H

	M		M		M		D		D		D		D		D	
					5	4									0	

File Size (offset 1CH): The size of the file, in bytes. The first word of this 4-byte field is the low-order part of the size.

1.4 SYSTEM CALL DESCRIPTIONS

Many system calls require that parameters be loaded into one or more registers before the call is issued; most calls return information in the registers (usually a code that describes the success or failure of the operation). The description of system calls 00H-2EH includes the following:

A drawing of the 8088 registers that shows their contents before and after the system call.

A more complete description of the register contents required before the system call.

A description of the processing performed.

A more complete description of the register contents after the system call.

An example of its use.

The description of system calls 2FH-57H includes the following:

A drawing of the 8088 registers that shows their contents before and after the system call.


A more complete description of the register contents required before the system call.

A description of the processing performed.

Error returns from the system call.

An example of its use.

Figure 1 is an example of how each system call is described. Function 27H, Random Block Read, is shown.

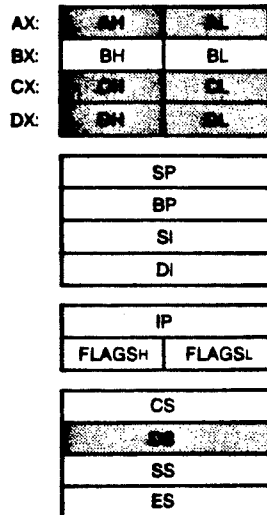

Call
 AH = 27H
 DS:DX
 Opened FCB
 CX
 Number of blocks to read

Return
 AL
 0 = Read completed successfully
 1 = EOF
 2 = End of segment
 3 = EOF, partial record

CX
 Number of blocks read

Figure 1. Example of System Call Description

1.4.1 Programming Examples

A macro is defined for each system call, then used in some examples. In addition, a few other macros are defined for use in the examples. The use of macros allows the examples to be more complete programs, rather than isolated uses of the system calls. All macro definitions are listed at the end of the chapter.

The examples are not intended to represent good programming practice. In particular, error checking and good human interface design have been sacrificed to conserve space. You may, however, find the macros a convenient way to include system calls in your assembly language programs.

A detailed description of each system call follows. They are listed in numeric order; the interrupts are described first, then the function requests.

NOTE

Unless otherwise stated, all numbers in the system call descriptions -- both text and code -- are in hex.

1.5 XENIX COMPATIBLE CALLS

MS-DOS 2.0 supports hierarchical (i.e., tree-structured) directories, similar to those found in the Xenix operating system. (For information on tree-structured directories, refer to the MS-DOS User's Guide.)

The following system calls are compatible with the Xenix system:

Function 39H	Create Sub-Directory
Function 3AH	Remove a Directory Entry
Function 3BH	Change the Current Directory
Function 3CH	Create a File
Function 3DH	Open a File
Function 3FH	Read From File/Device
Function 40H	Write to a File or Device
Function 41H	Delete a Directory Entry
Function 42H	Move a File Pointer
Function 43H	Change Attributes
Function 44H	I/O Control for Devices
Function 45H	Duplicate a File Handle
Function 46H	Force a Duplicate of a Handle
Function 4BH	Load and Execute a Program
Function 4CH	Terminate a Process
Function 4DH	Retrieve the Return Code of a Child

There is no restriction in MS-DOS 2.0 on the depth of a tree (the length of the longest path from root to leaf) except in the number of allocation units available. The root directory will have a fixed number of entries (64 for the single-sided disk). For non-root directories, the number of files per directory is only limited by the number of allocation units available.

Pre-2.0 disks will appear to MS-DOS 2.0 as having only a root directory with files in it and no subdirectories.

Implementation of the tree structure is simple. The root directory is the pre-2.0 directory. Subdirectories of the root have a special attribute set indicating that they are directories. The subdirectories themselves are files, linked through the FAT as usual. Their contents are identical in character to the contents of the root directory.

Pre-2.0 programs that use system calls not described in this chapter will be unable to make use of files in other directories. Those files not necessary for the current task will be placed in other directories.

Attributes apply to the tree-structured directories in the following manner:

Attribute	Meaning/Function for files	Meaning/Function for directories
volume_id	Present at the root. Only one file may have this set.	Meaningless.
directory	Meaningless.	Indicates that the directory entry is a directory. Cannot be changed with 43H.
read_only	Old fcb-create, new Create, new open (for write or read/write) will fail.	Meaningless.
archive	Set when file is written. Set/reset via Function 43H.	Meaningless.
hidden/ system	Prevents file from being found in search first/search next. Old open will fail.	Prevents directory entry from being found. Function 3BH will still work.

1.6 INTERRUPTS

MS-DOS reserves interrupts 20H through 3FH for its own use. The table of interrupt routine addresses (vectors) is maintained in locations 80H-FCH. Table 1.3 lists the interrupts in numeric order; Table 1.4 lists the interrupts in alphabetic order (of the description). User programs should only issue Interrupts 20H, 21H, 25H, 26H, and 27H. (Function Requests 4CH and 31H are the preferred method for Interrupts 20H and 27H for versions of MS-DOS that are 2.0 and higher.)

NOTE

Interrupts 22H, 23H, and 24H are not interrupts that can be issued by user programs; they are simply locations where a segment and offset address are stored.

Table 1.3 MS-DOS Interrupts, Numeric Order

Interrupt		Description
Hex	Dec	
20H	32	Program Terminate
21H	33	Function Request
22H	34	Terminate Address
23H	35	<CTRL-C> Exit Address
24H	36	Fatal Error Abort Address
25H	37	Absolute Disk Read
26H	38	Absolute Disk Write
27H	39	Terminate But Stay Resident
28-40H	40-64	RESERVED -- DO NOT USE

Table 1.4 MS-DOS Interrupts, Alphabetic Order

Description	Interrupt	
	Hex	Dec
Absolute Disk Read	25H	37
Absolute Disk Write	26H	38
<CTRL-C> Exit Address	23H	35
Fatal Error Abort Address	24H	36
Function Request	21H	33
Program Terminate	20H	32
RESERVED -- DO NOT USE	28-40H	40-64
Terminate Address	22H	34
Terminate But Stay Resident	27H	39

Program Terminate (Interrupt 20H)

AX:	AH	AL	Call CS Segment address of Program Segment Prefix
BX:	BH	BL	
CX:	CH	CL	
DX:	DH	DL	
	SP		Return None
	BP		
	SI		
	DI		
	IP		
	FLAGSH	FLAGSL	
	CS		
	DS		
	SS		
	ES		

Interrupt 20H causes the current process to terminate and returns control to its parent process. All open file handles are closed and the disk cache is cleaned. This interrupt is almost always used in old .COM files for termination.

The CS register must contain the segment address of the Program Segment Prefix before you call this interrupt.

The following exit addresses are restored from the Program Segment Prefix:

Exit Address	Offset
Program Terminate	0AH
CONTROL-C	0EH
Critical Error	12H

All file buffers are flushed to disk.

NOTE

Close all files that have changed in length before issuing this interrupt. If a changed file is not closed, its length is not recorded correctly in the directory. See Functions 10H and 3EH for a description of the Close File system calls.

Interrupt 20H is provided for compatibility with versions of MS-DOS prior to 2.0. New programs should use Function Request 4CH, Terminate a Process.

```
Macro Definition: terminate macro
                   int 20H
                   endm
```

Example

```
;CS must be equal to PSP values given at program start
;(ES and DS values)
  INT 20H
;There is no return from this interrupt
```

Function Request (Interrupt 21H)

AX:	BH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH

Function number

Other registers as specified in individual function

SP
BP
SI
DI

Return

As specified in individual function

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

The AH register must contain the number of the system function. See Section 1.7, "Function Requests," for a description of the MS-DOS system functions.

NOTE

No macro is defined for this interrupt, because all function descriptions in this chapter that define a macro include Interrupt 21H.

Example

To call the Get Time function:

```

mov  ah,2CH      ;Get Time is Function 2CH
int  21H        ;THIS INTERRUPT

```

Terminate Address (Interrupt 22H)
CONTROL-C Exit Address (Interrupt 23H)
Fatal Error Abort Address (Interrupt 24H)

These are not true interrupts, but rather storage locations for a segment and offset address. The interrupts are issued by MS-DOS under the specified circumstance. You can change any of these addresses with Function Request 25H (Set Vector) if you prefer to write your own interrupt handlers.

Interrupt 22H -- Terminate Address

When a program terminates, control transfers to the address at offset 0AH of the Program Segment Prefix. This address is copied into the Program Segment Prefix, from the Interrupt 22H vector, when the segment is created.

Interrupt 23H -- CONTROL-C Exit Address

If the user types CONTROL-C during keyboard input or display output, control transfers to the INT 23H vector in the interrupt table. This address is copied into the Program Segment Prefix, from the Interrupt 23H vector, when the segment is created.

If the CONTROL-C routine preserves all registers, it can end with an IRET instruction (return from interrupt) to continue program execution. When the interrupt occurs, all registers are set to the value they had when the original call to MS-DOS was made. There are no restrictions on what a CONTROL-C handler can do -- including MS-DOS function calls -- so long as the registers are unchanged if IRET is used.

If Function 09H or 0AH (Display String or Buffered Keyboard Input) is interrupted by CONTROL-C, the three-byte sequence 03H-0DH-0AH (ETX-CR-LF) is sent to the display and the function resumes at the beginning of the next line.

If the program creates a new segment and loads a second program that changes the CONTROL-C address, termination of the second program restores the CONTROL-C address to its value before execution of the second program.

Interrupt 24H -- Fatal Error Abort Address

If a fatal disk error occurs during execution of one of the disk I/O function calls, control transfers to the INT 24H vector in the vector table. This address is copied into the Program Segment Prefix, from the Interrupt 24H vector, when the segment is created.

BP:SI contains the address of a Device Header Control Block from which additional information can be retrieved.

NOTE

Interrupt 24H is not issued if the failure occurs during execution of Interrupt 25H (Absolute Disk Read) or Interrupt 26H (Absolute Disk Write). These errors are usually handled by the MS-DOS error routine in COMMAND.COM that retries the disk operation, then gives the user the choice of aborting, retrying the operation, or ignoring the error. The following topics give you the information you need about interpreting the error codes, managing the registers and stack, and controlling the system's response to the error in order to write your own error-handling routines.

Error Codes

When an error-handling program gains control from Interrupt 24H, the AX and DI registers can contain codes that describe the error. If Bit 7 of AH is 1, the error is either a bad image of the File Allocation Table or an error occurred on a character device. The device header passed in BP:SI can be examined to determine which case exists. If the attribute byte high order bit indicates a block device, then the error was a bad FAT. Otherwise, the error is on a character device.

The following are error codes for Interrupt 24H:

Error Code	Description
0	Attempt to write on write-protected disk
1	Unknown unit
2	Drive not ready
3	Unknown command
4	Data error
5	Bad request structure length
6	Seek error
7	Unknown media type
8	Sector not found
9	Printer out of paper
A	Write fault
B	Read fault
C	General failure

The user stack will be in effect (the first item described below is at the top of the stack), and will contain the following from top to bottom:

```

IP      MS-DOS registers from
CS      issuing INT 24H
FLAGS

AX      User registers at time of original
BX      INT 21H request
CX
DX
SI
DI
BP
DS
ES

IP      From the original INT 21H
CS      from the user to MS-DOS
FLAGS

```

The registers are set such that if an IRET is executed, MS-DOS will respond according to (AL) as follows:

```

(AL)=0  ignore the error
      =1  retry the operation
      =2  terminate the program via INT 23H

```


*wrong
Int 22*

Notes:

1. Before giving this routine control for disk errors, MS-DOS performs five retries.

2. For disk errors, this exit is taken only for errors occurring during an Interrupt 21H. It is not used for errors during Interrupts 25H or 26H.
3. This routine is entered in a disabled state.
4. The SS, SP, DS, ES, BX, CX, and DX registers must be preserved.
5. This interrupt handler should refrain from using MS-DOS function calls. If necessary, it may use calls 01H through 0CH. Use of any other call will destroy the MS-DOS stack and will leave MS-DOS in an unpredictable state.
6. The interrupt handler must not change the contents of the device header.
7. If the interrupt handler will handle errors rather than returning to MS-DOS, it should restore the application program's registers from the stack, remove all but the last three words on the stack, then issue an IRET. This will return to the program immediately after the INT 21H that experienced the error. Note that if this is done, MS-DOS will be in an unstable state until a function call higher than 0CH is issued.

Absolute Disk Read (Interrupt 25H)

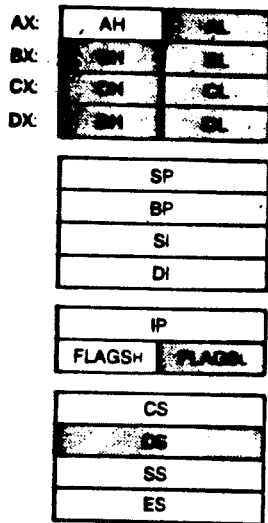

Call

AL

Drive number

DS:BX

Disk Transfer Address

CX

Number of sectors

DX

Beginning relative sector

Return

AL

Error code if CF=1

FlagsL

CF = 0 if successful

= 1 if not successful

The registers must contain the following:

AL Drive number (0=A, 1=B, etc.).
 BX Offset of Disk Transfer Address
 (from segment address in DS).
 CX Number of sectors to read.
 DX Beginning relative sector.

This interrupt transfers control to the MS-DOS BIOS. The number of sectors specified in CX is read from the disk to the Disk Transfer Address. Its requirements and processing are identical to Interrupt 26H, except data is read rather than written.

NOTE

All registers except the segment registers are destroyed by this call. Be sure to save any registers your program uses before issuing the interrupt.

The system pushes the flags at the time of the call; they are still there upon return. (This is necessary because data is passed back in the flags.) Be sure to pop the stack upon return to prevent uncontrolled growth.

If the disk operation was successful, the Carry Flag (CF) is 0. If the disk operation was not successful, CF is 1 and AL contains the MS-DOS error code (see Interrupt 24H earlier in this section for the codes and their meaning).

Macro Definition:

```
abs_disk_read macro disk,buffer,num_sectors,start
    mov     al,disk
    mov     bx,offset buffer
    mov     cx,num_sectors
    mov     dh,start
    int     25H
endm
```

Example


The following program copies the contents of a single-sided disk in drive A: to the disk in drive B:. It uses a buffer of 32K bytes:

```
prompt      db      "Source in A, target in B",13,10
            db      "Any key to start. $"
start       dw      0
buffer      db      64 dup (512 dup (?)) ;64 sectors
            .
int_25H:    display prompt                ;see Function 09H
            read_kbd                      ;see Function 08H
            mov     cx,5                   ;copy 5 groups of
            .                               ;64 sectors
copy:       push    cx                    ;save the loop counter
            abs_disk_read 0,buffer,64,start ;THIS INTERRUPT
            abs_disk_write 1,buffer,64,start ;see INT 26H
            add     start,64               ;do the next 64 sectors
            pop     cx                    ;restore the loop counter
            loop   copy
```

12/23/83

Note: INT 25 returns an sector not found error when used for the first time on the 8" floppies on IV541. If access has previously been made to the disc, the error does not occur. Debug.com calls INT 21H AH=32H before INT 25 (or 26). This is an undocumented call and it prevents this error from occurring. INT 25 causes no problems on the Seattle computers. Since I only have 1 5 1/4" floppy, I'm not sure whether a similar problem would occur with additional ~~5 1/4~~ 5 1/4 floppies on the IV541.

Absolute Disk Write (Interrupt 26H)

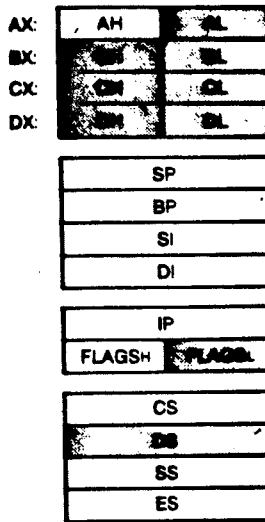

Call

AL

Drive number

DS:BX

Disk Transfer Address

CX

Number of sectors

DX

Beginning relative sector

Return

AL

Error code if CF = 1

FLAGSL

CF = 0 if successful

1 if not successful

The registers must contain the following:

AL Drive number (0=A, 1=B, etc.).
 BX Offset of Disk Transfer Address
 (from segment address in DS).
 CX Number of sectors to write.
 DX Beginning relative sector.

This interrupt transfers control to the MS-DOS BIOS. The number of sectors specified in CX is written from the Disk Transfer Address to the disk. Its requirements and processing are identical to Interrupt 25H, except data is written to the disk rather than read from it.

NOTE

All registers except the segment registers are destroyed by this call. Be sure to save any registers your program uses before issuing the interrupt.

The system pushes the flags at the time of the call; they are still there upon return. (This is necessary because data is passed back in the flags.) Be sure to pop the stack upon return to prevent uncontrolled growth.

If the disk operation was successful, the Carry Flag (CF) is 0. If the disk operation was not successful, CF is 1 and AL contains the MS-DOS error code (see Interrupt 24H for the codes and their meaning).

Macro Definition:

```
abs_disk_write macro disk,buffer,num_sectors,start
                mov     al,disk
                mov     bx,offset buffer
                mov     cx,num_sectors
                mov     dh,start
                int     26H
                endm
```

Example

The following program copies the contents of a single-sided disk in drive A: to the disk in drive B:, verifying each write. It uses a buffer of 32K bytes:

```
off          equ    0
on           equ    1
.
.
prompt      db     "Source in A, target in B",13,10
            db     "Any key to start. $"
start       dw     0
buffer      db     64 dup (512 dup (?)) ;64 sectors
.
.
int_26H:    display prompt          ;see Function 09H
            read_kbd                ;see Function 08H
            verify on                ;see Function 2EH
            mov     cx,5              ;copy 5 groups of 64 sectors
copy:       push    cx                ;save the loop counter
            abs_disk_read 0,buffer,64,start ;see INT 25H
            abs_disk_write 1,buffer,64,start ;THIS INTERRUPT
            add     start,64          ;do the next 64 sectors
            pop     cx                ;restore the loop counter
            loop   copy
            verify off                ;see Function 2EH
```

Terminate But Stay Resident (Interrupt 27H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 CS:DX
 First byte following
 last byte of code

SP
BP
SI
DI

Return
 None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

The Terminate But Stay Resident call is used to make a piece of code remain resident in the system after its termination. Typically, this call is used in .COM files to allow some device-specific interrupt handler to remain resident to process asynchronous interrupts.

DX must contain the offset (from the segment address in CS) of the first byte following the last byte of code in the program. When Interrupt 27H is executed, the program terminates but is treated as an extension of MS-DOS; it remains resident and is not overlaid by other programs when it terminates.

This interrupt is provided for compatibility with versions of MS-DOS prior to 2.0. New programs should use Function 31H, Keep Process.

```
Macro Definition: stay_resident macro last_instruc
                    mov     dx,offset last_instruc
                    inc     dx
                    int     27H
                    endm
```

Example

```
;CS must be equal to PSP values given at program start
;(ES and DS values)
mov     DX,LastAddress
int     27H
;There is no return from this interrupt
```

1.7 FUNCTION REQUESTS

Most of the MS-DOS function calls require input to be passed to them in registers. After setting the proper register values, the function may be invoked in one of the following ways:

1. Place the function number in AH and execute a long call to offset 50H in your Program Segment Prefix. Note that programs using this method will not operate correctly on versions of MS-DOS that are lower than 2.0.
2. Place the function number in AH and issue Interrupt 21H. All of the examples in this chapter use this method.
3. An additional method exists for programs that were written with different calling conventions. This method should be avoided for all new programs. The function number is placed in the CL register and other registers are set according to the function specification. Then, an intrasegment call is made to location 5 in the current code segment. That location contains a long call to the MS-DOS function dispatcher. Register AX is always destroyed if this method is used; otherwise, it is the same as normal function calls. Note that this method is valid only for Function Requests 00H through 024H.

1.7.1 CP/M(R)-Compatible Calling Sequence

A different sequence can be used for programs that must conform to CP/M calling conventions:

1. Move any required data into the appropriate registers (just as in the standard sequence).
2. Move the function number into the CL register.
3. Execute an intrasegment call to location 5 in the current code segment.

This method can only be used with functions 00H through 24H that do not pass a parameter in AL. Register AX is always destroyed when a function is called in this manner.

1.7.2 Treatment Of Registers

When MS-DOS takes control after a function call, it switches to an internal stack. Registers not used to return information (except AX) are preserved. The calling program's stack must be large enough to accommodate the interrupt system -- at least 128 bytes in addition to other needs.

IMPORTANT NOTE

The macro definitions and extended example for MS-DOS system calls 00H through 2EH can be found at the end of this chapter.

Table 1.5 lists the function requests in numeric order; Table 1.6 list the function requests in alphabetic order (of the description).

Table 1.5 MS-DOS Function Requests, Numeric Order

Function Number	Function Name
00H	Terminate Program
01H	Read Keyboard and Echo
02H	Display Character
03H	Auxiliary Input
04H	Auxiliary Output
05H	Print Character
06H	Direct Console I/O
07H	Direct Console Input
08H	Read Keyboard
09H	Display String
0AH	Buffered Keyboard Input
0BH	Check Keyboard Status
0CH	Flush Buffer, Read Keyboard
0DH	Disk Reset
0EH	Select Disk
0FH	Open File
10H	Close File
11H	Search for First Entry
12H	Search for Next Entry
13H	Delete File
14H	Sequential Read
15H	Sequential Write
16H	Create File
17H	Rename File
19H	Current Disk
1AH	Set Disk Transfer Address
21H	Random Read

22H	Random Write
23H	File Size
24H	Set Relative Record
25H	Set Vector
27H	Random Block Read
28H	Random Block Write
29H	Parse File Name
2AH	Get Date
2BH	Set Date
2CH	Get Time
2DH	Set Time
2EH	Set/Reset Verify Flag
2FH	Get Disk Transfer Address
30H	Get DOS Version Number
31H	Keep Process
33H	CONTROL-C Check
35H	Get Interrupt Vector
36H	Get Disk Free Space
38H	Return Country-Dependent Information
39H	Create Sub-Directory
3AH	Remove a Directory Entry
3BH	Change Current Directory
3CH	Create a File
3DH	Open a File
3EH	Close a File Handle
3FH	Read From File/Device
40H	Write to a File/Device
41H	Delete a Directory Entry
42H	Move a File Pointer
43H	Change Attributes
44H	I/O Control for Devices
45H	Duplicate a File Handle
46H	Force a Duplicate of a Handle
47H	Return Text of Current Directory
48H	Allocate Memory
49H	Free Allocated Memory
4AH	Modify Allocated Memory Blocks
4BH	Load and Execute a Program
4CH	Terminate a Process
4DH	Retrieve the Return Code of a Child
4EH	Find Match File
4FH	Step Through a Directory Matching Files
54H	Return Current Setting of Verify
56H	Move a Directory Entry
57H	Get/Set Date/Time of File

Table 1.6 MS-DOS Function Requests, Alphabetic Order

Function Name	Number
Allocate Memory	48H
Auxiliary Input	03H
Auxiliary Output	04H
Buffered Keyboard Input	0AH
Change Attributes	43H
Change the Current Directory	3BH
Check Keyboard Status	0BH
Close a File Handle	3EH
Close File	10H
CONTROL-C Check	33H
Create a File	3CH
Create File	16H
Create Sub-Directory	39H
Current Disk	19H
Delete a Directory Entry	41H
Delete File	13H
Direct Console Input	07H
Direct Console I/O	06H
Disk Reset	0DH
Display Character	02H
Display String	09H
Duplicate a File Handle	45H
File Size	23H
Find Match File	4EH
Flush Buffer, Read Keyboard	0CH
Force a Duplicate of a Handle	46H
Free Allocated Memory	49H
Get Date	2AH
Get Disk Free Space	36H
Get Disk Transfer Address	2FH
Get DOS Version Number	30H
Get Interrupt Vector	35H
Get Time	2CH
Get/Set Date/Time of File	57H
I/O Control for Devices	44H
Keep Process	31H
Load and Execute a Program	4BH
Modify Allocated Memory Blocks	4AH
Move a Directory Entry	56H
Move a File Pointer	42H
Open a File	3DH
Open File	0FH
Parse File Name	29H
Print Character	05H
Random Block Read	27H
Random Block Write	28H
Random Read	21H
Random Write	22H
Read From File/Device	3FH
Read Keyboard	08H
Read Keyboard and Echo	01H

Remove a Directory Entry	3AH
Rename File	17H
Retrieve the Return Code of a Child	4DH
Return Current Setting of Verify	54H
Return Country-Dependent Information	38H
Return Text of Current Directory	47H
Search for First Entry	11H
Search for Next Entry	12H
Select Disk	0EH
Sequential Read	14H
Sequential Write	15H
Set Date	2BH
Set Disk Transfer Address	1AH
Set Relative Record	24H
Set Time	2DH
Set Vector	25H
Set/Reset Verify Flag	2EH
Step Through a Directory Matching	4FH
Terminate a Process	4CH
Terminate Program	00H
Write to a File/Device	40H

Terminate Program (Function 00H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 00H

CS

Segment address of
Program Segment Prefix

SP
BP
SI
DI

Return

None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 00H is called by Interrupt 20H; it performs the same processing.

The CS register must contain the segment address of the Program Segment Prefix before you call this interrupt.

The following exit addresses are restored from the specified offsets in the Program Segment Prefix:

```

Program terminate    0AH
CONTROL-C           0EH
Critical error       12H

```

All file buffers are flushed to disk.

Warning: Close all files that have changed in length before calling this function. If a changed file is not closed, its length is not recorded correctly in the directory. See Function 10H for a description of the Close File system call.

```

Macro Definition:  terminate_program  macro
                                     xor    ah,ah
                                     int    21H
                                     endm

```

Example

```

;CS must be equal to PSP values given at program start
;(ES and DS values)
mov  ah,0
int  21H
;There are no returns from this interrupt

```

Read Keyboard and Echo (Function 01H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 01H

SP
BP
SI
DI

Return
AL
Character typed

IP
FLAGSH
FLAGSL

CS
DS
SS
ES

Function 01H waits for a character to be typed at the keyboard, then echos the character to the display and returns it in AL. If the character is CONTROL-C, Interrupt 23H is executed.

```
Macro Definition:  read_kbd_and_echo  macro
                    mov  ah, 01H
                    int  21H
                    endm
```

Example

The following program both displays and prints characters as they are typed. If RETURN is pressed, the program sends Line Feed-Carriage Return to both the display and the printer:

```
func_01H:  read_kbd_and_echo          ;THIS FUNCTION
           print_char  al             ;see Function 05H
           cmp         al,0DH         ;is it a CR?
           jne        func_01H       ;no, print it
           print_char  l0             ;see Function 05H
           display_char l0            ;see Function 02H
           jmp        func_01H       ;get another character
```

Display Character (Function 02H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 02H

DL

Character to be displayed

SP
BP
SI
DI

Return

None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 02H displays the character in DL. If CONTROL-C is typed, Interrupt 23H is issued.

```
Macro Definition:  display_char macro    character
                   mov                  dl,character
                   mov                  ah,02H
                   int                   21H
                   endm
```

Example

The following program converts lowercase characters to uppercase before displaying them:

```
func_02H:  read_kbd                      ;see Function 08H
           cmp      al,"a"
           jl      uppercase              ;don't convert
           cmp      al,"z"
           jg      uppercase              ;don't convert
           sub      al,20H                 ;convert to ASCII code
           ;for uppercase
uppercase: display_char al                ;THIS FUNCTION
           jmp      func_02H:              ;get another character
```

Auxiliary Input (Function 03H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 03H

SP
BP
SI
DI

Return
AL
Character from auxiliary device

IP
FLAGSH
FLAGSL

CS
DS
SS
ES

Function 03H waits for a character from the auxiliary input device, then returns the character in AL. This system call does not return a status or error code.

If a CONTROL-C has been typed at console input, Interrupt 23H is issued.

```
Macro Definition:  aux_input  macro
                    mov  ah,03H
                    int  21H
                    endm
```

Example

The following program prints characters as they are received from the auxiliary device. It stops printing when an end-of-file character (ASCII 26, or CONTROL-Z) is received:

```
func_03H:  aux_input          ;THIS FUNCTION
           cmp  al,1AH        ;end of file?
           je   continue     ;yes, all done
           print_char al      ;see Function 05H
           jmp  func_03H      ;get another character
continue:  .
           .
```

Auxiliary Output (Function 04H)

AX:	BH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 04H

DL

Character for auxiliary device

SP
BP
SI
DI

Return

None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 04H sends the character in DL to the auxiliary output device. This system call does not return a status or error code.

If a CONTROL-C has been typed at console input, Interrupt 23H is issued.

```
Macro Definition:  aux_output  macro  character
                    mov  dl,character
                    mov  ah,04H
                    int  21H
                    endm
```

Example

The following program gets a series of strings of up to 80 bytes from the keyboard, sending each to the auxiliary device. It stops when a null string (CR only) is typed:

```
string  db  81 dup(?) ;see Function 0AH
.
.
func_04H: get_string 80,string ;see Function 0AH
          cmp  string[1],0 ;null string?
          je  continue ;yes, all done
          mov  cx, word ptr string[1] ;get string length
          mov  bx,0 ;set index to 0
send_it:  aux_output string[bx+2] ;THIS FUNCTION
          inc  bx ;bump index
          loop send_it ;send another character
          jmp  func_04H ;get another string
continue: .
.
.
```

Print Character (Function 05H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 05H
 DL
 Character for printer

SP
BP
SI
DI

Return
 None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 05H prints the character in DL on the standard printer device. If CONTROL-C has been typed at console input, Interrupt 23H is issued.

Macro Definition: `print_char` macro character
`mov dl,character`
`mov ah,05H`
`int 21H`
`endm`

Example

The following program prints a walking test pattern on the printer. It stops if CONTROL-C is pressed.

```
line_num      db      0
              .
              .
func_05H:     mov     cx,60          ;print 60 lines
start_line:   mov     bl,33         ;first printable ASCII
              ;character (!)
              add     bl,line_num   ;to offset one character
              push    cx           ;save number-of-lines counter
              mov     cx,80         ;loop counter for line
print_it:     print_char bl        ;THIS FUNCTION
              inc     bl           ;move to next ASCII character
              cmp     bl,126       ;last printable ASCII
              ;character (~)
              jl     no_reset      ;not there yet
              mov     bl,33        ;start over with (!)
```



```
no_reset:  loop  print_it      ;print another character
           print_char 13      ;carriage return
           print_char 10      ;line feed
           inc   line_num     ;to offset 1st char. of line
           pop   cx           ;restore #-of-lines counter
           loop  start_line; ;print another line
```

Direct Console I/O (Function 06H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 06H
 DL
 See text

SP
BP
SI
DI

Return
 AL

IP
FLAGSH
FLAGSL

If DL = FFH (255) before call,
 then Zero flag set means AL has
 character from keyboard.
 Zero flag not set means there was
 not a character to get, and AL = 0

CS
DS
SS
ES

The processing depends on the value in DL when the function is called:

DL is FFH (255) -- If a character has been typed at the keyboard, it is returned in AL and the Zero flag is 0; if a character has not been typed, the Zero flag is 1.

DL is not FFH -- The character in DL is displayed.

This function does not check for CONTROL-C.

```
Macro Definition:  dir_console_io  macro switch
                    mov  dl,switch
                    mov  ah,06H
                    int  21H
                    endm
```

Example

The following program sets the system clock to 0 and continuously displays the time. When any character is typed, the display stops changing; when any character is typed again, the clock is reset to 0 and the display starts again:

```

time          db  "00:00:00.00",13,10,"$" ;see Function 09H
;                                                    ;for explanation of $
ten          db  10
.
.
func_06H:     set_time  0,0,0,0           ;see Function 2DH
read_clock:  get_time   ;see Function 2CH
             convert  ch,ten,time       ;see end of chapter
             convert  cl,ten,time[3]   ;see end of chapter
             convert  dh,ten,time[6]   ;see end of chapter
             convert  dl,ten,time[9]   ;see end of chapter
             display  time              ;see Function 09H
             dir_console_io  FFH       ;THIS FUNCTION
             jne      stop              ;yes, stop timer
             jmp      read_clock        ;no, keep timer
             ;running
stop:        read_kbd   ;see Function 08H
             jmp      func_06H         ;start over

```


Display String (Function 09H)

AX:	AH	AL	Call AH = 09H DS:DX String to be displayed
BX:	BH	BL	
CX:	CH	CL	
DX:	DH	DL	
SP			Return None
BP			
SI			
DI			
IP			Return None
FLAGSH	FLAGSL		
CS			Return None
DS			
SS			
ES			

DX must contain the offset (from the segment address in DS) of a string that ends with "\$". The string is displayed (the \$ is not displayed).

```
Macro Definition:  display  macro string
                   mov     dx,offset string
                   mov     ah,09H
                   int     21H
                   endm
```

Example

The following program displays the hexadecimal code of the key that is typed:

```
table  db      "0123456789ABCDEF"
sixteen db      16
result db      " - 00H",13,10,"$" ;see text for
                                   ;explanation of $
.
.
func_09H:read_kbd_and_echo ;see Function 01H
          convert_a1,sixteen,result[3] ;see end of chapter
          display result ;THIS FUNCTION
          jmp     func_09H ;do it again
```


Example

The following program gets a 16-byte (maximum) string from the keyboard and fills a 24-line by 80-character screen with it:

```

buffer          label byte
max_length     db      ?           ;maximum length
chars_entered  db      ?           ;number of chars.
string         db      17 dup (?)  ;16 chars + CR
strings_per_line dw     0           ;how many strings
                                           ;fit on line

crlf           db      13,10,"$"

.
.
func_0AH:      get_string 17,buffer ;THIS FUNCTION
               xor      bx,bx      ;so byte can be
                                           ;used as index
               mov     bl,chars_entered ;get string length
               mov     buffer[bx+2],"$" ;see Function 09H
               mov     al,50H       ;columns per line
               cbw
               div     chars_entered ;times string fits
                                           ;on line
               xor     ah,ah        ;clear remainder
               mov     strings_per_line,ax ;save col. counter
               mov     cx,24        ;row counter
display_screen: push cx           ;save it
               mov     cx,strings_per_line ;get col. counter
display_line:  display string      ;see Function 09H
               loop display_line
               display crlf        ;see Function 09H
               pop     cx          ;get line counter
               loop display_screen ;display 1 more line

```


Check Keyboard Status (Function 0BH)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		
SP		
BP		
SI		
DI		
IP		
FLAGSH	FLAGSL	
CS		
DS		
SS		
ES		

Call
AH = 0BH

Return
AL

255 (FFH) = characters in type-ahead buffer
0 = no characters in type-ahead buffer

Checks whether there are characters in the type-ahead buffer. If so, AL returns FFH (255); if not, AL returns 0. If CONTROL-C is in the buffer, Interrupt 23H is executed.

```
Macro Definition: check_kbd_status macro
                    mov     ah,0BH
                    int     21H
                    endm
```

Example

The following program continuously displays the time until any key is pressed.

```
time      db      "00:00:00.00",13,10,"$"
ten       db      10
.
.
func_0BH: get_time          ;see Function 2CH
          convert ch,ten,time ;see end of chapter
          convert cl,ten,time[3] ;see end of chapter
          convert dh,ten,time[6] ;see end of chapter
          convert dl,ten,time[9] ;see end of chapter
          display time         ;see Function 09H
          check_kbd_status     ;THIS FUNCTION
          cmp     al,FFH
          ;
```

Flush Buffer, Read Keyboard (Function 0CH)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		
	SP	
	BP	
	SI	
	DI	
	IP	
	FLAGSH	FLAGSL
	CS	
	DS	
	SS	
	ES	

Call

AH = 0CH

AL

1, 6, 7, 8, or 0AH = The corresponding function is called.

Any other value = no further processing.

Return

AL

0 = Type-ahead buffer was flushed; no other processing performed.

The keyboard type-ahead buffer is emptied. Further processing depends on the value in AL when the function is called:

1, 6, 7, 8, or 0AH -- The corresponding MS-DOS function is executed.

Any other value -- No further processing; AL returns 0.

```
Macro Definition: flush_and_read_kbd macro switch
                    mov     al,switch
                    mov     ah,0CH
                    int     21H
                    endm
```

Example

The following program both displays and prints characters as they are typed. If RETURN is pressed, the program sends Carriage Return-Line Feed to both the display and the printer.

```
func_0CH: flush_and_read_kbd 1 ;THIS FUNCTION
          print_char al ;see Function 05H
          cmp al,0DH ;is it a CR?
          jne func_0CH ;no, print it
          print_char l0 ;see Function 05H
          display_char l0 ;see Function 02H
          jmp func_0CH ;get another character
```

Disk Reset (Function 0DH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 0DH

SP
BP
SI
DI

Return
None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 0DH is used to ensure that the internal buffer cache matches the disks in the drives. This function writes out dirty buffers (buffers that have been modified), and marks all buffers in the internal cache as free.

Function 0DH flushes all file buffers. It does not update directory entries; you must close files that have changed to update their directory entries (see Function 10H, Close File). This function need not be called before a disk change if all files that changed were closed. It is generally used to force a known state of the system; CONTROL-C interrupt handlers should call this function.

```
Macro Definition:  disk_reset macro disk
                   mov     ah,0DH
                   int     21H
                   endm
```

Example

```
mov     ah,0DH
int     21H
;There are no errors returned by this call.
```

Select Disk (Function 0EH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 0EH

DL

Drive number

(0 = A:, 1 = B:, etc.)

SP
BP
SI
DI

Return

AL

Number of logical drives

IP
FLAGSH
FLAGSL

CS
DS
SS
ES

The drive specified in DL (0 = A:, 1 = B:, etc.) is selected as the default disk. The number of drives is returned in AL.

```
Macro Definition:  select_disk macro disk
                   mov     dl,disk[-64]
                   mov     ah,0EH
                   int     21H
                   endm
```

Example

The following program selects the drive not currently selected in a 2-drive system:

```
func_0EH: current_disk      ;see Function 19H
           cmp     al,00H    ;drive A: selected?
           je      select_b  ;yes, select B
           select_disk "A"   ;THIS FUNCTION
           jmp     continue
select_b:  select_disk "B"   ;THIS FUNCTION
continue: .
           .
```

Open File (Function 0FH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 0FH
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return
 AL

0 = Directory entry found
 255 (FFH) = No directory entry found

IP
FLAGSH
FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an unopened File Control Block (FCB). The disk directory is searched for the named file.

If a directory entry for the file is found, AL returns 0 and the FCB is filled as follows:

If the drive code was 0 (default disk), it is changed to the actual disk used (1 = A:, 2 = B:, etc.). This lets you change the default disk without interfering with subsequent operations on this file.

The Current Block field (offset 0CH) is set to zero.

The Record Size (offset 0EH) is set to the system default of 128.

The File Size (offset 10H), Date of Last Write (offset 14H), and Time of Last Write (offset 16H) are set from the directory entry.

Before performing a sequential disk operation on the file, you must set the Current Record field (offset 20H). Before performing a random disk operation on the file, you must set the Relative Record field (offset 21H). If the default record size (128 bytes) is not correct, set it to the correct length.

If a directory entry for the file is not found, AL returns FFH (255).

```
Macro Definition: open macro fcb
                   mov    dx,offset fcb
                   mov    ah,0FH
                   int    21H
                   endm
```

Example

The following program prints the file named TEXTFILE.ASC that is on the disk in drive B:. If a partial record is in the buffer at end-of-file, the routine that prints the partial record prints characters until it encounters an end-of-file mark (ASCII 26, or CONTROL-Z):

```
fcb          db    2,"TEXTFILEASC"
             db    25 dup (?)
buffer      db    128 dup (?)
             .
             .
func_0FH:   set_dta  buffer          ;see Function 1AH
             open   fcb              ;THIS FUNCTION
read_line:  read_seq fcb            ;see Function 14H
             cmp    al,02H           ;end of file?
             je     all_done         ;yes, go home
             cmp    al,00H           ;more to come?
             jg     check_more       ;no, check for partial
             ;record
             mov    cx,128           ;yes, print the buffer
             xor    si,si            ;set index to 0
print_it:   print_char buffer[si]   ;see Function 05H
             inc    si              ;bump index
             loop   print_it        ;print next character
             jmp    read_line       ;read another record
check_more: cmp    al,03H           ;part. record to print?
             jne    all_done         ;no
             mov    cx,128           ;yes, print it
             xor    si,si            ;set index to 0
find_eof:   cmp    buffer[si],26    ;end-of-file mark?
             je     all_done         ;yes
             print_char buffer[si]  ;see Function 05H
             inc    si              ;bump index to next
             ;character
             loop   find_eof
all_done:   close  fcb              ;see Function 10H
```

Close File (Function 10H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		

Call
 AH = 10H
 DS:DX
 Opened FCB

SP
BP
SI
DI

Return
 AL

0 = Directory entry found
 FFH (255) = No directory entry found

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (to the segment address in DS) of an opened FCB. The disk directory is searched for the file named in the FCB. This function must be called after a file is changed to update the directory entry.

If a directory entry for the file is found, the location of the file is compared with the corresponding entries in the FCB. The directory entry is updated, if necessary, to match the FCB, and AL returns 0.

If a directory entry for the file is not found, AL returns FFH (255).

```
Macro Definition: close macro fcb
                    mov    dx,offset fcb
                    mov    ah,10H
                    int    21H
                    endm
```

Example

The following program checks the first byte of the file named MOD1.BAS in drive B: to see if it is FFH, and prints a message if it is:

```
message          db    "Not saved in ASCII format",13,10,"$"
fcb              db    2,"MOD1  BAS"
                db    25 dup (?)
buffer          db    128 dup (?)
                .
                .
func_10H:        set_dta buffer          ;see Function 1AH
                open  fcb                ;see Function 0FH
                read_seq fcb            ;see Function 14H
```

```
all_done:    cmp    buffer,FFH      ;is first byte FFH?
             jne    all_done    ;no
             display message    ;see Function 09H
             close fcb          ;THIS FUNCTION
```


Search for First Entry (Function 11H)

AX:	AM	AL
BX:	BH	BL
CX:	CH	CL
DX:	DM	DL

Call
 AH = 11H
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return
 0 = Directory entry found
 FFH (255) = No directory entry found

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an unopened FCB. The disk directory is searched for the first matching name. The name can have the ? wild card character to match any character. To search for hidden or system files, DX must point to the first byte of the extended FCB prefix.

If a directory entry for the filename in the FCB is found, AL returns 0 and an unopened FCB of the same type (normal or extended) is created at the Disk Transfer Address.

If a directory entry for the filename in the FCB is not found, AL returns FFH (255).

Notes:

If an extended FCB is used, the following search pattern is used:

1. If the FCB attribute is zero, only normal file entries are found. Entries for volume label, sub-directories, hidden, and system files will not be returned.
2. If the attribute field is set for hidden or system files, or directory entries, it is to be considered as an inclusive search. All normal file entries plus all entries matching the specified attributes are returned. To look at all directory entries except the volume label, the attribute byte may be set to hidden + system + directory (all 3 bits on).

3. If the attribute field is set for the volume label, it is considered an exclusive search, and only the volume label entry is returned.

```
Macro Definition:  search_first macro fcb
                   mov     dx,offset fcb
                   mov     ah,11H
                   int     21H
                   endm
```

Example

The following program verifies the existence of a file named REPORT.ASM on the disk in drive B::

```
yes          db    "FILE EXISTS.$"
no           db    "FILE DOES NOT EXIST.$"
fcb          db    2,"REPORT  ASM"
            db    25 dup (?)
buffer       db    128 dup (?)
            .
            .
func_11H:    set_dta  buffer          ;see Function 1AH
            search_first fcb         ;THIS FUNCTION
            cmp     al,FFH           ;directory entry found?
            je     not_there         ;no
            display yes              ;see Function 09H
            jmp    continue
not_there:   display no              ;see Function 09H
continue:   display crlf            ;see Function 09H
            .
            .
```

Search for Next Entry (Function 12H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 12H
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return
 AL

0 = Directory entry found
 FFH (255) = No directory entry found

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an FCB previously specified in a call to Function 11H. Function 12H is used after Function 11H (Search for First Entry) to find additional directory entries that match a filename that contains wild card characters. The disk directory is searched for the next matching name. The name can have the ? wild card character to match any character. To search for hidden or system files, DX must point to the first byte of the extended FCB prefix.

If a directory entry for the filename in the FCB is found, AL returns 0 and an unopened FCB of the same type (normal or extended) is created at the Disk Transfer Address.

If a directory entry for the filename in the FCB is not found, AL returns FFH (255).

```
Macro Definition: search_next macro fcb
                    mov     dx,offset fcb
                    mov     ah,12H
                    int     21H
                    endm
```

Example

The following program displays the number of files on the disk in drive B:

```
message      db      "No files",10,13,"$"
files        db      0
ten          db      10
fcb          db      2,"?????????????"
             db      25 dup (?)
buffer       db      128 dup (?)
```

```
.
.
func_12H:  set_dta  buffer          ;see Function 1AH
          search_first fcb        ;see Function 11H
          cmp  a1,FFH            ;directory entry found?
          je  all_done           ;no, no files on disk
          inc  files              ;yes, increment file
                                   ;counter
search_dir: search_next fcb      ;THIS FUNCTION
          cmp  a1,FFH            ;directory entry found?
          je  done                ;no
          inc  files              ;yes, increment file
                                   ;counter
          jmp  search_dir         ;check again
done:      convert files,ten,message ;see end of chapter
all_done:  display message       ;see Function 09H
```

Delete File (Function 13H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	CH	CL

Call
 AH = 13H
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return

Ø = Directory entry found
 FFH (255) = No directory entry found

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an unopened FCB. The directory is searched for a matching filename. The filename in the FCB can contain the ? wild card character to match any character.

If a matching directory entry is found, it is deleted from the directory. If the ? wild card character is used in the filename, all matching directory entries are deleted. AL returns Ø.

If no matching directory entry is found, AL returns FFH (255).

```
Macro Definition: delete macro fcb
                    mov     dx,offset fcb
                    mov     ah,13H
                    int     21H
                    endm
```

Example

The following program deletes each file on the disk in drive B: that was last written before December 31, 1982:

```
year      dw      1982
month     db      12
day       db      31
files     db      Ø
ten       db      1Ø
message   db      "NO FILES DELETED.",13,1Ø,"$"
                    ;see Function Ø9H for
                    ;explanation of $

fcb       db      2,"?????????????"
          db      25 dup (?)
```

```

buffer      db      128 dup (?)
.
.
func_13H:   set_dta  buffer      ;see Function 1AH
            search first fcb ;see Function 11H
            cmp  a1,FFH      ;directory entry found?
            je   all_done    ;no, no files on disk
compare:    convert_date buffer ;see end of chapter
            cmp  cx,year     ;next several lines
            jg  next         ;check date in directory
            cmp  dl,month    ;entry against date
            jg  next         ;above & check next file
            cmp  dh,day      ;if date in directory
            jge next         ;entry isn't earlier.
            delete buffer   ;THIS FUNCTION
            inc  files       ;bump deleted-files
            ;counter
next:       search next fcb  ;see Function 12H
            cmp  a1,00H      ;directory entry found?
            je   compare     ;yes, check date
            cmp  files,0     ;any files deleted?
            je   all_done    ;no, display NO FILES
            ;message.
all_done:   convert files,ten,message ;see end of chapter
            display message  ;see Function 09H

```

Sequential Read (Function 14H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		

Call
 AH = 14H
 DS:DX
 Opened FCB

SP
BP
SI
DI

Return

AL

0 = Read completed successfully
 1 = EOF
 2 = DTA too small
 3 = EOF, partial record

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an opened FCB. The record pointed to by the current block (offset 0CH) and Current Record (offset 20H) fields is loaded at the Disk Transfer Address, then the Current Block and Current Record fields are incremented.

The record size is set to the value at offset 0EH in the FCB.

AL returns a code that describes the processing:

Code	Meaning
0	Read completed successfully.
1	End-of-file, no data in the record.
2	Not enough room at the Disk Transfer Address to read one record; read canceled.
3	End-of-file; a partial record was read and padded to the record length with zeros.

```
Macro Definition: read_seq macro fcb
                  mov    dx,offset fcb
                  mov    ah,14H
                  int    21H
                  endm
```

Example

The following program displays the file named TEXTFILE.ASC that is on the disk in drive B; its function is similar to the MS-DOS TYPE command. If a partial record is in the buffer at end of file, the routine that displays the partial

record displays characters until it encounters an end-of-file mark (ASCII 26, or CONTROL-Z):

```

fcb          db    2,"TEXTFILEASC"
             db    25 dup (?)
buffer       db    128 dup (),"$"
             .
             .
func_14H:    set_dta buffer      ;see Function 1AH
             open fcb           ;see Function 0EH
read_line:   read_seq fc         ;THIS FUNCTION
             cmp    al,02H       ;end-of-file?
             je     all_done      ;yes
             cmp    al,02H       ;end-of-file with partial
             ;record?
             jg     check_more    ;yes
             display buffer      ;see Function 09H
             jmp    read_line     ;get another record
check_more:  cmp    al,03H       ;partial record in buffer?
             jne    all_done      ;no, go home
             xor    si,si        ;set index to 0
find_eof:    cmp    buffer[si],26 ;is character EOF?
             je     all_done      ;yes, no more to display
             display_char buffer[si] ;see Function 02H
             inc    si           ;bump index to next
             ;character
             jmp    find_eof      ;check next character
all_done:    close fcb          ;see Function 10H

```


Example

The following program creates a file named DIR.TMP on the disk in drive B: that contains the disk number (0 = A:, 1 = B:, etc.) and filename from each directory entry on the disk:

```

record_size    equ    14                ;offset of Record Size
                                           ;field in FCB
.
.
fcb1           db     2,"DIR      TMP"
               db     25 dup (?)
fcb2           db     2,"???????????"
               db     25 dup (?)
buffer         db     128 dup (?)
.
.
func_15H:      set_dta    buffer          ;see Function 1AH
               search_first fcb2        ;see Function 11H
               cmp       al,FFH         ;directory entry found?
               je        all_done       ;no, no files on disk
               create    fcb1           ;see Function 16H
               mov       fcb1[record_size],12
                                           ;set record size to 12
write_it:      write_seq  fcb1           ;THIS FUNCTION
               search_next fcb2        ;see Function 12H
               cmp       al,FFH         ;directory entry found?
               je        all_done       ;no, go home
               jmp       write_it       ;yes, write the record
all_done:      close     fcb1           ;see Function 10H

```

Create File (Function 16H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		

Call
 AH = 16H
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return
 AL

00H = Empty directory found
 FFH (255) = No empty directory
 available

IP	
FLAGSM	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an unopened FCB. The directory is searched for an empty entry or an existing entry for the specified filename.

If an empty directory entry is found, it is initialized to a zero-length file, the Open File system call (Function 0FH) is called, and AL returns 0. You can create a hidden file by using an extended FCB with the attribute byte (offset FCB-1) set to 2.

If an entry is found for the specified filename, all data in the file is released, making a zero-length file, and the Open File system call (Function 0FH) is issued for the filename (in other words, if you try to create a file that already exists, the existing file is erased, and a new, empty file is created).

If an empty directory entry is not found and there is no entry for the specified filename, AL returns FFH (255).

```
Macro Definition: create macro fcb
                    mov    dx,offset fcb
                    mov    ah,16H
                    int    21H
                    endm
```

Example

The following program creates a file named DIR.TMP on the disk in drive B: that contains the disk number (0 = A:, 1 = B:, etc.) and filename from each directory entry on the disk:

```
record_size    equ    14                ;offset of Record Size
                                           ;field of FCB
.
.
fcb1           db     2,"DIR      TMP"
               db     25 dup (?)
fcb2           db     2,"???????????"
               db     25 dup (?)
buffer         db     128 dup (?)
.
.
func_16H:      set_dta    buffer          ;see Function 1AH
               search_first fcb2        ;see Function 11H
               cmp       al,FFH         ;directory entry found?
               je        all_done       ;no, no files on disk
               create    fcb1           ;THIS FUNCTION
               mov       fcb1[record_size],12
                                           ;set record size to 12
write_it:      write_seq fcb1           ;see Function 15H
               search_next fcb2        ;see Function 12H
               cmp       al,FFH         ;directory entry found?
               je        all_done       ;no, go home
               jmp       write_it       ;yes, write the record
all_done:      close     fcb1           ;see Function 10H
```

Rename File (Function 17H)

AX:	AM	AL
BX:	BH	BL
CX:	CH	CL
DX:	DM	DL

Call
 AH = 17H
 DS:DX
 Modified FCB

SP
BP
SI
DI

Return
 AL

IP	
FLAGSH	FLAGSL

00H = Directory entry found
 FFH (255) = No directory entry
 found or destination already
 exists

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an FCB with the drive number and filename filled in, followed by a second filename at offset 11H. The disk directory is searched for an entry that matches the first filename, which can contain the ? wild card character.

If a matching directory entry is found, the filename in the directory entry is changed to match the second filename in the modified FCB (the two filenames cannot be the same name). If the ? wild card character is used in the second filename, the corresponding characters in the filename of the directory entry are not changed. AL returns 0.

If a matching directory entry is not found or an entry is found for the second filename, AL returns FFH (255).

```
Macro Definition: rename macro fcb,newname
                   mov  dx,offset fcb
                   mov  ah,17H
                   int  21H
                   endm
```

Example

The following program prompts for the name of a file and a new name, then renames the file:

```
fcbl          db 37 dup (?)
prompt1      db "Filename: $"
prompt2      db "New name: $"
reply        db 17 dup(?)
crlf         db 13,10,"$"
             .
             .
```

```
func_17H:      display  prompt1      ;see Function 09H
               get_string 15,reply ;see Function 0AH
               display  crlf      ;see Function 09H
               parse    reply[2],fcb ;see Function 29H
               display  prompt2   ;see Function 09H
               get_string 15,reply ;see Function 0AH
               display  crlf      ;see Function 09H
               parse    reply[2],fcb[16]
               ;see Function 29H
               rename   fcb       ;THIS FUNCTION
```

Current Disk (Function 19H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 19H

SP
BP
SI
DI

Return
AL
Currently selected drive
(0 = A, 1 = B, etc.)

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

AL returns the currently selected drive (0 = A:, 1 = B:, etc.).

```
Macro Definition:  current_disk  macro
                    mov     ah,19H
                    int     21H
                    endm
```

Example

The following program displays the currently selected (default) drive in a 2-drive system:

```
message    db  "Current disk is $"    ;see Function 09H
                                         ;for explanation of $
crlf      db  13,10,"$"
          .
          .
func_19H:  display message              ;see Function 09H
          current_disk                 ;THIS FUNCTION
          cmp     al,00H                ;is it disk A?
          jne    disk_b                ;no, it's disk B:
          display_char "A"             ;see Function 02H
          jmp    all_done
disk_b:    display_char "B"            ;see Function 02H
all_done:  display crlf                ;see Function 09H
```

Set Disk Transfer Address (Function 1AH)

AX:	AH	AL	Call AH = 1AH DS:DX Disk Transfer Address
BX:	BH	BL	
CX:	CH	CL	
DX:	DH	DL	
	SP		Return None
	BP		
	SI		
	DI		
	IP		
	FLAGSH	FLAGSL	
	CS		
	DS		
	SS		
	ES		

DX must contain the offset (from the segment address in DS) of the Disk Transfer Address. Disk transfers cannot wrap around from the end of the segment to the beginning, nor can they overflow into another segment.

NOTE

If you do not set the Disk Transfer Address, MS-DOS defaults to offset 80H in the Program Segment Prefix.

```
Macro Definition:  set_dta  macro  buffer
                   mov      dx,offset buffer
                   mov      ah,1AH
                   int      21H
                   endm
```

Example

The following program prompts for a letter, converts the letter to its alphabetic sequence (A = 1, B = 2, etc.), then reads and displays the corresponding record from a file named ALPHABET.DAT on the disk in drive B:. The file contains 26 records; each record is 28 bytes long:

```
record_size      equ 14          ;offset of Record Size
                                   ;field of FCB
relative_record  equ 33         ;offset of Relative Record
                                   ;field of FCB
```

·
·


```
fcbl          db      2,"ALPHABETDAT"
              db      25 dup (?)
buffer        db      34 dup(?),"$"
prompt        db      "Enter letter: $"
crlf          db      13,10,"$"
              .
              .
func_1AH:     set_dta  buffer          ;THIS FUNCTION
              open    fcb              ;see Function 0FH
              mov     fcb[record_size],28 ;set record size
get_char:     display prompt          ;see Function 09H
              read_kbd_and_echo      ;see Function 01H
              cmp     al,0DH          ;just a CR?
              je     all_done        ;yes, go home
              sub     al,41H          ;convert ASCII
              ;code to record #
              mov     fcb[relative_record],al
              ;set relative record
              display crlf          ;see Function 09H
              read_ran fcb          ;see Function 21H
              display buffer        ;see Function 09H
              display crlf          ;see Function 09H
              jmp     get_char       ;get another character
all_done:     close   fcb            ;see Function 10H
```

Random Read (Function 21H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 21H
 DS:DX
 Opened FCB

SP
BP
SI
DI

Return
 AL

IP
FLAGSH
FLAGSL

00H = Read completed successfully
 01H = EOF
 02H = DTA too small
 03H = EOF, partial record

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an opened FCB. The Current Block (offset 0CH) and Current Record (offset 20H) fields are set to agree with the Relative Record field (offset 21H), then the record addressed by these fields is loaded at the Disk Transfer Address.

AL returns a code that describes the processing:

Code	Meaning
0	Read completed successfully.
1	End-of-file; no data in the record.
2	Not enough room at the Disk Transfer Address to read one record; read canceled.
3	End-of-file; a partial record was read and padded to the record length with zeros.

```
Macro Definition: read_ran macro fcb
                    mov dx,offset fcb
                    mov ah,21H
                    int 21H
                    endm
```

Example

The following program prompts for a letter, converts the letter to its alphabetic sequence (A = 1, B = 2, etc.), then reads and displays the corresponding record from a file named ALPHABET.DAT on the disk in drive B:. The file contains 26 records; each record is 28 bytes long:

```

record_size      equ    14          ;offset of Record Size
                                   ;field of FCB
relative_record  equ    33          ;offset of Relative Record
                                   ;field of FCB
.
.
fcb              db      2,"ALPHABETDAT"
                db      25 dup (?)
buffer          db      34 dup(?),"$"
prompt         db      "Enter letter: $"
crlf           db      13,10,"$"
.
.
func_21H:       set_dta  buffer          ;see Function 1AH
                open    fcb             ;see Function 0FH
                mov     fcb[record_size],28 ;set record size
get_char:       display prompt          ;see Function 09H
                read_kbd_and_echo      ;see Function 01H
                cmp     al,0DH          ;just a CR?
                je      all_done        ;yes, go home
                sub     al,41H          ;convert ASCII code
                                   ;to record #
                mov     fcb[relative_record],al ;set relative
                                   ;record
                display crlf           ;see Function 09H
                read_ran fcb           ;THIS FUNCTION
                display buffer         ;see Function 09H
                display crlf          ;see Function 09H
                jmp     get_char        ;get another char.
all_done:       close   fcb            ;see Function 10H

```

Random Write (Function 22H)

AX:	AH		AL
BX:	BH	BL	
CX:	CH	CL	
DX:	DH		DL
SP			
BP			
SI			
DI			
IP			
FLAGSH		FLAGSL	
CS			
DS			
SS			
ES			

Call
 AH = 22H
 DS:DX
 Opened FCB

Return
 AL
 00H = Write completed successfully
 01H = Disk full
 02H = DTA too small

DX must contain the offset from the segment address in DS of an opened FCB. The Current Block (offset 0CH) and Current Record (offset 20H) fields are set to agree with the Relative Record field (offset 21H), then the record addressed by these fields is written from the Disk Transfer Address. If the record size is smaller than a sector (512 bytes), the records are buffered until a sector is ready to write.

AL returns a code that describes the processing:

Code	Meaning
0	Write completed successfully.
1	Disk is full.
2	Not enough room at the Disk Transfer Address to write one record; write canceled.

```
Macro Definition: write_ran macro fcb
                    mov     dx,offset fcb
                    mov     ah,22H
                    int     21H
                    endm
```

Example

The following program prompts for a letter, converts the letter to its alphabetic sequence (A = 1, B = 2, etc.), then reads and displays the corresponding record from a file named ALPHABET.DAT on the disk in drive B:. After displaying the record, it prompts the user to enter a changed record. If the user types a new record, it is

written to the file; if the user just presses RETURN, the record is not replaced. The file contains 26 records; each record is 28 bytes long:

```

record_size      equ    14          ;offset of Record Size
                                   ;field of FCB
relative_record  equ    33          ;offset of Relative Record
                                   ;field of FCB

.
.
fcb              db    2,"ALPHABETDAT"
                db    25 dup (?)
buffer           db    26 dup(?),13,10,"$"
prompt1         db    "Enter letter: $"
prompt2         db    "New record (RETURN for no change): $"
crlf            db    13,10,"$"
reply           db    28 dup (32)
blanks          db    26 dup (32)

.
.
func_22H:       set_dta  buffer          ;see Function 1AH
                open    fcb              ;see Function 0FH
                mov     fcb[record_size],32 ;set record size
get_char:       display prompt1          ;see Function 09H
                read_kbd_and_echo       ;see Function 01H
                cmp     al,0DH           ;just a CR?
                je      all_done         ;yes, go home
                sub     al,41H           ;convert ASCII
                                                ;code to record #
                mov     fcb[relative_record],al
                                                ;set relative record
                display crlf             ;see Function 09H
                read_ran fcb             ;THIS FUNCTION
                display buffer           ;see Function 09H
                display crlf             ;see Function 09H
                display prompt2         ;see Function 09H
                get_string 27,reply      ;see Function 0AH
                display crlf             ;see Function 09H
                cmp     reply[1],0      ;was anything typed
                                                ;besides CR?
                je      get_char         ;no
                                                ;get another char.
                xor     bx,bx            ;to load a byte
                mov     bl,reply[1]     ;use reply length as
                                                ;counter
                move_string blanks,buffer,26 ;see chapter end
                move_string reply[2],buffer,bx ;see chapter end
                write_ran fcb           ;THIS FUNCTION
                jmp     get_char         ;get another character
all_done:       close  fcb              ;see Function 10H

```

File Size (Function 23H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 23H
 DS:DX
 Unopened FCB

SP
BP
SI
DI

Return
 AL

00H = Directory entry found
 FFH (255) = No directory entry found

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an unopened FCB. You must set the Record Size field (offset 0EH) to the proper value before calling this function. The disk directory is searched for the first matching entry.

If a matching directory entry is found, the Relative Record field (offset 21H) is set to the number of records in the file, calculated from the total file size in the directory entry (offset 1CH) and the Record Size field of the FCB (offset 0EH). AL returns 00.

If no matching directory is found, AL returns FFH (255).

NOTE

If the value of the Record Size field of the FCB (offset 0EH) doesn't match the actual number of characters in a record, this function does not return the correct file size. If the default record size (128) is not correct, you must set the Record Size field to the correct value before using this function.

```
Macro Definition: file_size macro fcb
                   mov     dx,offset fcb
                   mov     ah,23H
                   int     21H
                   endm
```

Example

The following program prompts for the name of a file, opens the file to fill in the Record Size field of the FCB, issues a File Size system call, and displays the file size and number of records in hexadecimal:

```

fcb          db      37 dup (?)
prompt       db      "File name: $"
msg1         db      "Record length:      ",13,10,"$"
msg2         db      "Records:          ",13,10,"$"
crlf         db      13,10,"$"
reply        db      17 dup(?)
sixteen      db      16
.
.
func_23H:    display prompt           ;see Function 09H
             get_string 17,reply       ;see Function 0AH
             cmp        reply[1],0     ;just a CR?
             jne        get_length     ;no, keep going
             jmp        all_done       ;yes, go home
get_length:  display crlf              ;see Function 09H
             parse     reply[2],fcb    ;see Function 29H
             open      fcb             ;see Function 0EH
             file_size fcb             ;THIS FUNCTION
             mov       si,33           ;offset to Relative
                                     ;Record field
convert_it:  mov        di,9           ;reply in msg_2
             cmp        fcb[si],0     ;digit to convert?
             je         show_it        ;no, prepare message
             convert   fcb[si],sixteen,msg_2[di]
             inc       si              ;bump n-o-r index
             inc       di              ;bump message index
             jmp        convert_it     ;check for a digit
show_it:     convert   fcb[14],sixteen,msg_1[15]
             display   msg_1           ;see Function 09H
             display   msg_2           ;see Function 09H
             jmp        func_23H       ;get a filename
all_done:    close     fcb             ;see Function 10H

```

Set Relative Record (Function 24H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 24H
 DS:DX
 Opened FCB

SP
BP
SI
DI

Return
 None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

DX must contain the offset (from the segment address in DS) of an opened FCB. The Relative Record field (offset 21H) is set to the same file address as the Current Block (offset 0CH) and Current Record (offset 20H) fields.

```
Macro Definition: set_relative_record macro fcb
                    mov     dx,offset fcb
                    mov     ah,24H
                    int     21H
                    endm
```

Example

The following program copies a file using the Random Block Read and Random Block Write system calls. It speeds the copy by setting the record length equal to the file size and the record count to 1, and using a buffer of 32K bytes. It positions the file pointer by setting the Current Record field (offset 20H) to 1 and using Set Relative Record to make the Relative Record field (offset 21H) point to the same record as the combination of the Current Block (offset 0CH) and Current Record (offset 20H) fields:

```
current_record equ 32 ;offset of Current Record
                    ;field of FCB
file_size      equ 16 ;offset of File Size
                    ;field of FCB

.
.
fcb            db     37 dup (?)
filename       db     17 dup(?)
prompt1       db     "File to copy: $" ;see Function 09H for
prompt2       db     "Name of copy: $" ;explanation of $
crlf          db     13,10,"$"
```



```
file_length dw ?
buffer db 32767 dup(?)
.
.
func_24H: set_dta buffer ;see Function 1AH
display prompt1 ;see Function 09H
get_string 15,filename ;see Function 0AH
display crlf ;see Function 09H
parse filename[2],fcb ;see Function 29H
open fcb ;see Function 0FH
mov fcb[current_record],0 ;set Current Record
;field
set_relative_record fcb ;THIS FUNCTION
mov ax,word ptr fcb[file_size] ;get file size
mov file_length,ax ;save it for
;ran_block write
ran_block_read fcb,1,ax ;see Function 27H
display prompt2 ;see Function 09H
get_string 15,filename ;see Function 0AH
display crlf ;see Function 09H
parse filename[2],fcb ;see Function 29H
create fcb ;see Function 16H
mov fcb[current_record],0 ;set Current Record
;field
set_relative_record fcb ;THIS FUNCTION
mov ax,file_length ;get original file
;length
ran_block_write fcb,1,ax ;see Function 28H
close fcb ;see Function 10H
```

Set Vector (Function 25H)

AX:	BH	BL	Call
BX:	BH	BL	AH = 25H
CX:	CH	CL	AL
DX:	BH	BL	Interrupt number
	SP		DS:DX
	BP		Interrupt-handling routine
	SI		
	DI		
	IP		Return
	FLAGSH	FLAGSL	None
	CS		
	DS		
	SS		
	ES		

Function 25H should be used to set a particular interrupt vector. The operating system can then manage the interrupts on a per-process basis. Note that programs should never set interrupt vectors by writing them directly in the low memory vector table.

DX must contain the offset (to the segment address in DS) of an interrupt-handling routine. AL must contain the number of the interrupt handled by the routine. The address in the vector table for the specified interrupt is set to DS:DX.

Macro Definition:

```
set_vector macro interrupt,seg_addr,off_addr
    mov     al,interrupt
    push   ds
    mov     ax,seg_addr
    mov     ds,ax
    mov     dx,off_addr
    mov     ah,25H
    int    21H
    pop    ds
endm
```

Example

```
lds     dx,intvector
mov     ah,25H
mov     al,intnumber
int    21H
;There are no errors returned
```

Random Block Read (Function 27H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Call

AH = 27H

DS:DX

Opened FCB

CX

Number of blocks to read

Return

AL

00H = Read completed successfully

01H = EOF

02H = End of segment

03H = EOF, partial record

CX

Number of blocks read

DX must contain the offset (to the segment address in DS) of an opened FCB. CX must contain the number of records to read; if it contains 0, the function returns without reading any records (no operation). The specified number of records -- calculated from the Record Size field (offset 0EH) -- is read starting at the record specified by the Relative Record field (offset 21H). The records are placed at the Disk Transfer Address.

AL returns a code that describes the processing:

Code	Meaning
0	Read completed successfully.
1	End-of-file; no data in the record.
2	Not enough room at the Disk Transfer Address to read one record; read canceled.
3	End-of-file; a partial record was read and padded to the record length with zeros.

CX returns the number of records read; the Current Block (offset 0CH), Current Record (offset 20H), and Relative Record (offset 21H) fields are set to address the next record.

Macro Definition:

```

ran_block_read macro fcb,count,rec_size
    mov     dx,offset fcb
    mov     cx,count
    mov     word ptr fcb[14],rec_size
    mov     ah,27H
    int     21H
endm

```

Example

The following program copies a file using the Random Block Read system call. It speeds the copy by specifying a record count of 1 and a record length equal to the file size, and using a buffer of 32K bytes; the file is read as a single record (compare to the sample program for Function 28H that specifies a record length of 1 and a record count equal to the file size):

```

current_record equ 32 ;offset of Current Record field
file_size      equ 16 ;offset of File Size field
.
.
fcb            db      37 dup (?)
filename       db      17 dup(?)
prompt1       db      "File to copy: $" ;see Function 09H for
prompt2       db      "Name of copy: $" ;explanation of $
crlf          db      13,10,"$"
file_length   dw      ?
buffer        db      32767 dup(?)
.
.
func_27H: set_dta    buffer ;see Function 1AH
          display   prompt1 ;see Function 09H
          get_string 15,filename ;see Function 0AH
          display   crlf ;see Function 09H
          parse     filename[2],fcb ;see Function 29H
          open      fcb ;see Function 0FH
          mov       fcb[current_record],0 ;set Current
          ;Record field
          set_relative_record fcb ;see Function 24H
          mov       ax, word ptr fcb[file_size]
          ;get file size
          mov       file_length,ax ;save it for
          ;ran_block write
          ran_block_read fcb,1,ax ;THIS FUNCTION
          display   prompt2 ;see Function 09H
          get_string 15,filename ;see Function 0AH
          display   crlf ;see Function 09H
          parse     filename[2],fcb ;see Function 29H
          create    fcb ;see Function 16H
          mov       fcb[current_record],0
          ;set Current Record
          ;field
          set_relative_record fcb ;see Function 24H

```

```
mov      ax, file_length ;get original file  
                        ;size  
ran_block_write fcb,l,ax ;see Function 28H  
close      fcb           ;see Function 10H
```

Random Block Write (Function 28H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
FLAGSH	FLAGSL	
CS		
DS		
SS		
ES		

Call

AH = 28H

DS:DX

Opened FCB

CX

Number of blocks to write
(0 = set File Size field)

Return

AL

00H = Write completed successfully

01H = Disk full

02H = End of segment

CX

Number of blocks written

DX must contain the offset (to the segment address in DS) of an opened FCB; CX must contain either the number of records to write or 0. The specified number of records (calculated from the Record Size field, offset 0EH) is written from the Disk Transfer Address. The records are written to the file starting at the record specified in the Relative Record field (offset 21H) of the FCB. If CX is 0, no records are written, but the File Size field of the directory entry (offset 1CH) is set to the number of records specified by the Relative Record field of the FCB (offset 21H); allocation units are allocated or released, as required.

AL returns a code that describes the processing:

Code	Meaning
0	Write completed successfully.
1	Disk full. No records written.
2	Not enough room at the Disk Transfer Address to read one record; read canceled.

CX returns the number of records written; the Current Block (offset 0CH), Current Record (offset 20H), and Relative Record (offset 21H) fields are set to address the next record.

Macro Definition:

```

ran_block_write macro fcb,count,rec_size
    mov     dx,offset fcb
    mov     cx,count
    mov     word ptr fcb[14],rec_size
    mov     ah,28H
    int     21H
endm

```

Example

The following program copies a file using the Random Block Read and Random Block Write system calls. It speeds the copy by specifying a record count equal to the file size and a record length of 1, and using a buffer of 32K bytes; the file is copied quickly with one disk access each to read and write (compare to the sample program of Function 27H, that specifies a record count of 1 and a record length equal to file size):

```

current_record equ 32    ;offset of Current Record field
file_size      equ 16    ;offset of File Size field
.
.
fcb            db        37 dup (?)
filename       db        17 dup(?)
prompt1        db        "File to copy: $"    ;see Function 09H for
prompt2        db        "Name of copy: $"    ;explanation of $
crlf           db        13,10,"$"
num_recs       dw        ?
buffer         db        32767 dup(?)
.
.
func_28H:      set_dta    buffer        ;see Function 1AH
                display   prompt1      ;see Function 09H
                get_string 15,filename  ;see Function 0AH
                display   crlf         ;see Function 09H
                parse     filename[2],fcb ;see Function 29H
                open      fcb         ;see Function 0FH
                mov       fcb[current_record],0
                                ;set Current Record
                                ;field
                set_relative_record fcb ;see Function 24H
                mov       ax, word ptr fcb[file_size]
                                ;get file size
                mov       num_recs,ax  ;save it for
                                ;ran_block_write
                ran_block_read fcb,num_recs,1 ;THIS FUNCTION
                display   prompt2      ;see Function 09H
                get_string 15,filename  ;see Function 0AH
                display   crlf         ;see Function 09H
                parse     filename[2],fcb ;see Function 29H
                create    fcb         ;see Function 16H
                mov       fcb[current_record],0 ;set Current
                                ;Record field

```

```
set_relative_record fcb      ;see Function 24H  
mov      ax, file_length  ;get size of original  
ran_block_write fcb,num_recs,1 ;see Function 28H  
close    fcb              ;see Function 10H
```


Parse File Name (Function 29H)

AX:		
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
IP		
FLAGSH		FLAGSL
CS		
DS		
SS		
ES		

Call

AH = 29H

AL

Controls parsing (see text)

DS:SI

String to parse

ES:DI

Unopened FCB

Return

AL

00H = No wild card characters

01H = Wild-card characters used

FFH (255) = Drive letter invalid

DS:SI

First byte past string that was parsed

ES:DI

Unopened FCB

SI must contain the offset (to the segment address in DS) of a string (command line) to parse; DI must contain the offset (to the segment address in ES) of an unopened FCB. The string is parsed for a filename of the form d:filename.ext; if one is found, a corresponding unopened FCB is created at ES:DI.

Bits 0-3 of AL control the parsing and processing. Bits 4-7 are ignored:

Bit	Value	Meaning
0	0	All parsing stops if a file separator is encountered.
	1	Leading separators are ignored.
1	0	The drive number in the FCB is set to 0 (default drive) if the string does not contain a drive number.
	1	The drive number in the FCB is not changed if the string does not contain a drive number.
2	1	The filename in the FCB is not changed if the string does not contain a filename.
	0	The filename in the FCB is set to 8 blanks if the string does not contain a filename.
3	1	The extension in the FCB is not changed if the string does not contain an extension.
	0	The extension in the FCB is set to 3 blanks if the string does not contain an extension.

If the filename or extension includes an asterisk (*), all remaining characters in the name or extension are set to question mark (?).

Filename separators:

: . ; , = + / " [] \ < > | space tab

Filename terminators include all the filename separators plus any control character. A filename cannot contain a filename terminator; if one is encountered, parsing stops.

If the string contains a valid filename:

1. AL returns 1 if the filename or extension contains a wild card character (* or ?); AL returns 0 if neither the filename nor extension contains a wild card character.
2. DS:SI point to the first character following the string that was parsed.

ES:DI point to the first byte of the unopened FCB.

If the drive letter is invalid, AL returns FFH (255). If the string does not contain a valid filename, ES:DI+1 points to a blank (ASCII 32).

```
Macro Definition: parse macro string, fcb
                    mov     si, offset string
                    mov     di, offset fcb
                    push    es
                    push    ds
                    pop     es
                    mov     al, 0FH ;bits 0, 1, 2, 3 on
                    mov     ah, 29H
                    int     21H
                    pop     es
                    endm
```

Example

The following program verifies the existence of the file named in reply to the prompt:

```
fcbl           db         37 dup (?)
prompt        db         "Filename: $"
reply         db         17 dup(?)
yes           db         "FILE EXISTS",13,10,"$"
no            db         "FILE DOES NOT EXIST",13,10,"$"
              .
              .
```

```
func_29H:  display  prompt      ;see Function 09H
           get_string 15,reply ;see Function 0AH
           parse     reply[2],fcb ;THIS FUNCTION
           search_first fcb      ;see Function 11H
           cmp       al,FFH      ;dir. entry found?
           je        not_there   ;no
           display   yes        ;see Function 09H
           jmp       continue
not_there: display   no
continue:  .
           .
```

Get Date (Function 2AH)

AX:	BH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Call
AH = 2AH

Return
CX
Year (1980 - 2099)
DH
Month (1 - 12)
DL
Day (1 - 31)
AL
Day of week (0=Sun., 6=Sat.)

This function returns the current date set in the operating system as binary numbers in CX and DX:

CX Year (1980-2099)
DH Month (1 = January, 2 = February, etc.)
DL Day (1-31)
AL Day of week (0 = Sunday, 1 = Monday, etc.)

Macro Definition: `get_date` macro
`mov ah,2AH`
`int 21H`
`endm`

Example

The following program gets the date, increments the day, increments the month or year, if necessary, and sets the new date:

```
month      db      31,28,31,30,31,30,31,31,30,31,30,31
           .
           .
func_2AH:  get_date      ;see above
           inc         dl      ;increment day
           xor         bx,bx    ;so BL can be used as index
           mov         bl,dh    ;move month to index register
           dec         bx      ;month table starts with 0
           cmp         dl,month[bx] ;past end of month?
           jle        month_ok  ;no, set the new date
           mov         dl,1     ;yes, set day to 1
           inc         dh      ;and increment month
           cmp         dh,12    ;past end of year?
```

```
        jle  month_ok      ;no, set the new date
        mov  dh,1          ;yes, set the month to 1
        inc  cx            ;increment year
month_ok: set_date cx,dh,d1 ;THIS FUNCTION
```

Set Date (Function 2BH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
	FLAGSH	FLAGSL
CS		
DS		
SS		
ES		

Call

AH = 2BH

CX

Year (1980 - 2099)

DH

Month (1 - 12)

DL

Day (1 - 31)

Return

AL

00H = Date was valid

FFH (255) = Date was invalid

Registers CX and DX must contain a valid date in binary:

CX Year (1980-2099)

DH Month (1 = January, 2 = February, etc.)

DL Day (1-31)

If the date is valid, the date is set and AL returns 0. If the date is not valid, the function is canceled and AL returns FFH (255).

```
Macro Definition: set_date macro year,month,day
                    mov     cx,year
                    mov     dh,month
                    mov     dl,day
                    mov     ah,2BH
                    int     21H
                    endm
```

Example

The following program gets the date, increments the day, increments the month or year, if necessary, and sets the new date:

```
month      db      31,28,31,30,31,30,31,31,30,31,30,31
          .
          .
func_2BH:  get_date          ;see Function 2AH
          inc     dl          ;increment day
          xor     bx,bx       ;so BL can be used as index
          mov     bl,dh       ;move month to index register
          dec     bx          ;month table starts with 0
          cmp     dl,month[bx] ;past end of month?
          jle     month_ok    ;no, set the new date
```

```
      mov     dl,1           ;yes, set day to 1
      inc     dh            ;and increment month
      cmp     dh,12        ;past end of year?
      jle     month_ok     ;no, set the new date
      mov     dh,1         ;yes, set the month to 1
      inc     cx           ;increment year
month_ok: set_date cx,dh,dl ;THIS FUNCTION
```

Get Time (Function 2CH)

AX:	BH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Call
AH = 2CH

Return
CH
Hour (0 - 23)
CL
Minutes (0 - 59)
DH
Seconds (0 - 59)
DL
Hundredths (0 - 99)

This function returns the current time set in the operating system as binary numbers in CX and DX:

CH Hour (0-23)
CL Minutes (0-59)
DH Seconds (0-59)
DL Hundredths of a second (0-99)

```
Macro Definition: get_time macro
                    mov     ah,2CH
                    int     21H
                    endm
```

Example

The following program continuously displays the time until any key is pressed:

```
time          db      "00:00:00.00",13,10,"$"
ten           db      10
.
.
func_2CH:     get_time          ;THIS FUNCTION
              convert ch,ten,time ;see end of chapter
              convert cl,ten,time[3] ;see end of chapter
              convert dh,ten,time[6] ;see end of chapter
              convert dl,ten,time[9] ;see end of chapter
              display time       ;see Function 09H
              check_kbd status   ;see Function 0BH
              cmp     al,FFH     ;has a key been pressed?
              je      all_done   ;yes, terminate
              jmp     func_2CH   ;no, display time
```


Set Time (Function 2DH)

AX:	BH	BL
BX:	BH	BL
CX:	DH	DL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGS _H	FLAGS _L

CS
DS
SS
ES

Call
 AH = 2DH
 CH
 Hour (0 - 23)
 CL
 Minutes (0 - 59)
 DH
 Seconds (0 - 59)
 DL
 Hundredths (0 - 99)

Return
 AL
 00H = Time was valid
 FFH (255) = Time was invalid

Registers CX and DX must contain a valid time in binary:

CH Hour (0-23)
 CL Minutes (0-59)
 DH Seconds (0-59)
 DL Hundredths of a second (0-99)

If the time is valid, the time is set and AL returns 0. If the time is not valid, the function is canceled and AL returns FFH (255).

Macro Definition:

```
set_time macro hour,minutes,seconds,hundredths
    mov     ch,hour
    mov     cl,minutes
    mov     dh,seconds
    mov     dl,hundredths
    mov     ah,2DH
    int     21H
endm
```

Example

The following program sets the system clock to 0 and continuously displays the time. When a character is typed, the display freezes; when another character is typed, the clock is reset to 0 and the display starts again:

```
time          db  "00:00:00.00",13,10,"$"
ten           db  10
.
.
func_2DH:     set_time  0,0,0,0           ;THIS FUNCTION
read_clock:   get_time                    ;see Function 2CH
```

```
convert ch,ten,time ;see end of chapter
convert cl,ten,time[3] ;see end of chapter
convert dh,ten,time[6] ;see end of chapter
convert dl,ten,time[9] ;see end of chapter
display time ;see Function 09H
dir_console_io FFH ;see Function 06H
cmp al,00H ;was a char. typed?
jne stop ;yes, stop the timer
jmp read_clock ;no keep timer on
stop: read_kbd ;see Function 08H
      jmp func_2DH ;keep displaying time
```

Set/Reset Verify Flag (Function 2EH)

AX:		
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
FLAGSH		FLAGSL
CS		
DS		
SS		
ES		

Call
 AH = 2EH
 AL
 00H = Do not verify
 01H = Verify

Return
 None

AL must be either 1 (verify after each disk write) or 0 (write without verifying). MS-DOS checks this flag each time it writes to a disk.

The flag is normally off; you may wish to turn it on when writing critical data to disk. Because disk errors are rare and verification slows writing, you will probably want to leave it off at other times.

```
Macro Definition: verify macro switch
                   mov     al,switch
                   mov     ah,2EH
                   int     21H
                   endm
```

Example

The following program copies the contents of a single-sided disk in drive A: to the disk in drive B:, verifying each write. It uses a buffer of 32K bytes:

```
on           equ     1
off          equ     0
.
.
prompt       db      "Source in A, target in B",13,10
             db      "Any key to start. $"
start        dw      0
buffer       db      64 dup (512 dup(?)) ;64 sectors
.
.
func_2DH:    display prompt ;see Function 09H
             read_kbd      ;see Function 08H
             verify on     ;THIS FUNCTION
```

```

        mov     cx,5                ;copy 64 sectors
                                       ;5 times
copy:   push    cx                  ;save counter
        abs_disk_read 0,buffer,64,start
                                       ;see Interrupt 25H
        abs_disk_write 1,buffer,64,start
                                       ;see Interrupt 26H
        add     start,64            ;do next 64 sectors
        pop     cx                  ;restore counter
        loop   copy                 ;do it again
        verify off                  ;THIS FUNCTION

disk_read 0,buffer,64,start          ;see Interrupt 25H
        abs_disk_write 1,buffer,64,start
                                       ;see Interrupt 26H
        add     start,64            ;do next 64 sectors
        pop     cx                  ;restore counter
        loop   copy                 ;do it again
        verify off
```

Get Disk Transfer Address (Function 2FH)

AX:		AL
BX:		BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 2FH

SP
BP
SI
DI

Return
ES:BX
Points to Disk Transfer Address

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 2FH returns the DMA transfer address.

Error returns:
None.

Example

```
mov     ah,2FH
int     21H
        ;es:bx has current DMA transfer address
```

Get DOS Version Number (Function 30H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL

Call
AH = 30H

SP
BP
SI
DI

Return
AL
Major version number
AH
Minor version number

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

This function returns the MS-DOS version number. On return, AL.AH will be the two-part version designation; i.e., for MS-DOS 1.28, AL would be 1 and AH would be 28. For pre-1.28, DOS AL = 0. Note that version 1.1 is the same as 1.10, not the same as 1.01.

Error returns:
None.

Example

```

mov     ah,30H
int     21H
; al is the major version number
; ah is the minor version number
; bh is the OEM number
; bl:cx is the (24 bit) user number

```

Keep Process (Function 31H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 31H

AL
Exit code

DX
Memory size, in paragraphs

SP
BP
SI
DI

Return
None

IP	
FLAGS _H	FLAGS _L

CS
DS
SS
ES

This call terminates the current process and attempts to set the initial allocation block to a specific size in paragraphs. It will not free up any other allocation blocks belonging to that process. The exit code passed in AX is retrievable by the parent via Function 4DH.

This method is preferred over Interrupt 27H and has the advantage of allowing more than 64K to be kept.

Error returns:
None.

Example

```

mov     al, exitcode
mov     dx, parasize
mov     ah, 31H
int     21H

```

CONTROL-C Check (Function 33H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL
DX:		
SP		
BP		
SI		
DI		
IP		
FLAGSH		FLAGSL
CS		
DS		
SS		
ES		

Call

AH = 33H

AL

Function

00H = Request current state

01H = Set state

DL (if setting)

00H = Off

01H = On

Return

DL

00H = Off

01H = On

MS-DOS ordinarily checks for a CONTROL-C on the controlling device only when doing function call operations 01H-0CH to that device. Function 33H allows the user to expand this checking to include any system call. For example, with the CONTROL-C trapping off, all disk I/O will proceed without interruption; with CONTROL-C trapping on, the CONTROL-C interrupt is given at the system call that initiates the disk operation.

NOTE

Programs that wish to use calls 06H or 07H to read CONTROL-Cs as data must ensure that the CONTROL-C check is off.

Error return:

AL = FF

The function passed in AL was not in the range 0:1.

Example

```

mov     dl,val
mov     ah,33H
mov     al,func

```



```
int      21H  
; If al was 0, then dl has the current value  
;of the CONTROL-C check
```

Get Interrupt Vector (Function 35H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 35H
 AL
 Interrupt number

SP
BP
SI
DI

Return
 ES:BX
 Pointer to interrupt routine

IP	
FLAGSH	FLAGSL

CS
DS
SS

This function returns the interrupt vector associated with an interrupt. Note that programs should never get an interrupt vector by reading the low memory vector table directly.

Error returns:
 None.

Example

```

mov     ah,35H
mov     al,interrupt
int     21H
; es:bx now has long pointer to interrupt routine

```

Get Disk Free Space (Function 36H)

AX:	00H	00H
BX:	00H	00H
CX:	00H	00H
DX:	00H	00H

SP	
BP	
SI	
DI	

IP	
FLAGSH	FLAGSL

CS	
DS	
SS	
ES	

Call

AH = 36H

DL

Drive (0 = Default,
1 = A, etc.)

Return

BX

Available clusters

DX

Clusters per drive

CX

Bytes per sector

AX

FFFF if drive number is invalid;
otherwise sectors per cluster

This function returns free space on disk along with additional information about the disk.

Error returns:

AX = FFFF

The drive number given in DL was invalid.

Example

```

mov     ah,36H
mov     dl,Drive           ;0 = default, A = 1
int     21H
; bx = Number of free allocation units on drive
; dx = Total number of allocation units on drive
; cx = Bytes per sector
; ax = Sectors per allocation unit

```

Return Country-Dependent Information (Function 38H)

AX:		
BX:	BH	BL
CX:	CH	CL
DX:		
SP		
BP		
SI		
DI		
IP		
FLAGSH		FLAGSL
CS		
DS		
SS		
ES		

Call

AH = 38H

DS:DX

Pointer to 32-byte memory area

AL

Function code. In MS-DOS 2.0, must be 0

Return

Carry set:

AX

2 = file not found

Carry not set:

DX:DS filled in with country data

The value passed in AL is either 0 (for current country) or a country code. Country codes are typically the international telephone prefix code for the country.

If DX = -1, then the call sets the current country (as returned by the AL=0 call) to the country code in AL. If the country code is not found, the current country is not changed.

NOTE

Applications must assume 32 bytes of information. This means the buffer pointed to by DS:DX must be able to accommodate 32 bytes.

This function is fully supported only in versions of MS-DOS 2.01 and higher. It exists in MS-DOS 2.0, but is not fully implemented

This function returns, in the block of memory pointed to by DS:DX, the following information pertinent to international applications:

WORD Date/time format
5 BYTE ASCIZ string currency symbol
2 BYTE ASCIZ string thousands separator
2 BYTE ASCIZ string decimal separator
2 BYTE ASCIZ string date separator
2 BYTE ASCIZ string time separator
1 BYTE Bit field
1 BYTE Currency places
1 BYTE time format
DWORD Case Mapping call
2 BYTE ASCIZ string data list separator

The format of most of these entries is ASCIZ (a NUL terminated ASCII string), but a fixed size is allocated for each field for easy indexing into the table.

The date/time format has the following values:

- 0 - USA standard h:m:s m/d/y
- 1 - Europe standard h:m:s d/m/y
- 2 - Japan standard y/m/d h:m:s

The bit field contains 8 bit values. Any bit not currently defined must be assumed to have a random value.

- Bit 0 = 0 If currency symbol precedes the
currency amount.
- = 1 If currency symbol comes after
the currency amount.
- Bit 1 = 0 If the currency symbol immediately
precedes the currency amount.
- = 1 If there is a space between the
currency symbol and the amount.

The time format has the following values:

- 0 - 12 hour time
- 1 - 24 hour time

The currency places field indicates the number of places which appear after the decimal point on currency amounts.

The Case Mapping call is a FAR procedure which will perform country specific lower-to-uppercase mapping on character values from 80H to FFH. It is called with the character to be mapped in AL. It returns the correct upper case code for that character, if any, in AL. AL and the FLAGS are the only registers altered. It is allowable to pass this routine codes below 80H; however nothing is done to characters in this range. In the case where there is no mapping, AL is not altered.

Error returns:

AX

2 = file not found

The country passed in AL was not found (no table for specified country).

Example

```
lds    dx, blk
mov    ah, 38H
mov    al, Country_code
int    21H
;AX = Country code of country returned
```

Create Sub-Directory (Function 39H)

AX:	EH	EL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 39H
 DX:DS
 Pointer to pathname

SP
BP
SI
DI

Return
 Carry set:
 AX

IP	
FLAGSH	FLAGL

3 = path not found
 5 = access denied
 Carry not set:
 No error

CS
DS
SS
ES

Given a pointer to an ASCII name, this function creates a new directory entry at the end.

Error returns:

AX
 3 = path not found
 The path specified was invalid or not found.
 5 = access denied
 The directory could not be created (no room in parent directory), the directory/file already existed or a device name was specified.

Example

```
lds    dx, name
mov    ah, 39H
int    21H
```

Remove a Directory Entry (Function 3AH)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL

Call
 AH = 3AH
 DS:DX
 Pointer to pathname

SP
BP
SI
DI

Return
 Carry set:
 AX

IP	
FLAGSH	FLAGL

3 = path not found
 5 = access denied
 16 = current directory

CS
DS
SS
ES

Carry not set:
 No error

Function 3AH is given an ASCIZ name of a directory. That directory is removed from its parent directory.

Error returns:

AX

- 3 = path not found
 The path specified was invalid or not found.
- 5 = access denied
 The path specified was not empty, not a directory, the root directory, or contained invalid information.
- 16 = current directory
 The path specified was the current directory on a drive.

Example

```
lds    dx, name
mov    ah, 3AH
int    21H
```


Change the Current Directory (Function 3BH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 3BH
 DS:DX
 Pointer to pathname

SP
BP
SI
DI

Return
 Carry set:
 AX

IP	
FLAGSH	FLAGSL

3 = path not found
 Carry not set:
 No error

CS
DS
SS
ES

Function 3BH is given the ASCIZ name of the directory which is to become the current directory. If any member of the specified pathname does not exist, then the current directory is unchanged. Otherwise, the current directory is set to the string.

Error returns:

AX

3 = path not found

The path specified in DS:DX either indicated a file or the path was invalid.

Example

```
lds    dx, name
mov    ah, 3BH
int    21H
```

Create a File (Function 3CH)

AX:	SP	BP
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
	SP	
	BP	
	SI	
	DI	
	IP	
	FLAGSH	FLAGL
	CS	
	DS	
	SS	
	ES	

Call

AH = 3CH

DS:DX

Pointer to pathname

CX

File attribute

Return

Carry set:

AX

5 = access denied

3 = path not found

4 = too many open files

Carry not set:

AX is handle number

Function 3CH creates a new file or truncates an old file to zero length in preparation for writing. If the file did not exist, then the file is created in the appropriate directory and the file is given the attribute found in CX. The file handle returned has been opened for read/write access.

Error returns:

AX

5 = access denied

The attributes specified in CX contained one that could not be created (directory, volume ID), a file already existed with a more inclusive set of attributes, or a directory existed with the same name.

3 = path not found

The path specified was invalid.

4 = too many open files

The file was created with the specified attributes, but there were no free handles available for the process, or the internal system tables were full.

Example

```
lds    dx, name
mov    ah, 3CH
mov    cx, attribute
int    21H
      ; ax now has the handle
```

Open a File (Function 3DH)

AX:	AH		AL
BX:	BH	BL	
CX:	CH	CL	
DX:	DH	DL	
SP			
BP			
SI			
DI			
IP			
FLAGSH		FLAGL	
CS			
DS			
SS			
ES			

Call

AH = 3DH

AL

Access

0 = File opened for reading
 1 = File opened for writing
 2 = File opened for both
 reading and writing

Return

Carry set:

AX

12 = invalid access
 2 = file not found
 5 = access denied
 4 = too many open files

Carry not set:

AX is handle number

3 Path not found { at least }

Function 3DH associates a 16-bit file handle with a file.

The following values are allowed:

ACCESS Function

 0 file is opened for reading
 1 file is opened for writing
 2 file is opened for both reading and writing.

DS:DX point to an ASCIZ name of the file to be opened.

The read/write pointer is set at the first byte of the file and the record size of the file is 1 byte. The returned file handle must be used for subsequent I/O to the file.

Error returns:

AX

12 = invalid access

The access specified in AL was not in the range 0:2.

2 = file not found

The path specified was invalid or not found.

5 = access denied

The user attempted to open a directory or volume-id, or open a read-only file for writing.

4 = too many open files

There were no free handles available in the current process or the internal system tables were full.

Example

```
lds    dx, name
mov    ah, 3DH
mov    al, access
int    21H
; ax has error or file handle
; If successful open
```

Close a File Handle (Function 3EH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 3EH
 BX
 File handle

SP
BP
SI
DI

Return
 Carry set:
 AX

IP	
FLAGSH	FLAGL

6 = invalid handle
 Carry not set:
 No error

CS
DS
SS
ES

In BX is passed a file handle (like that returned by Functions 3DH, 3CH, or 45H), Function 3EH closes the associated file. Internal buffers are flushed.

Error return:

AX

6 = invalid handle

The handle passed in BX was not currently open.


Example

```

mov    bx, handle
mov    ah, 3EH
int    21H

```

Read From File/Device (Function 3FH)

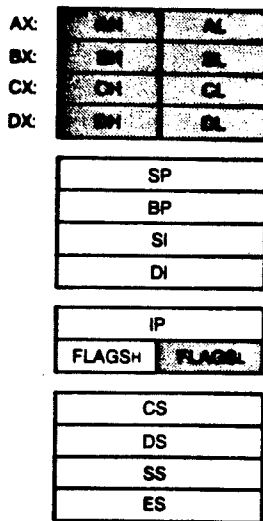

Call

AH = 3FH

DS:DX

Pointer to buffer

CX

Bytes to read

BX

File handle

Return

Carry set:

AX

Number of bytes read

6 = invalid handle

5 = error set:

Carry not set:

AX = number of bytes read

Function 3FH transfers count bytes from a file into a buffer location. It is not guaranteed that all count bytes will be read; for example, reading from the keyboard will read at most one line of text. If the returned value is zero, then the program has tried to read from the end of file.

All I/O is done using normalized pointers; no segment wraparound will occur.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

5 = access denied

The handle passed in BX was opened in a mode that did not allow reading.

Example

```
lds    dx, buf
mov    cx, count
mov    bx, handle
mov    ah, 3FH
int    21H
; ax has number of bytes read
```

Write to a File or Device (Function 40H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGS _H	FLAGS _L

CS
DS
SS
ES

Call
 AH = 40H
 DS:DX
 Pointer to buffer
 CX
 Bytes to write
 BX
 File handle

Return
 Carry set:
 AX
 Number of bytes written
 6 = invalid handle
 5 = access denied
 Carry not set:
 AX = number of bytes written

Function 40H transfers count bytes from a buffer into a file. It should be regarded as an error if the number of bytes written is not the same as the number requested.

The write system call with a count of zero (CX = 0) will set the file size to the current position. Allocation units are allocated or released as required.

All I/O is done using normalized pointers; no segment wraparound will occur.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

5 = access denied

The handle was not opened in a mode that allowed writing.

Example

```
lds    dx, buf
mov    cx, count
mov    bx, handle
mov    ah, 40H
int    21H
;ax has number of bytes written
```

Delete a Directory Entry (Function 41H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 41H

DS:DX

Pointer to pathname

SP
BP
SI
DI

Return

Carry set:

AX

2 = file not found

5 = access denied

Carry not set:

No error

IP	
FLAGSH	FLAGL

CS
DS
SS
ES

Function 41H removes a directory entry associated with a filename.

Error returns:

AX

2 = file not found

The path specified was invalid or not found.




5 = access denied

The path specified was a directory or read-only.

Example

```
lds    dx, name
mov    ah, 41H
int    21H
```


Move File Pointer (Function 42H)

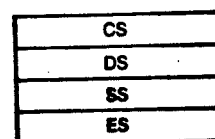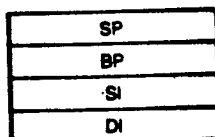

Call
 AH = 42H
 CX:DX
 Distance to move, in bytes
 AL
 Method of moving:
 (see text)
 BX
 File handle

Return
 Carry set:
 AX
 6 = invalid handle
 1 = invalid function
 Carry not set:
 DX:AX = new pointer location

Function 42H moves the read/write pointer according to one of the following methods:

Method Function

- | Method | Function |
|--------|--|
| 0 | The pointer is moved to offset bytes from the beginning of the file. |
| 1 | The pointer is moved to the current location plus offset. |
| 2 | The pointer is moved to the end of file plus offset. |

Offset should be regarded as a 32-bit integer with CX occupying the most significant 16 bits.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

1 = invalid function

The function passed in AL was not in the range 0:2.

Example

```

mov     dx, offsetlow
mov     cx, offsethigh
mov     al, method
mov     bx, handle
mov     ah, 42H
int     21H
; dx:ax has the new location of the pointer

```

Change Attributes (Function 43H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGSH	FLAGL

CS
DS
SS
ES

Call

AH = 43H

DS:DX

Pointer to pathname

CX (if AL = 01)

Attribute to be set

AL

Function

01 Set to CX

00 Return in CX

Return

Carry set:

AX

3 = path not found

5 = access denied

1 = invalid function

Carry not set:

CX attributes (if AL = 00)

Given an ASCIZ name, Function 42H will set/get the attributes of the file to those given in CX.

A function code is passed in AL:

AL Function

-- -----

0 Return the attributes of the file in CX.

1 Set the attributes of the file to those in CX.

Error returns:

AX

3 = path not found

The path specified was invalid.

5 = access denied

The attributes specified in CX contained one that could not be changed (directory, volume ID).

1 = invalid function

The function passed in AL was not in the range 0:1.


Example

```

lds    dx, name
mov    cx, attribute
mov    al, func
int    ah, 43H
int    21H

```

I/O Control for Devices (Function 44H)

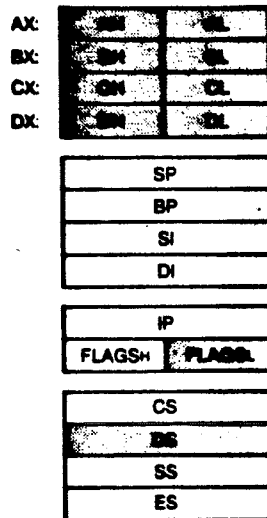

Call

AH = 44H

BX

Handle

BL

Drive (for calls AL = 4, 5
Ø = default, 1 = A, etc.)

DS:DX

Data or buffer

CX

Bytes to read or write

AL

Function code; see text

Return

Carry set:

AX

6 = invalid handle
1 = invalid function
13 = invalid data
5 = access denied

Carry not set:

AL = 2,3,4,5

AX = Count transferred

AL = 6,7

ØØ = Not ready

FF = Ready

Function 44H sets or gets device information associated with an open handle, or sends/receives a control string to a device handle or device.

The following values are allowed for function:


Request Function

Request	Function
Ø	Get device information (returned in DX)
1	Set device information (as determined by DX)
2	Read CX number of bytes into DS:DX from device control channel.
3	Write CX number of bytes from DS:DX to device control channel.
4	Same as 2 only drive number in BL Ø=default, A:=1, B:=2, ...
5	Same as 3 only drive number in BL Ø=default, A:=1, B:=2, ...
6	Get input status
7	Get output status

This function can be used to get information about device channels. Calls can be made on regular files, but only calls Ø, 6 and 7 are defined in that case (AL=Ø, 6, 7). All other calls return an invalid function error.

Calls AL=0 and AL=1

The bits of DX are defined as follows for calls AL=0 and AL=1. Note that the upper byte MUST be zero on a set call.

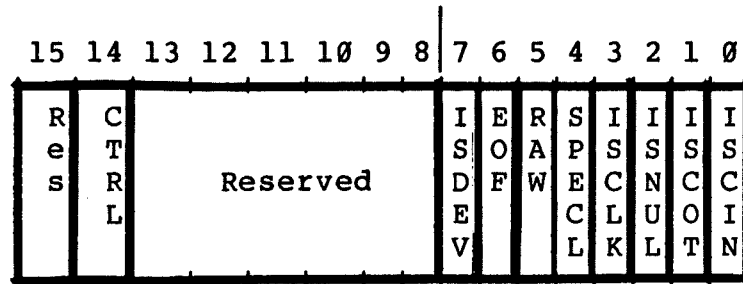

ISDEV = 1 if this channel is a device
 = 0 if this channel is a disk file (Bits 8-15
 = 0 in this case)

If ISDEV = 1

EOF = 0 if End Of File on input
 RAW = 1 if this device is in Raw mode
 = 0 if this device is cooked
 ISCLK = 1 if this device is the clock device
 ISNUL = 1 if this device is the null device
 ISCOT = 1 if this device is the console output
 ISCIN = 1 if this device is the console input
 SPECL = 1 if this device is special

CTRL = 0 if this device can not do control
 strings via calls AL=2 and AL=3.
 CTRL = 1 if this device can process
 control strings via calls AL=2 and
 AL=3.

NOTE that this bit cannot be set.

If ISDEV = 0
 EOF = 0 if channel has been written
 Bits 0-5 are the block device number for
 the channel (0 = A:, 1 = B:, ...)

Bits 15,8-13,4 are reserved and should not be
 altered.

Calls 2..5:

These four calls allow arbitrary control strings to be sent or received from a device. The call syntax is the same as the read and write calls, except for 4 and 5, which take a drive number in BL instead of a handle in BX.

An invalid function error is returned if the CTRL bit (see above) is 0.

An access denied is returned by calls AL=4,5 if the drive number is invalid.

Calls 6,7:

These two calls allow the user to check if a file handle is ready for input or output. Status of handles open to a device is the intended use of these calls, but status of a handle open to a disk file is allowed, and is defined as follows:

Input:

Always ready (AL=FF) until EOF reached, then always not ready (AL=0) unless current position changed via LSEEK.

Output:

Always ready (even if disk full).

IMPORTANT

The status is defined at the time the system is CALLED. On future versions, by the time control is returned to the user from the system, the status returned may NOT correctly reflect the true current state of the device or file.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

1 = invalid function

The function passed in AL was not in the range 0:7.

13 = invalid data

5 = access denied (calls AL=4..7)

Example

```
    mov     bx, Handle
(or mov    bl, drive   for calls AL=4,5
                        0=default,A:=1...)
    mov     dx, Data
(or lds    dx, buf     and
    mov     cx, count  for calls AL=2,3,4,5)
    mov     ah, 44H
    mov     al, func
    int     21H
; For calls AL=2,3,4,5 AX is the number of bytes
; transferred (same as READ and WRITE).
; For calls AL=6,7 AL is status returned, AL=0 if
; status is not ready, AL=0FFH otherwise.
```

Duplicate a File Handle (Function 45H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 45H
 BX
 File handle

SP
BP
SI
DI

Return
 Carry set:
 AX

IP	
FLAGSH	FLAGSL

6 = invalid handle
 4 = too many open files
 Carry not set:
 AX = new file handle

CS
DS
SS
ES

Function 45H takes an already opened file handle and returns a new handle that refers to the same file at the same position.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

4 = too many open files

There were no free handles available in the current process or the internal system tables were full.

Example

```

mov     bx, fh
mov     ah, 45H
int     21H
; ax has the returned handle

```

Force a Duplicate of a Handle (Function 46H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Call

AH = 46H

BX

Existing file handle

CX

New file handle

Return

Carry set:

AX

6 = invalid handle

4 = too many open files

Carry not set:

No error

Function 46H takes an already opened file handle and returns a new handle that refers to the same file at the same position. If there was already a file open on handle CX, it is closed first.

Error returns:

AX

6 = invalid handle

The handle passed in BX was not currently open.

4 = too many open files

There were no free handles available in the current process or the internal system tables were full.

Example

```

mov     bx, fh
mov     cx, newfh
mov     ah, 46H
int     21H

```


Return Text of Current Directory (Function 47H)

AX:	BH	BL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call

AH = 47H

DS:SI

Pointer to 64-byte memory area

DL

Drive number

SP
BP
IP
DI

Return

Carry set:

AX

15 = invalid drive

Carry not set:

No error

IF	FLAGSH	FLAGL
----	--------	-------

CS
DS
SS
ES

Function 47H returns the current directory for a particular drive. The directory is root-relative and does not contain the drive specifier or leading path separator. The drive code passed in DL is 0=default, 1=A:, 2=B:, etc.

Error returns:

AX

15 = invalid drive

The drive specified in DL was invalid.

Example

```

mov     ah, 47H
lds     si,area
mov     dl,drive
int     21H
; ds:si is a pointer to 64 byte area that
; contains drive current directory.

```

Allocate Memory (Function 48H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

SP
BP
SI
DI

IP
FLAGSH
FLAGS

CS
DS
SS
ES

Call

AH = 48H

BX

Size of memory to be allocated

Return

Carry set:

AX

8 = not enough memory

7 = arena trashed

BX

Maximum size that could be allocated

Carry not set:

AX:0

Pointer to the allocated memory

Function 48H returns a pointer to a free block of memory that has the requested size in paragraphs.

Error return:

AX

8 = not enough memory

The largest available free block is smaller than that requested or there is no free block.

7 = arena trashed

The internal consistency of the memory arena has been destroyed. This is due to a user program changing memory that does not belong to it.

Example

```

mov     bx,size
mov     ah,48H
int     21H
; ax:0 is pointer to allocated memory
; if alloc fails, bx is the largest block available

```

Free Allocated Memory (Function 49H)

AX:		
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
FLAGSH		FLAGL
CS		
DS		
SS		
ES		

Call

AH = 49H

ES

Segment address of memory
area to be freed

Return

Carry set:

AX

9 = invalid block

7 = arena trashed

Carry not set:

No error

Function 49H returns a piece of memory to the system pool that was allocated by Function Request 49H.

Error return:

AX

9 = invalid block

The block passed in ES is not one allocated
via Function Request 49H.

7 = arena trashed

The internal consistency of the memory arena
has been destroyed. This is due to a user
program changing memory that does not belong
to it.


Example

```

mov     es,block
mov     ah,49H
int     21H

```

Modify Allocated Memory Blocks (Function 4AH)

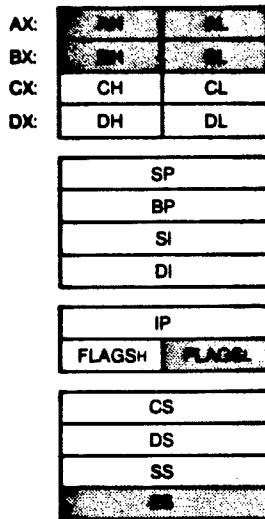

Call

AH = 4AH

ES

Segment address of memory area

BX

Requested memory area size

Return

Carry set:

AX

9 = invalid block

7 = arena trashed

8 = not enough memory

BX

Maximum size possible

Carry not set:

No error

Function 4AH will attempt to grow/shrink an allocated block of memory.

Error return:

AX

9 = invalid block

The block passed in ES is not one allocated via this function.

7 = arena trashed

The internal consistency of the memory arena has been destroyed. This is due to a user program changing memory that does not belong to it.

8 = not enough memory

There was not enough free memory after the specified block to satisfy the grow request.


Example

```

mov     es,block
mov     bx,newsize
mov     ah,4AH
int     21H
; if setblock fails for growing, BX will have the
; maximum size possible

```

Load and Execute a Program (Function 4BH)

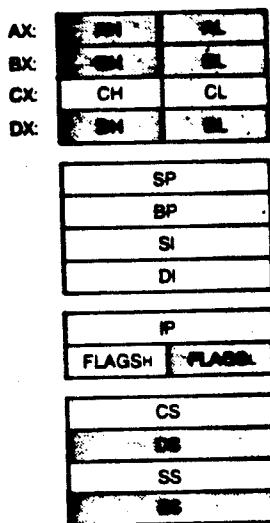

Call

AH = 4BH

DS:DX

Pointer to pathname

ES:BX

Pointer to parameter block

AL

00 = Load and execute program

03 = Load program

Return

Carry set:

AX

1 = invalid function

10 = bad environment

11 = bad format

8 = not enough memory

2 = file not found

Carry not set:

No error

This function allows a program to load another program into memory and (default) begin execution of it. DS:DX points to the ASCIZ name of the file to be loaded. ES:BX points to a parameter block for the load.

A function code is passed in AL:

AL Function

- 0 Load and execute the program. A program header is established for the program and the terminate and CONTROL-C addresses are set to the instruction after the EXEC system call.
- 3 Load (do not create) the program header, and do not begin execution. This is useful in loading program overlays.

For each value of AL, the block has the following format:

AL = 0 -> load/execute program

WORD segment address of environment.
DWORD pointer to command line at 80H
DWORD pointer to default FCB to be passed at 5CH
DWORD pointer to default FCB to be passed at 6CH

AL = 3 -> load overlay

WORD segment address where file will be loaded.
WORD relocation factor to be applied to the image.

Note that all open files of a process are duplicated in the child process after an EXEC. This is extremely powerful; the parent process has control over the meanings of stdin, stdout, stderr, stderr and stderr. The parent could, for example, write a series of records to a file, open the file as standard input, open a listing file as standard output and then EXEC a sort program that takes its input from stdin and writes to stdout.

Also inherited (or passed from the parent) is an "environment." This is a block of text strings (less than 32K bytes total) that convey various configurations parameters. The format of the environment is as follows:

(paragraph boundary)

BYTE ASCIZ string 1
BYTE ASCIZ string 2
...
BYTE ASCIZ string n
BYTE of zero

Typically the environment strings have the form:

parameter=value

For example, COMMAND.COM might pass its execution search path as:

PATH=A:\BIN;B:\BASIC\LIB

A zero value of the environment address causes the child process to inherit the parent's environment unchanged.

Error returns:

AX

1 = invalid function

The function passed in AL was not 0, 1 or 3.

10 = bad environment

The environment was larger than 32Kb.

11 = bad format

The file pointed to by DS:DX was an EXE format file and contained information that was internally inconsistent.

8 = not enough memory

There was not enough memory for the process to be created.

2 = file not found

The path specified was invalid or not found.

Example

```
lds    dx, name
les    bx, blk
mov    ah, 4BH
mov    al, func
int    21H
```

Terminate a Process (Function 4CH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
 AH = 4CH
 AL
 Return code

SP
BP
SI
DI

Return
 None

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 4CH terminates the current process and transfers control to the invoking process. In addition, a return code may be sent. All files open at the time are closed.

This method is preferred over all others (Interrupt 20H, JMP 0) and has the advantage that CS:0 does not have to point to the Program Header Prefix.

Error returns:
 None.

Example

```

mov     al, code
mov     ah, 4CH
int     21H
```


Retrieve the Return Code of a Child (Function 4DH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 4DH

SP
BP
SI
DI

Return
AX
Exit code

IP	
FLAGSH	FLAGSL

CS
DS
SS
ES

Function 4DH returns the Exit code specified by a child process. It returns this Exit code only once. The low byte of this code is that sent by the Exit routine. The high byte is one of the following:

- 0 - Terminate/abort
- 1 - CONTROL-C
- 2 - Hard error
- 3 - Terminate and stay resident

Error returns:
None.

Example

```
mov     ah, 4DH
int     21H
; ax has the exit code
```

Find Match File (Function 4EH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
FLAGSH		FLAGL
CS		
DB		
SS		
ES		

Call
 AH = 4EH
 DS:DX
 Pointer to pathname
 CX
 Search attributes

Return
 Carry set:
 AX
 2 = file not found
 18 = no more files
 Carry not set:
 No error

Function 4EH takes a pathname with wild-card characters in the last component (passed in DS:DX), a set of attributes (passed in CX) and attempts to find all files that match the pathname and have a subset of the required attributes. A datablock at the current DMA is written that contains information in the following form:

```

find_buf_reserved    DB  21 DUP (?); Reserved*
find_buf_attr        DB  ?  ; attribute found
find_buf_time        DW  ?  ; time
find_buf_date        DW  ?  ; date
find_buf_size_l      DW  ?  ; low(size)
find_buf_size_h      DW  ?  ; high(size)
find_buf_pname       DB  13 DUP (?); packed name
find_buf             ENDS

```

*Reserved for MS-DOS use on subsequent find_nexts

To obtain the subsequent matches of the pathname, see the description of Function 4FH.

Error returns:

AX

2 = file not found
 The path specified in DS:DX was an invalid path.

18 = no more files
 There were no files matching this specification.

Example

```
mov ah, 4EH
lds dx, pathname
mov cx, attr
int 21H
; dma address has datablock
```

Step Through a Directory Matching Files (Function 4FH)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL

Call
AH = 4FH

SP
BP
SI
DI

Return
Carry set:
AX
18 = no more files
Carry not set:
No error

IP	
FLAGSH	FLAGDL

CS
DS
SS
ES

Function 4FH finds the next matching entry in a directory. The current DMA address must point at a block returned by Function 4EH (see Function 4EH).

Error returns:

AX

18 = no more files

There are no more files matching this pattern.

Example

```

; dma points at area returned by Function 4FH
mov ah, 4FH
int 21H
; next entry is at dma

```

Return Current Setting of Verify After Write Flag
(Function 54H)

AX:	BH	BL
BX:	CH	CL
CX:	DH	DL

Call
AH = 54H

SP
BP
SI
DI

Return
AL
Current verify flag value

IP
FLAGSH
FLAGSL

CS
DS
SS
ES

The current value of the verify flag is returned in AL.

Error returns:
None.

Example

```

mov     ah,54H
int     21H
; al is the current verify flag value

```

Move a Directory Entry (Function 56H)

AX:	AH	AL
BX:	BH	BL
CX:	CH	CL
DX:	DH	DL
SP		
BP		
SI		
DI		
IP		
FLAGSH	FLAGS	
CS		
DS		
SS		

Call

AH = 56H

DS:DX

Pointer to pathname of
existing file

ES:DI

Pointer to new pathname

Return

Carry set:

AX

2 = file not found

17 = not same device

5 = access denied

Carry not set:

No error

Function 56H attempts to rename a file into another path.
The paths must be on the same device.

Error returns:

AX

2 = file not found

The file name specified by DS:DX was not found.

17 = not same device

The source and destination are on different
drives.


5 = access denied

The path specified in DS:DX was a directory or
the file specified by ES:DI exists or the
destination directory entry could not be
created.

Example

```
lds    dx, source
les    di, dest
mov    ah, 56H
int    21H
```

Get/Set Date/Time of File (Function 57H)

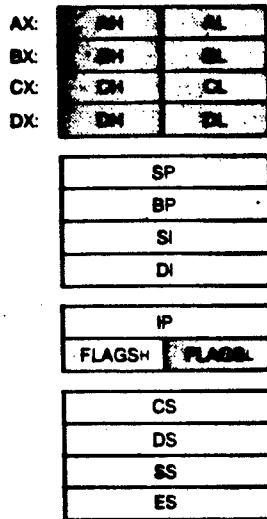

Call

AH = 57H

AL

00 = get date and time

01 = set date and time

BX

File handle

CX (if AL = 01)

Time to be set

DX (if AL = 01)

Date to be set

Return

Carry set:

AX

1 = invalid function

6 = invalid handle

Carry not set:

No error

CX/DX set if function 0

Function 57H returns or sets the last-write time for a handle. These times are not recorded until the file is closed.

A function code is passed in AL:

AL Function

-- -----

0 Return the time/date of the handle in CX/DX

1 Set the time/date of the handle to CX/DX

Error returns:

AX

1 = invalid function

The function passed in AL was not in the range 0:1.

6 = invalid handle

The handle passed in BX was not currently open.

Example

```

mov ah, 57H
mov al, func
mov bx, handle
    ; if al = 1 then then next two are mandatory
mov cx, time
mov dx, date
int 21H
    ; if al = 0 then cx/dx has the last write time/date
    ; for the handle.

```

1.8 MACRO DEFINITIONS FOR MS-DOS SYSTEM CALL EXAMPLES

NOTE

These macro definitions apply to system call examples 00H through 57H.

```
.xlist
;
;*****
; Interrupts
;*****
;
;ABS_DISK_READ
abs_disk_read macro disk,buffer,num_sectors,first_sector
    mov     al,disk
    mov     bx,offset buffer
    mov     cx,num_sectors
    mov     dx,first_sector
    int     37                ;interrupt 37
    popf
    endm
;
;ABS_DISK_WRITE
abs_disk_write macro disk,buffer,num_sectors,first_sector
    mov     al,disk
    mov     bx,offset buffer
    mov     cx,num_sectors
    mov     dx,first_sector
    int     38                ;interrupt 38
    popf
    endm
;
;STAY_RESIDENT
stay_resident macro last_instruc ;STAY_RESIDENT
    mov     dx,offset last_instruc
    inc     dx
    int     39                ;interrupt 39
    endm
;
;*****
; Functions
;*****
;
;READ_KBD_AND_ECHO
read_kbd_and_echo macro ;READ_KBD_AND_ECHO
    mov     ah,1
    int     33                ;function 1
    endm
;
;DISPLAY_CHAR
display_char macro character ;DISPLAY_CHAR
    mov     dl,character
```



```
        mov     ah,2           ;function 2
        int     33
        endm

;
aux_input macro                ;AUX_INPUT
        mov     ah,3           ;function 3
        int     33
        endm

;
aux_output macro              ;AUX_OUTPUT
        mov     ah,4           ;function 4
        int     33
        endm

;;page
print_char macro             ;PRINT_CHAR
        mov     dl,character
        mov     ah,5           ;function 5
        int     33
        endm

;
dir_console_io macro switch  ;DIR_CONSOLE_IO
        mov     dl,switch
        mov     ah,6           ;function 6
        int     33
        endm

;
dir_console_input macro      ;DIR_CONSOLE_INPUT
        mov     ah,7
        int     33
        endm

;
read_kbd macro               ;READ_KBD
        mov     ah,8           ;function 8
        int     33
        endm

;
display macro                ;DISPLAY
        mov     dx,offset string
        mov     ah,9           ;function 9
        int     33
        endm

;
get_string macro             ;GET_STRING
        mov     limit,string
        mov     string,limit
        mov     dx,offset string
        mov     ah,10         ;function 10
        int     33
        endm

;
check_kbd_status macro       ;CHECK_KBD_STATUS
        mov     ah,11         ;function 11
        int     33
        endm

;
flush_and_read_kbd macro     ;FLUSH_AND_READ_KBD
        switch
```

```
        mov     al,switch
        mov     ah,12             ;function 12
        int     33
    endm

;
;reset_disk macro                ;RESET DISK
        mov     ah,13           ;function 13
        int     33
    endm

;;page
select_disk macro disk          ;SELECT_DISK
        mov     dl,disk[-65]
        mov     ah,14           ;function 14
        int     33
    endm

;
open     macro     fcb           ;OPEN
        mov     dx,offset fcb
        mov     ah,15           ;function 15
        int     33
    endm

;
close    macro     fcb           ;CLOSE
        mov     dx,offset fcb
        mov     ah,16           ;function 16
        int     33
    endm

;
search_first macro fcb          ;SEARCH_FIRST
        mov     dx,offset fcb
        mov     ah,17           ;Function 17
        int     33
    endm

;
search_next macro fcb          ;SEARCH_NEXT
        mov     dx,offset fcb
        mov     ah,18           ;function 18
        int     33
    endm

;
delete   macro     fcb           ;DELETE
        mov     dx,offset fcb
        mov     ah,19           ;function 19
        int     33
    endm

;
read_seq macro fcb             ;READ_SEQ
        mov     dx,offset fcb
        mov     ah,20           ;function 20
        int     33
    endm

;
write_seq macro fcb            ;WRITE_SEQ
        mov     dx,offset fcb
        mov     ah,21           ;function 21
```

```
int 33
endm

;
create macro fcb ;CREATE
mov dx,offset fcb
mov ah,22 ;function 22
int 33
endm

;
rename macro fcb,newname ;RENAME
mov dx,offset fcb
mov ah,23 ;function 23
int 33
endm

;
current_disk macro ;CURRENT_DISK
mov ah,25 ;function 25
int 33
endm

;
set_dta macro buffer ;SET_DTA
mov dx,offset buffer
mov ah,26 ;function 26
int 33
endm

;
alloc_table macro ;ALLOC_TABLE
mov ah,27 ;function 27
int 33
endm

;
read_ran macro fcb ;READ_RAN
mov dx,offset fcb
mov ah,33 ;function 33
int 33
endm

;
write_ran macro fcb ;WRITE_RAN
mov dx,offset fcb
mov ah,34 ;function 34
int 33
endm

;
file_size macro fcb ;FILE_SIZE
mov dx,offset fcb
mov ah,35 ;function 35
int 33
endm

;
set_relative_record macro fcb ;SET_RELATIVE_RECORD
mov dx,offset fcb
mov ah,36 ;function 36
int 33
endm

;;page
```

```
set_vector macro interrupt,seg_addr,off_addr ;SET_VECTOR
    push    ds
    mov     ax,seg_addr
    mov     ds,ax
    mov     dx,off_addr
    mov     al,interrupt
    mov     ah,37                ;function 37
    int     33
endm

;
create_prog_seg macro seg_addr                ;CREATE_PROG_SEG
    mov     dx,seg_addr
    mov     ah,38                ;function 38
    int     33
endm

;
ran_block_read macro fcb,count,rec_size ;RAN_BLOCK_READ
    mov     dx,offset fcb
    mov     cx,count
    mov     word ptr fcb[14],rec_size
    mov     ah,39                ;function 39
    int     33
endm

;
ran_block_write macro fcb,count,rec_size ;RAN_BLOCK_WRITE
    mov     dx,offset fcb
    mov     cx,count
    mov     word ptr fcb[14],rec_size
    mov     ah,40                ;function 40
    int     33
endm

;
parse macro filename,fcb                ;PARSE
    mov     si,offset filename
    mov     di,offset fcb
    push    es
    push    ds
    pop     es
    mov     al,15
    mov     ah,41                ;function 41
    int     33
    pop     es
endm

;
get_date macro                ;GET_DATE
    mov     ah,42                ;function 42
    int     33
endm

;;page
set_date macro year,month,day                ;SET_DATE
    mov     cx,year
    mov     dh,month
    mov     dl,day
    mov     ah,43                ;function 43
    int     33
endm
```

```

        endm
;
get_time macro                                ;GET TIME
        mov     ah,44                          ;function 44
        int     33
        endm
;
set_time macro                                ;SET TIME
        hour,minutes,seconds,hundredths
        mov     ch,hour
        mov     cl,minutes
        mov     dh,seconds
        mov     dl,hundredths
        mov     ah,45                          ;function 45
        int     33
        endm
;
verify macro switch                          ;VERIFY
        mov     al,switch
        mov     ah,46                          ;function 46
        int     33
        endm
;
;*****
; General
;*****
;
move_string macro source,destination,num_bytes
                                ;MOVE_STRING
        push    es
        mov     ax,ds
        mov     es,ax
        assume  es:data
        mov     si,offset source
        mov     di,offset destination
        mov     cx,num_bytes
        rep movs es:destination,source
        assume  es:nothing
        pop     es
        endm
;
;
convert macro value,base,destination        ;CONVERT
        local  table,start
        jmp    start
table      db    "0123456789ABCDEF"
start:     mov     al,value
        xor     ah,ah
        xor     bx,bx
        div    base
        mov     bl,al
        mov     al,cs:table[bx]
        mov     destination,al
        mov     bl,ah
        mov     al,cs:table[bx]

```

```
        mov     destination[1],al
        endm

;;page
convert_to_binary macro string,number,value
                                ;CONVERT_TO_BINARY
        local   ten,start,calc,mult,no_mult
        jmp     start
ten     db      10
start:  mov     value,0
        xor     cx,cx
        mov     cl,number
        xor     si,si
calc:   xor     ax,ax
        mov     al,string[si]
        sub     al,48
        cmp     cx,2
        jl     no_mult
        push    cx
        dec     cx
mult:   mul     cs:ten
        loop   mult
        pop     cx
no_mult: add    value,ax
        inc    si
        loop   calc
        endm

;
convert_date macro dir_entry
        mov     dx,word ptr dir_entry[25]
        mov     cl,5
        shr     dl,cl
        mov     dh,dir_entry[25]
        and     dh,1fh
        xor     cx,cx
        mov     cl,dir_entry[26]
        shr     cl,1
        add     cx,1980
        endm

;
```

1.9 EXTENDED EXAMPLE OF MS-DOS SYSTEM CALLS

```

title DISK DUMP
zero equ 0
disk_B equ 1
sectors_per_read equ 9
cr equ 13
blank equ 32
period equ 46
tilde equ 126
    INCLUDE B:CALLS.EQU
;
subttl DATA SEGMENT
page +
data segment
;
input_buffer db 9 dup(512 dup(?))
output_buffer db 77 dup(" ")
db 0DH,0AH,"$"
start_prompt db "Start at sector: $"
sectors_prompt db "Number of sectors: $"
continue_prompt db "RETURN to continue $"
header db "Relative sector $"
end_string db 0DH,0AH,0AH,07H,"ALL DONE$"
;DELETE THIS
crlf db 0DH,0AH,"$"
table db "0123456789ABCDEF$"
;
ten db 10
sixteen db 16
;
start_sector dw 1
sector_num label byte
sector_number dw 0
sectors_to_dump dw sectors_per_read
sectors_read dw 0
;
buffer label byte
max_length db 0
current_length db 0
digits db 5 dup(?)
;
data ends
;
subttl STACK SEGMENT
page +
stack segment stack
dw 100 dup(?)
stack_top label word
stack ends
;
subttl MACROS
page +
;

```

```

        INCLUDE B:CALLS.MAC
;BLANK LINE
blank_line          macro          number
                    local          print_it
                    push           cx
                    call           clear_line
                    mov            cx,number
print_it:          display        output_buffer
                    loop           print_it
                    pop            cx
                    endm

;
subttl ADDRESSABILITY
page +
code
start:            segment
                    assume        cs:code,ds:data,ss:stack
                    mov           ax,data
                    mov           ds,ax
                    mov           ax,stack
                    mov           ss,ax
                    mov           sp,offset stack_top

;
                    jmp           main_procedure
subttl PROCEDURES
page +
;
; PROCEDURES
; READ DISK
read_disk         proc;
                    cmp           sectors_to_dump,zero
                    jle          done
                    mov           bx,offset input_buffer
                    mov           dx,start_sector
                    mov           al,disk_b
                    mov           cx,sectors_per_read
                    cmp           cx,sectors_to_dump
                    jle          get_sector
                    mov           cx,sectors_to_dump
get_sector:       push           cx
                    int           disk_read
                    popf
                    pop           cx
                    sub           sectors_to_dump,cx
                    add           start_sector,cx
                    mov           sectors_read,cx
                    xor           si,si
done:
read_disk
;CLEAR LINE
clear_line        proc;
                    push          cx
                    mov           cx,77
                    xor           bx,bx
move_blank:      mov           output_buffer[bx], ' '
                    inc           bx

```



```

                                loop      move_blank
                                pop       cx
                                ret
                                endp

clear_line
;
;PUT BLANK
put_blank

                                proc;
                                mov       output_buffer[di]," "
                                inc       di
                                ret
                                endp

put_blank
;
;
setup

                                proc;
                                display   start_prompt
                                get_string 4,buffer
                                display   crlf
                                convert_to_binary digits,
                                current_length,start_sector
                                mov       ax,start_sector
                                mov       sector_number,ax
                                display   sectors_prompt
                                get_string 4,buffer
                                convert_to_binary digits,
                                current_length,sectors_to_dump
                                ret
                                endp

setup
;
;CONVERT LINE
convert_line

                                proc;
                                push      cx
                                mov       di,9
                                mov       cx,16
                                convert   input_buffer[si],sixteen,
                                output_buffer[di]
                                inc       si
                                add       di,2
                                call      put_blank
                                loop      convert_it
                                sub       si,16
                                mov       cx,16
                                add       di,4
                                mov       output_buffer[di],period
                                cmp       input_buffer[si],blank
                                jl        non_printable
                                cmp       input_buffer[si],tilde
                                jg        non_printable
                                mov       dl,input_buffer[si]
                                mov       output_buffer[di],dl
                                inc       si
                                inc       di
                                loop      display_ascii
                                pop       cx
                                ret
                                endp

convert_it:
                                mov       output_buffer[di],dl
                                inc       di
                                loop      display_ascii
                                pop       cx
                                ret
                                endp

display_ascii:
                                mov       dl,input_buffer[si]
                                mov       output_buffer[di],dl
                                inc       si
                                inc       di
                                loop      display_ascii
                                pop       cx
                                ret
                                endp

printable:
                                mov       dl,input_buffer[si]
                                mov       output_buffer[di],dl
                                inc       si
                                inc       di
                                loop      display_ascii
                                pop       cx
                                ret
                                endp

non_printable:
                                mov       dl,input_buffer[si]
                                mov       output_buffer[di],dl
                                inc       si
                                inc       di
                                loop      display_ascii
                                pop       cx
                                ret
                                endp

convert_line

```

```

;
;DISPLAY_SCREEN
display_screen      proc;
                    push    cx
                    call    clear_line
;
                    mov     cx,17
;I WANT length header
                    dec     cx
;minus 1 in cx
move_header:       xor     di,di
                    mov     al,header[di]
                    mov     output_buffer[di],al
                    inc     di
                    loop    move_header    ;FIX THIS!
;
                    convert  sector_num[1],sixteen,
                    output_buffer[di]
                    add     di,2
                    convert  sector_num,sixteen,
                    output_buffer[di]
                    display  output_buffer
                    blank_line 2
dump_it:           mov     cx,16
                    call    clear_line
                    call    convert_line
                    display  output_buffer
                    loop    dump_it
                    blank_line 3
                    display  continue_prompt
                    get_char_no_echo
                    display  crlf
                    pop     cx
                    ret
display_screen     endp
;
;
;   END PROCEDURES
subttl MAIN PROCEDURE
page +
main_procedure:   call    setup
check_done:       cmp     sectors_to_dump,zero
                    jng     all_done
                    call    read_disk
                    mov     cx,sectors_read
display_it:       call    display_screen
                    call    display_screen
                    inc     sector_number
                    loop    display_it
                    jmp     check_done
all_done:         display  end_string
                    get_char_no_echo
code              ends
end               start

```

CHAPTER 2

MS-DOS 2.0 DEVICE DRIVERS

2.1 WHAT IS A DEVICE DRIVER?

A device driver is a binary file with all of the code in it to manipulate the hardware and provide a consistent interface to MS-DOS. In addition, it has a special header at the beginning that identifies it as a device, defines the strategy and interrupt entry points, and describes various attributes of the device.

NOTE

For device drivers, the file must not use the ORG 100H (like .COM files). Because it does not use the Program Segment Prefix, the device driver is simply loaded; therefore, the file must have an origin of zero (ORG 0 or no ORG statement).

There are two kinds of device drivers.

1. Character device drivers
2. Block device drivers

Character devices are designed to perform serial character I/O like CON, AUX, and PRN. These devices are named (i.e., CON, AUX, CLOCK, etc.), and users may open channels (handles or FCBS) to do I/O to them.

Block devices are the "disk drives" on the system. They can perform random I/O in pieces called blocks (usually the physical sector size). These devices are not named as the

character devices are, and therefore cannot be opened directly. Instead they are identified via the drive letters (A:, B:, C:, etc.).

Block devices also have units. A single driver may be responsible for one or more disk drives. For example, block device driver ALPHA may be responsible for drives A:,B:,C: and D:. This means that it has four units (0-3) defined and, therefore, takes up four drive letters. The position of the driver in the list of all drivers determines which units correspond to which driver letters. If driver ALPHA is the first block driver in the device list, and it defines 4 units (0-3), then they will be A:,B:,C: and D:. If BETA is the second block driver and defines three units (0-2), then they will be E:,F: and G:, and so on. MS-DOS 2.0 is not limited to 16 block device units, as previous versions were. The theoretical limit is 63 (26 - 1), but it should be noted that after 26 the drive letters are unconventional (such as], \, and ^).

NOTE

Character devices cannot define multiple units because they have only one name.

2.2 DEVICE HEADERS

A device header is required at the beginning of a device driver. A device header looks like this:

DWORD pointer to next device (Must be set to -1)
WORD attributes Bit 15 = 1 if char device 0 is blk if bit 15 is 1 Bit 0 = 1 if current sti device Bit 1 = 1 if current sto output Bit 2 = 1 if current NUL device Bit 3 = 1 if current CLOCK dev Bit 4 = 1 if special Bits 5-12 Reserved; must be set to 0 Bit 14 is the IOCTL bit Bit 13 is the NON IBM FORMAT bit
WORD pointer to device strategy entry point
WORD pointer to device interrupt entry point
8-BYTE character device name field Character devices set a device name. For block devices the first byte is the number of units

Figure 2. Sample Device Header

Note that the device entry points are words. They must be offsets from the same segment number used to point to this table. For example, if XXX:YYY points to the start of this table, then XXX:strategy and XXX:interrupt are the entry points.

2.2.1 Pointer To Next Device Field

The pointer to the next device header field is a double word field (offset followed by segment) that is set by MS-DOS to point at the next driver in the system list at the time the device driver is loaded. It is important that this field be set to -1 prior to load (when it is on the disk as a file) unless there is more than one device driver in the file. If there is more than one driver in the file, the first word of the double word pointer should be the offset of the next driver's Device Header.

NOTE

If there is more than one device driver in the .COM file, the last driver in the file must have the pointer to the next Device Header field set to -1.

2.2.2 Attribute Field

The attribute field is used to tell the system whether this device is a block or character device (bit 15). Most other bits are used to give selected character devices certain special treatment. (Note that these bits mean nothing on a block device). For example, assume that a user has a new device driver that he wants to be the standard input and output. Besides installing the driver, he must tell MS-DOS that he wants his new driver to override the current standard input and standard output (the CON device). This is accomplished by setting the attributes to the desired characteristics, so he would set bits 0 and 1 to 1 (note that they are separate!). Similarly, a new CLOCK device could be installed by setting that attribute. (Refer to Section 2.7, "The CLOCK Device," in this chapter for more information.) Although there is a NUL device attribute, the NUL device cannot be reassigned. This attribute exists so that MS-DOS can determine if the NUL device is being used.

The NON IBM FORMAT bit applies only to block devices and affects the operation of the BUILD BPB (Bios Parameter Block) device call. (Refer to Section 2.5.3, "MEDIA CHECK and BUILD BPB," for further information on this call).

The other bit of interest is the IOCTL bit, which has meaning on character and block devices. This bit tells MS-DOS whether the device can handle control strings (via the IOCTL system call, Function 44H).

If a driver cannot process control strings, it should initially set this bit to 0. This tells MS-DOS to return an error if an attempt is made (via Function 44H) to send or receive control strings to this device. A device which can process control strings should initialize the IOCTL bit to 1. For drivers of this type, MS-DOS will make calls to the IOCTL INPUT and OUTPUT device functions to send and receive IOCTL strings.

The IOCTL functions allow data to be sent and received by the device for its own use (for example, to set baud rate, stop bits, and form length), instead of passing data over

the device channel as does a normal read or write. The interpretation of the passed information is up to the device, but it must not be treated as a normal I/O request.

2.2.3 Strategy And Interrupt Routines

These two fields are the pointers to the entry points of the strategy and interrupt routines. They are word values, so they must be in the same segment as the Device Header.

2.2.4 Name Field

This is an 8-byte field that contains the name of a character device or the number of units of a block device. If it is a block device, the number of units can be put in the first byte. This is optional, because MS-DOS will fill in this location with the value returned by the driver's INIT code. Refer to Section 2.4, "Installation of Device Drivers" in this chapter for more information.

2.3 HOW TO CREATE A DEVICE DRIVER

In order to create a device driver that MS-DOS can install, you must write a binary file with a Device Header at the beginning of the file. Note that for device drivers, the code should not be originated at 100H, but rather at 0. The link field (pointer to next Device Header) should be -1, unless there is more than one device driver in the file. The attribute field and entry points must be set correctly.

If it is a character device, the name field should be filled in with the name of that character device. The name can be any legal 8-character filename.

MS-DOS always processes installable device drivers before handling the default devices, so to install a new CON device, simply name the device CON. Remember to set the standard input device and standard output device bits in the attribute word on a new CON device. The scan of the device list stops on the first match, so the installable device driver takes precedence.

NOTE

Because MS-DOS can install the driver anywhere in memory, care must be taken in any far memory references. You should not expect that your driver will always be loaded in the same place every time.

2.4 INSTALLATION OF DEVICE DRIVERS

MS-DOS 2.0 allows new device drivers to be installed dynamically at boot time. This is accomplished by INIT code in the BIOS, which reads and processes the CONFIG.SYS file.

MS-DOS calls upon the device drivers to perform their function in the following manner:

MS-DOS makes a far call to strategy entry, and passes (in a Request Header) the information describing the functions of the device driver.

This structure allows you to program an interrupt-driven device driver. For example, you may want to perform local buffering in a printer.

2.5 REQUEST HEADER

When MS-DOS calls a device driver to perform a function, it passes a Request Header in ES:BX to the strategy entry point. This is a fixed length header, followed by data pertinent to the operation being performed. Note that it is the device driver's responsibility to preserve the machine state (for example, save all registers on entry and restore them on exit). There is enough room on the stack when strategy or interrupt is called to do about 20 pushes. If more stack is needed, the driver should set up its own stack.

The following figure illustrates a Request Header.

REQUEST HEADER ->

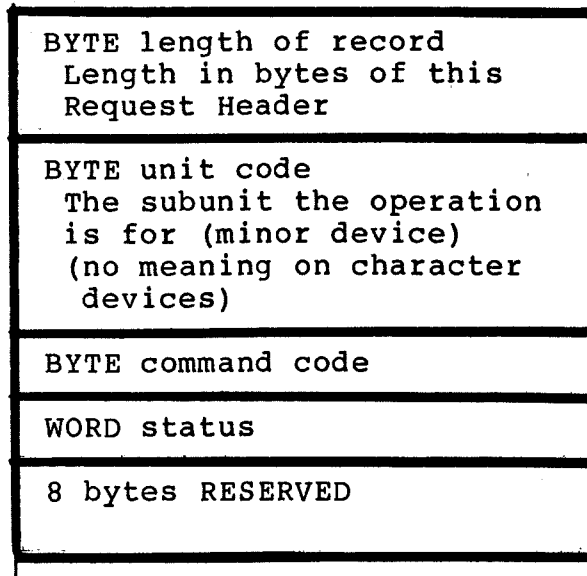


Figure 3. Request Header

2.5.1 Unit Code

The unit code field identifies which unit in your device driver the request is for. For example, if your device driver has 3 units defined, then the possible values of the unit code field would be 0, 1, and 2.

2.5.2 Command Code Field

The command code field in the Request header can have the following values:

Command Code	Function
0	INIT
1	MEDIA CHECK (Block only, NOP for character)
2	BUILD BPB " " " " "
3	IOCTL INPUT (Only called if device has IOCTL)
4	INPUT (read)
5	NON-DESTRUCTIVE INPUT NO WAIT (Char devs only)
6	INPUT STATUS " " "
7	INPUT FLUSH " " "
8	OUTPUT (write)
9	OUTPUT (Write) with verify
10	OUTPUT STATUS " " "
11	OUTPUT FLUSH " " "
12	IOCTL OUTPUT (Only called if device has IOCTL)

2.5.3 MEDIA CHECK And BUILD BPB

MEDIA CHECK and BUILD BPB are used with block devices only.

MS-DOS calls MEDIA CHECK first for a drive unit. MS-DOS passes its current media descriptor byte (refer to the section "Media Descriptor Byte" later in this chapter). MEDIA CHECK returns one of the following results:

Media Not Changed - current DPB and media byte are OK.

Media Changed - Current DPB and media are wrong. MS-DOS invalidates any buffers for this unit and calls the device driver to build the BPB with media byte and buffer.

Not Sure - If there are dirty buffers (buffers with changed data, not yet written to disk) for this unit, MS-DOS assumes the DPB and media byte are OK (media not changed). If nothing is dirty, MS-DOS assumes the media has changed. It invalidates any buffers for the unit, and calls the device driver to build the BPB with media byte and buffer.

Error - If an error occurs, MS-DOS sets the error code accordingly.

MS-DOS will call BUILD BPB under the following conditions:


If Media Changed is returned

If Not Sure is returned, and there are no dirty buffers

The BUILD BPB call also gets a pointer to a one-sector buffer. What this buffer contains is determined by the NON IBM FORMAT bit in the attribute field. If the bit is zero (device is IBM format-compatible), then the buffer contains the first sector of the first FAT. The FAT ID byte is the first byte of this buffer. NOTE: The BPB must be the same, as far as location of the FAT is concerned, for all possible media because this first FAT sector must be read before the actual BPB is returned. If the NON IBM FORMAT bit is set, then the pointer points to one sector of scratch space (which may be used for anything).

2.5.4 Status Word

The following figure illustrates the status word in the Request Header.

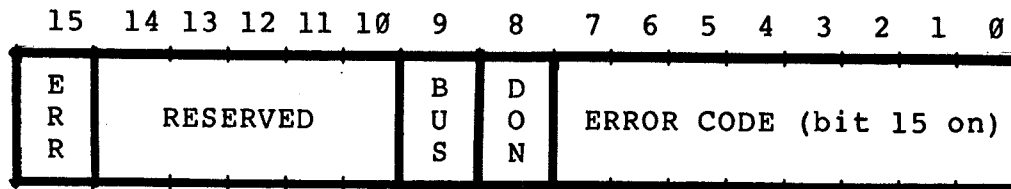

The status word is zero on entry and is set by the driver interrupt routine on return.

Bit 8 is the done bit. When set, it means the operation is complete. For MS-DOS 2.0, the driver sets it to 1 when it exits.

Bit 15 is the error bit. If it is set, then the low 8 bits indicate the error. The errors are:

- 0 Write protect violation
- 1 Unknown Unit
- 2 Drive not ready
- 3 Unknown command
- 4 CRC error
- 5 Bad drive request structure length
- 6 Seek error
- 7 Unknown media
- 8 Sector not found
- 9 Printer out of paper
- A Write fault
- B Read Fault
- C General failure

Bit 9 is the busy bit, which is set only by status calls.

For output on character devices: If bit 9 is 1 on return, a write request (if made) would wait for completion of a current request. If it is 0, there is no current request, and a write request (if made) would start immediately.

For input on character devices with a buffer: If bit 9 is 1 on return, a read request (if made) would go to the physical device. If it is 0 on return, then there are characters in the device buffer and a read would return quickly. It also indicates that something has been typed. MS-DOS assumes all character devices have an input type-ahead buffer. Devices that do not have a type-ahead buffer should always return busy=0 so that MS-DOS will not continuously wait for something to get into a buffer that does not exist.

One of the functions defined for each device is INIT. This routine is called only once when the device is installed. The INIT routine returns a location (DS:DX), which is a pointer to the first free byte of memory after the device driver (similar to "Keep Process"). This pointer method can be used to delete initialization code that is only needed once, saving on space.

Block devices are installed the same way and also return a first free byte pointer as described above. Additional information is also returned:

The number of units is returned. This determines logical device names. If the current maximum logical device letter is F at the time of the install call, and the INIT routine returns 4 as the number of units, then they will have logical names G, H, I and J. This mapping is determined by the position of the driver in the device list, and by the number of units on the device (stored in the first byte of the device name field).

A pointer to a BPB (BIOS Parameter Block) pointer array is also returned. There is one table for each unit defined. These blocks will be used to build an internal DOS data structure for each of the units. The pointer passed to the DOS from the driver points to an array of n word pointers to BPBs, where n is the number of units defined. In this way, if all units are the same, all of the pointers can point to the same BPB, saving space. Note that this array must be protected (below the free pointer set by the return) since an internal DOS structure will be built starting at the byte pointed to by the free pointer. The sector size defined must be less than or equal to the maximum sector size defined at default BIOS INIT time. If it isn't, the install will fail.

The last thing that INIT of a block device must pass back is the media descriptor byte. This byte means nothing to MS-DOS, but is passed to devices

so that they know what parameters MS-DOS is currently using for a particular drive unit.

Block devices may take several approaches; they may be dumb or smart. A dumb device defines a unit (and therefore an internal DOS structure) for each possible media drive combination. For example, unit 0 = drive 0 single side, unit 1 = drive 0 double side. For this approach, media descriptor bytes do not mean anything. A smart device allows multiple media per unit. In this case, the BPB table returned at INIT must define space large enough to accommodate the largest possible media supported. Smart drivers will use the media descriptor byte to pass information about what media is currently in a unit.

2.6 FUNCTION CALL PARAMETERS

All strategy routines are called with ES:BX pointing to the Request Header. The interrupt routines get the pointers to the Request Header from the queue that the strategy routines store them in. The command code in the Request Header tells the driver which function to perform.

NOTE

All DWORD pointers are stored offset first, then segment.

2.6.1 INIT

Command code = 0

INIT - ES:BX ->

13-BYTE Request Header
BYTE # of units
DWORD break address
DWORD pointer to BPB array (Not set by character devices)

The number of units, break address, and BPB pointer are set by the driver. On entry, the DWORD that is to be set to the BPB array (on block devices) points to the character after the '=' on the line in CONFIG.SYS that loaded this device. This allows drivers to scan the CONFIG.SYS invocation line for arguments.

NOTE

If there are multiple device drivers in a single .COM file, the ending address returned by the last INIT called will be the one MS-DOS uses. It is recommended that all of the device drivers in a single .COM file return the same ending address.

2.6.2 MEDIA CHECK

Command Code = 1

MEDIA CHECK - ES:BX ->

13-BYTE Request Header
BYTE media descriptor from DPB
BYTE returned

In addition to setting the status word, the driver must set the return byte to one of the following:

- 1 Media has been changed
- 0 Don't know if media has been changed
- 1 Media has not been changed

If the driver can return -1 or 1 (by having a door-lock or other interlock mechanism) MS-DOS performance is enhanced because MS-DOS does not need to reread the FAT for each directory access.

2.6.3 BUILD BPB (BIOS Parameter Block)

Command code = 2

BUILD BPB - ES:BX ->

13-BYTE Request Header
BYTE media descriptor from DPB
DWORD transfer address (Points to one sector worth of scratch space or first sector of FAT depending on the value of the NON IBM FORMAT bit)
DWORD pointer to BPB

If the NON IBM FORMAT bit of the device is set, then the DWORD transfer address points to a one sector buffer, which can be used for any purpose. If the NON IBM FORMAT bit is 0, then this buffer contains the first sector of the first FAT and the driver must not alter this buffer.

If IBM compatible format is used (NON IBM FORMAT BIT = 0), then the first sector of the first FAT must be located at the same sector on all possible media. This is because the FAT sector will be read BEFORE the media is actually determined. Use this mode if all you want is to read the FAT ID byte.

In addition to setting status word, the driver must set the Pointer to the BPB on return.

In order to allow for many different OEMs to read each other's disks, the following standard is suggested: The information relating to the BPB for a particular piece of media is kept in the boot sector for the media. In particular, the format of the boot sector is:

	3 BYTE near JUMP to boot code
	8 BYTES OEM name and version
B	WORD bytes per sector
P	
B	BYTE sectors per allocation unit
V	WORD reserved sectors
	BYTE number of FATs
	WORD number of root dir entries
	WORD number of sectors in logical image
^	
B	BYTE media descriptor
P	
B	WORD number of FAT sectors
	WORD sectors per track
	WORD number of heads
	WORD number of hidden sectors

The three words at the end (sectors per track, number of heads, and number of hidden sectors) are optional. They are intended to help the BIOS understand the media. Sectors per track may be redundant (could be calculated from total size of the disk). Number of heads is useful for supporting different multi-head drives which have the same storage capacity, but different numbers of surfaces. Number of hidden sectors may be used to support drive-partitioning schemes.

2.6.4 Media Descriptor Byte

The last two digits of the FAT ID byte are called the media descriptor byte. Currently, the media descriptor byte has been defined for a few media types, including 5-1/4" and 8" standard disks. For more information, refer to Section 3.6, "MS-DOS Standard Disk Formats."

Although these media bytes map directly to FAT ID bytes (which are constrained to the 8 values F8-FF), media bytes can, in general, be any value in the range 0-FF.

2.6.5 READ Or WRITE

Command codes = 3,4,8,9, and 12

READ or WRITE - ES:BX (Including IOCTL) ->

13-BYTE Request Header
BYTE media descriptor from DPB
DWORD transfer address
WORD byte/sector count
WORD starting sector number (Ignored on character devices)

In addition to setting the status word, the driver must set the sector count to the actual number of sectors (or bytes) transferred. No error check is performed on an IOCTL I/O call. The driver must correctly set the return sector (byte) count to the actual number of bytes transferred.


THE FOLLOWING APPLIES TO BLOCK DEVICE DRIVERS:

Under certain circumstances the BIOS may be asked to perform a write operation of 64K bytes, which seems to be a "wrap around" of the transfer address in the BIOS I/O packet. This request arises due to an optimization added to the write code in MS-DOS. It will only manifest on user writes that are within a sector size of 64K bytes on files "growing" past the current EOF. It is allowable for the BIOS to ignore the balance of the write that "wraps around" if it so chooses. For example, a write of 10000H bytes worth of sectors with a transfer address of XXX:1 could ignore the last two bytes. A user program can never request an I/O of more than FFFFH bytes and cannot wrap around (even to 0) in the transfer segment. Therefore, in this case, the last two bytes can be ignored.

2.6.6 NON DESTRUCTIVE READ NO WAIT

Command code = 5

NON DESRUCTIVE READ NO WAIT - ES:BX ->

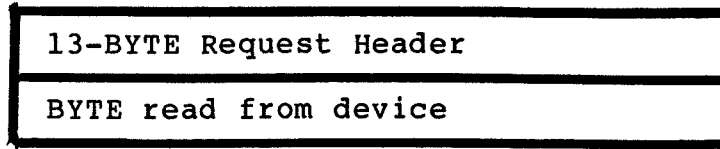

If the character device returns busy bit = 0 (characters in buffer), then the next character that would be read is returned. This character is not removed from the input buffer (hence the term "Non Destructive Read"). Basically, this call allows MS-DOS to look ahead one input character.

2.6.7 STATUS

Command codes = 6 and 10

STATUS Calls - ES:BX ->

13-BYTE Request Header

All the driver must do is set the status word and the busy bit as follows:

For output on character devices: If bit 9 is 1 on return, a write request (if made) would wait for completion of a current request. If it is 0, there is no current request and a write request (if made) would start immediately.

For input on character devices with a buffer: A return of 1 means, a read request (if made) would go to the physical device. If it is 0 on return, then there are characters in the devices buffer and a read would return quickly. A return of 0 also indicates that the user has typed something. MS-DOS assumes that all character devices have an input type-ahead buffer. Devices that do not have a type-ahead buffer should always return busy = 0 so that the DOS will not hang waiting for something to get into a buffer which doesn't exist.

2.6.8 FLUSH

Command codes = 7 and 11

FLUSH Calls - ES:BX ->

13-BYTE Request Header

The FLUSH call tells the driver to flush (terminate) all pending requests. This call is used to flush the input queue on character devices.

2.7 THE CLOCK DEVICE

One of the most popular add-on boards is the real time clock board. To allow this board to be integrated into the system for TIME and DATE, there is a special device (determined by the attribute word) called the CLOCK device. The CLOCK device defines and performs functions like any other character device. Most functions will be: "set done bit, reset error bit, return." When a read or write to this device occurs, exactly 6 bytes are transferred. The first two bytes are a word, which is the count of days since 1-1-80. The third byte is minutes; the fourth, hours; the fifth, hundredths of seconds; and the sixth, seconds. Reading the CLOCK device gets the date and time; writing to it sets the date and time.

2.8 EXAMPLE OF DEVICE DRIVERS

The following examples illustrate a block device driver and a character device driver program.

2.8.1 Block Device Driver

```
;***** A BLOCK DEVICE *****
```

```
TITLE 5 1/4" DISK DRIVER FOR SCP DISK-MASTER
```

```
;This driver is intended to drive up to four 5 1/4" drives
;hooked to the Seattle Computer Products DISK MASTER disk
;controller. All standard IBM PC formats are supported.
```

```
FALSE EQU 0
TRUE EQU NOT FALSE
```

```
;The I/O port address of the DISK MASTER
```

```
DISK EQU 0E0H
```

```
;DISK+0
```

```
; 1793 Command/Status
```

```
;DISK+1
```

```
; 1793 Track
```

```
;DISK+2
```

```
; 1793 Sector
```

```
;DISK+3
```

```
; 1793 Data
```

```
;DISK+4
```

```
; Aux Command/Status
```

```
;DISK+5
```

```
; Wait Sync
```

```
;Back side select bit
```

```
BACKBIT EQU 04H
```

```
;5 1/4" select bit
```

```
SMALBIT EQU 10H
```

```
;Double Density bit
```

```
DDBIT EQU 08H
```

```
;Done bit in status register
```

```
DONEBIT EQU 01H
```

```
;Use table below to select head step speed.
```

```
;Step times for 5" drives
```

```
;are double that shown in the table.
```

```
;
```

```
;Step value 1771 1793
```

```
;
```

```
; 0 6ms 3ms
```

```
; 1 6ms 6ms
```

```

;      2      10ms   10ms
;      3      20ms   15ms
;
STPSPD EQU      1

NUMERR EQU      ERRROUT-ERRIN

CR      EQU      0DH
LF      EQU      0AH

CODE    SEGMENT
ASSUME  CS:CODE,DS:NOHING,ES:NOHING,SS:NOHING
;-----
;
;      DEVICE HEADER
;
DRVDEV  LABEL    WORD
        DW      -1,-1
        DW      0000 ;IBM format-compatible, Block
        DW      STRATEGY
        DW      DRV$IN
DRVMAX  DB      4

DRV$TBL LABEL    WORD
        DW      DRV$INIT
        DW      MEDIA$CHK
        DW      GET$BPB
        DW      CMDERR
        DW      DRV$READ
        DW      EXIT
        DW      EXIT
        DW      EXIT
        DW      DRV$WRIT
        DW      DRV$WRIT
        DW      EXIT
        DW      EXIT
        DW      EXIT

;-----
;
;      STRATEGY
;
PTRSAV DD      0

STRATP  PROC     FAR
STRATEGY:
        MOV     WORD PTR [PTRSAV],BX
        MOV     WORD PTR [PTRSAV+2],ES
        RET
STRATP  ENDP

;-----
;
;      MAIN ENTRY

```

```

CMDLEN  =      0      ;LENGTH OF THIS COMMAND
UNIT    =      1      ;SUB UNIT SPECIFIER
CMDC    =      2      ;COMMAND CODE
STATUS  =      3      ;STATUS
MEDIA   =     13      ;MEDIA DESCRIPTOR
TRANS   =     14      ;TRANSFER ADDRESS
COUNT  =     18      ;COUNT OF BLOCKS OR CHARACTERS
START   =     20      ;FIRST BLOCK TO TRANSFER

```

```

DRV$IN:

```

```

    PUSH    SI
    PUSH    AX
    PUSH    CX
    PUSH    DX
    PUSH    DI
    PUSH    BP
    PUSH    DS
    PUSH    ES
    PUSH    BX

    LDS     BX,[PTRSAV]      ;GET POINTER TO I/O PACKET

    MOV     AL,BYTE PTR [BX].UNIT    ;AL = UNIT CODE
    MOV     AH,BYTE PTR [BX].MEDIA   ;AH = MEDIA DESCRIPTOR
    MOV     CX,WORD PTR [BX].COUNT  ;CX = COUNT
    MOV     DX,WORD PTR [BX].START   ;DX = START SECTOR
    PUSH    AX
    MOV     AL,BYTE PTR [BX].CMDC    ;Command code
    CMP     AL,11
    JA     CMDERRP                ;Bad command
    CBW
    SHL     AX,1                    ;2 times command =
                                    ;word table index

    MOV     SI,OFFSET DRVTBL
    ADD     SI,AX                    ;Index into table
    POP     AX                        ;Get back media
                                    ;and unit

    LES     DI,DWORD PTR [BX].TRANS  ;ES:DI = TRANSFER
                                    ;ADDRESS

    PUSH    CS
    POP     DS

```

```

ASSUME DS:CODE

```

```

    JMP     WORD PTR [SI]            ;GO DO COMMAND

```

```

;-----
;
;     EXIT - ALL ROUTINES RETURN THROUGH THIS PATH
;
ASSUME DS:NOTHING
CMDERRP:

```



```

      POP      AX                ;Clean stack
CMDERR: MOV      AL,3            ;UNKNOWN COMMAND ERROR
      JMP      SHORT ERR$EXIT

ERR$CNT:LDS    BX,[PTRSAV]
      SUB     WORD PTR [BX].COUNT,CX ;# OF SUCCESS. I/Os

ERR$EXIT:
;AL has error code
      MOV     AH,10000001B      ;MARK ERROR RETURN
      JMP     SHORT ERR1

EXITP  PROC    FAR

EXIT:  MOV     AH,00000001B
ERR1:  LDS     BX,[PTRSAV]
      MOV     WORD PTR [BX].STATUS,AX
                                   ;MARK OPERATION COMPLETE

      POP     BX
      POP     ES
      POP     DS
      POP     BP
      POP     DI
      POP     DX
      POP     CX
      POP     AX
      POP     SI
      RET                                ;RESTORE REGS AND RETURN
EXITP  ENDP

CURDRV DB      -1

TRKTAB DB      -1,-1,-1,-1

SECCNT DW      0

DRVLIM =      8      ;Number of sectors on device
SECLIM =      13     ;MAXIMUM SECTOR
HDLIM  =      15     ;MAXIMUM HEAD

;WARNING - preserve order of drive and curhd!

DRIVE  DB      0      ;PHYSICAL DRIVE CODE
CURHD  DB      0      ;CURRENT HEAD
CURSEC DB      0      ;CURRENT SECTOR
CURTRK DW      0      ;CURRENT TRACK

;
;MEDIASCHK:                ;Always indicates Don't know
ASSUME DS:CODE
      TEST    AH,00000100B      ;TEST IF MEDIA REMOVABLE
      JZ     MEDIA$EXT

```

```

        XOR     DI,DI                ;SAY I DON'T KNOW
MEDIA$EXT:
        LDS     BX,[PTRSAV]
        MOV     WORD PTR [BX].TRANS,DI
        JMP     EXIT

BUILD$BPB:
ASSUME DS:CODE
        MOV     AH,BYTE PTR ES:[DI]    ;GET FAT ID BYTE
        CALL    GETBP                 ;TRANSLATE
SETBPB:  LDS     BX,[PTRSAV]
        MOV     [BX].MEDIA,AH
        MOV     [BX].COUNT,DI
        MOV     [BX].COUNT+2,CS
        JMP     EXIT

BUILDBP:
ASSUME DS:NOTHING
;AH is media byte on entry
;DI points to correct BPB on return
        PUSH    AX
        PUSH    CX
        PUSH    DX
        PUSH    BX
        MOV     CL,AH                ;SAVE MEDIA
        AND     CL,0F8H              ;NORMALIZE
        CMP     CL,0F8H              ;COMPARE WITH GOOD MEDIA BYTE
        JZ      GOODID
        MOV     AH,0FEH              ;DEFAULT TO 8-SECTOR,
                                        ;SINGLE-SIDED
GOODID:
        MOV     AL,1                 ;SET NUMBER OF FAT SECTORS
        MOV     BX,64*256+8          ;SET DIR ENTRIES AND SECTOR MAX
        MOV     CX,40*8              ;SET SIZE OF DRIVE
        MOV     DX,01*256+1          ;SET HEAD LIMIT & SEC/ALL UNIT
        MOV     DI,OFFSET DRVBPB
        TEST    AH,00000010B         ;TEST FOR 8 OR 9 SECTOR
        JNZ     HAS8                 ;NZ = HAS 8 SECTORS
        INC     AL                    ;INC NUMBER OF FAT SECTORS
        INC     BL                    ;INC SECTOR MAX
        ADD     CX,40                 ;INCREASE SIZE
HAS8:    TEST    AH,00000001B         ;TEST FOR 1 OR 2 HEADS
        JZ      HAS1                 ;Z = 1 HEAD
        ADD     CX,CX                 ;DOUBLE SIZE OF DISK
        MOV     BH,112               ;INCREASE # OF DIREC. ENTRIES
        INC     DH                    ;INC SEC/ALL UNIT
        INC     DL                    ;INC HEAD LIMIT
HAS1:    MOV     BYTE PTR [DI].2,DH
        MOV     BYTE PTR [DI].6,BH
        MOV     WORD PTR [DI].8,CX
        MOV     BYTE PTR [DI].10,AH
        MOV     BYTE PTR [DI].11,AL
        MOV     BYTE PTR [DI].13,BL
        MOV     BYTE PTR [DI].15,DL
        POP     BX

```

```

POP     DX
POP     CX
POP     AX
RET

```

```

;-----
;
;       DISK I/O HANDLERS
;
;ENTRY:
;       AL = DRIVE NUMBER (0-3)
;       AH = MEDIA DESCRIPTOR
;       CX = SECTOR COUNT
;       DX = FIRST SECTOR
;       DS = CS
;       ES:DI = TRANSFER ADDRESS
;EXIT:
;       IF SUCCESSFUL CARRY FLAG = 0
;       ELSE CF=1 AND AL CONTAINS (MS-DOS) ERROR CODE,
;       CX # sectors NOT transferred

DRV$READ:
ASSUME DS:CODE
        JCXZ   DSKOK
        CALL  SETUP
        JC    DSK$IO
        CALL  DISKRD
        JMP   SHORT DSK$IO

DRV$WRIT:
ASSUME DS:CODE
        JCXZ   DSKOK
        CALL  SETUP
        JC    DSK$IO
        CALL  DISKWRT
ASSUME DS:NOTHING
DSK$IO: JNC    DSKOK
        JMP   ERR$CNT
DSKOK:  JMP   EXIT

SETUP:
ASSUME DS:CODE
;Input same as above
;On output
; ES:DI = Trans addr
; DS:BX Points to BPB
; Carry set if error (AL is error code (MS-DOS))
; else
;       [DRIVE] = Drive number (0-3)
;       [SECCNT] = Sectors to transfer
;       [CURSEC] = Sector number of start of I/O
;       [CURHD]  = Head number of start of I/O ;Set
;       [CURTRK] = Track # of start of I/O ;Seek performed

```

; All other registers destroyed

```

XCHG  BX,DI          ;ES:BX = TRANSFER ADDRESS
CALL  GETBP         ;DS:DI = PTR TO B.P.B
MOV   SI,CX
ADD   SI,DX
CMP   SI,WORD PTR [DI].DRVLM
                                ;COMPARE AGAINST DRIVE MAX

JBE   INRANGE
MOV   AL,8
STC
RET

```

INRANGE:

```

MOV   [DRIVE],AL
MOV   [SECCNT],CX    ;SAVE SECTOR COUNT
XCHG  AX,DX          ;SET UP LOGICAL SECTOR
                                ;FOR DIVIDE

XOR   DX,DX
DIV   WORD PTR [DI].SECLIM ;DIVIDE BY SEC PER TRACK
INC   DL
MOV   [CURSEC],DL    ;SAVE CURRENT SECTOR
MOV   CX,WORD PTR [DI].HDLIM ;GET NUMBER OF HEADS
XOR   DX,DX          ;DIVIDE TRACKS BY HEADS PER CYLINDER
DIV   CX
MOV   [CURHD],DL     ;SAVE CURRENT HEAD
MOV   [CURTRK],AX    ;SAVE CURRENT TRACK

```

SEEK:

```

PUSH  BX              ;Xaddr
PUSH  DI              ;BPB pointer
CALL  CHKNEW          ;Unload head if change drives
CALL  DRIVESEL
MOV   BL,[DRIVE]
XOR   BH,BH           ;BX drive index
ADD   BX,OFFSET TRKTAB ;Get current track
MOV   AX,[CURTRK]
MOV   DL,AL           ;Save desired track
XCHG  AL,DS:[BX]     ;Make desired track current
OUT   DISK+1,AL      ;Tell Controller current track
CMP   AL,DL           ;At correct track?
JZ    SEEKRET        ;Done if yes
MOV   BH,2            ;Seek retry count
CMP   AL,-1           ;Position Known?
JNZ   NOHOME         ;If not home head

```

TRYSK:

```

CALL  HOME
JC    SEEKERR

```

NOHOME:

```

MOV   AL,DL           ;Desired track
OUT   DISK+3,AL
MOV   AL,1CH+STPSPD  ;Seek
CALL  DCOM
AND   AL,98H         ;Accept not rdy, seek, & CRC errors
JZ    SEEKRET
JS    SEEKERR        ;No retries if not ready

```

```

        DEC     BH
        JNZ     TRYSK
SEEKERR:
        MOV     BL,[DRIVE]
        XOR     BH,BH             ;BX drive index
        ADD     BX,OFFSET TRKTAB ;Get current track
        MOV     BYTE PTR DS:[BX],-1 ;Make current track
                                           ;lunknown

        CALL    GETERRCD
        MOV     CX,[SECCNT]      ;Nothing transferred
        POP     BX               ;BPB pointer
        POP     DI               ;Xaddr
        RET

SEEKRET:
        POP     BX               ;BPB pointer
        POP     DI               ;Xaddr
        CLC
        RET

```

```

;-----
;
;   READ
;

```

```

DISKRD:
ASSUME DS:CODE
        MOV     CX,[SECCNT]

RDLP:
        CALL    PRESET
        PUSH   BX
        MOV     BL,10             ;Retry count
        MOV     DX,DISK+3        ;Data port

RDAGN:
        MOV     AL,80H           ;Read command
        CLI     ;Disable for 1793
        OUT     DISK,AL         ;Output read command
        MOV     BP,DI           ;Save address for retry
        JMP     SHORT RLOOPENTRY

RLOOP:
        STOSB

RLOOPENTRY:
        IN     AL,DISK+5        ;Wait for DRQ or INTRQ
        SHR    AL,1
        IN     AL,DX           ;Read data
        JNC    RLOOP
        STI     ;Ints OK now
        CALL   GETSTAT
        AND    AL,9CH
        JZ     RDPOP           ;Ok
        MOV    DI,BP           ;Get back transfer
        DEC    BL
        JNZ    RDAGN
        CMP    AL,10H         ;Record not found?
        JNZ    GOT_CODE       ;No

```

```

        MOV     AL,1                ;Map it
GOT_CODE:
        CALL   GETERRCD
        POP    BX
        RET

RDPOP:
        POP    BX
        LOOP  RDLP
        CLC
        RET

;-----
;
;     WRITE
;
DISKWRT:
ASSUME  DS:CODE
        MOV    CX,[SECCNT]
        MOV    SI,DI
        PUSH   ES
        POP    DS
ASSUME  DS:NOTHING
WRLP:
        CALL   PRESET
        PUSH   BX
        MOV    BL,10                ;Retry count
        MOV    DX,DISK+3           ;Data port

WRAGN:
        MOV    AL,0A0H             ;Write command
        CLI                    ;Disable for 1793
        OUT    DISK,AL            ;Output write command
        MOV    BP,SI              ;Save address for retry

WRLOOP:
        IN     AL,DISK+5
        SHR    AL,1
        LODSB                    ;Get data
        OUT    DX,AL              ;Write data
        JNC    WRLOOP
        STI                    ;Ints OK now
        DEC    SI
        CALL   GETSTAT
        AND    AL,0FCH
        JZ     WRPOP              ;Ok
        MOV    SI,BP              ;Get back transfer
        DEC    BL
        JNZ    WRAGN
        CALL   GETERRCD
        POP    BX

WRPOP:
        POP    BX

```

```

LOOP    WRLP
CLC
RET

```

PRESET:

```

ASSUME  DS:NOTHING
MOV     AL,[CURSEC]
CMP     AL,CS:[BX].SECLIM
JBE     GOTSEC
MOV     DH,[CURHD]
INC     DH
CMP     DH,CS:[BX].HDLIM
JB      SETHEAD           ;Select new head
CALL    STEP              ;Go on to next track
XOR     DH,DH             ;Select head zero

```

SETHEAD:

```

MOV     [CURHD],DH
CALL    DRIVESEL
MOV     AL,1              ;First sector
MOV     [CURSEC],AL      ;Reset CURSEC

```

GOTSEC:

```

OUT     DISK+2,AL        ;Tell controller which sector
INC     [CURSEC]         ;We go on to next sector
RET

```

STEP:

```

ASSUME  DS:NOTHING
MOV     AL,58H+STPSPD    ;Step in w/ update, no verify
CALL    DCOM
PUSH    BX
MOV     BL,[DRIVE]
XOR     BH,BH            ;BX drive index
ADD     BX,OFFSET TRKTAB ;Get current track
INC     BYTE PTR CS:[BX] ;Next track
POP     BX
RET

```

HOME:

```

ASSUME  DS:NOTHING
MOV     BL,3

```

TRYHOM:

```

MOV     AL,0CH+STPSPD    ;Restore with verify
CALL    DCOM
AND     AL,98H
JZ      RET3
JS      HOMERR           ;No retries if not ready
PUSH    AX               ;Save real error code
MOV     AL,58H+STPSPD    ;Step in w/ update no verify
CALL    DCOM
DEC     BL
POP     AX               ;Get back real error code
JNZ     TRYHOM

```

HOMERR:

```

STC

```

RET3: RET

CHKNEW:

```

ASSUME DS:NOTHING
MOV     AL,[DRIVE]      ;Get disk drive number
MOV     AH,AL
XCHG   AL,[CURDRV]    ;Make new drive current.
CMP     AL,AH          ;Changing drives?
JZ      RET1           ;No
; If changing drives, unload head so the head load delay
; one-shot will fire again. Do it by seeking to the same
; track with the H bit reset.
;
IN      AL,DISK+1      ;Get current track number
OUT     DISK+3,AL      ;Make it the track to seek
MOV     AL,10H         ;Seek and unload head

```

DCOM:

```

ASSUME DS:NOTHING
OUT     DISK,AL
PUSH   AX
AAM                                ;Delay 10 microseconds
POP     AX

```

GETSTAT:

```

IN      AL,DISK+4
TEST   AL,DONEBIT
JZ     GETSTAT
IN     AL,DISK
RET1:  RET

```

DRIVESEL:

```

ASSUME DS:NOTHING
;Select the drive based on current info
;Only AL altered
MOV     AL,[DRIVE]
OR      AL,SMALBIT + DDBIT      ;5 1/4" IBM PC disks
CMP     [CURHD],0
JZ      GOTHEAD
OR      AL,BACKBIT             ;Select side 1

```

GOTHEAD:

```

OUT     DISK+4,AL             ;Select drive and side
RET

```

GETERRCD:

```

ASSUME DS:NOTHING
PUSH   CX
PUSH   ES
PUSH   DI
PUSH   CS
POP     ES                    ;Make ES the local segment
MOV     CS:[LSTERR],AL        ;Terminate list w/ error code
MOV     CX,NUMERR             ;Number of error conditions
MOV     DI,OFFSET ERRIN      ;Point to error conditions
REPNE  SCASB

```



```

MOV     AL,NUMERR-1[DI] ;Get translation
STC                               ;Flag error condition
POP     DI
POP     ES
POP     CX
RET                               ;and return

```

```

;*****
; BPB FOR AN IBM FLOPPY DISK, VARIOUS PARAMETERS ARE
; PATCHED BY GETBP TO REFLECT THE TYPE OF MEDIA
; INSERTED
; This is a nine sector single side BPB

```

```
DRVBPB:
```

```

DW      512           ;Physical sector size in bytes
DB      1             ;Sectors/allocation unit
DW      1             ;Reserved sectors for DOS
DB      2             ;# of allocation tables
DW      64           ;Number directory entries
DW      9*40         ;Number 512-byte sectors
DB      11111100B    ;Media descriptor
DW      2             ;Number of FAT sectors
DW      9             ;Sector limit
DW      1             ;Head limit

```

```

INITAB  DW      DRVBPB           ;Up to four units
        DW      DRVBPB
        DW      DRVBPB
        DW      DRVBPB

```

```
ERRIN:  ;DISK ERRORS RETURNED FROM THE 1793 CONTROLLER
```

```

DB      80H          ;NO RESPONSE
DB      40H          ;Write protect
DB      20H          ;Write Fault
DB      10H          ;SEEK error
DB      8            ;CRC error
DB      1            ;Mapped from 10H
                        ;(record not found) on READ
LSTERR  DB      0            ;ALL OTHER ERRORS

```

```
ERROUT: ;RETURNED ERROR CODES CORRESPONDING TO ABOVE
```

```

DB      2            ;NO RESPONSE
DB      0            ;WRITE ATTEMPT
                        ;ON WRITE-PROTECT DISK
DB      0AH          ;WRITE FAULT
DB      6            ;SEEK FAILURE
DB      4            ;BAD CRC
DB      8            ;SECTOR NOT FOUND
DB      12           ;GENERAL ERROR

```

```
DRV$INIT:
```

```

;
; Determine number of physical drives by reading CONFIG.SYS
;

```

```

ASSUME DS:CODE
      PUSH DS
      LDS SI,[PTRSAV]
ASSUME DS:NOTHING
      LDS SI,DWORD PTR [SI.COUNT] ;DS:SI points to
                                   ;CONFIG.SYS

SCAN_LOOP:
      CALL SCAN_SWITCH
      MOV AL,CL
      OR AL,AL
      JZ SCAN4
      CMP AL,"s"
      JZ SCAN4

WERROR: POP DS
ASSUME DS:CODE
      MOV DX,OFFSET ERRMSG2
WERROR2: MOV AH,9
          INT 21H
          XOR AX,AX
          PUSH AX ;No units
          JMP SHORT ABORT

BADNDRV:
      POP DS
      MOV DX,OFFSET ERRMSG1
      JMP WERROR2

SCAN4:
ASSUME DS:NOTHING
;BX is number of floppies
      OR BX,BX
      JZ BADNDRV ;User error
      CMP BX,4
      JA BADNDRV ;User error
      POP DS
ASSUME DS:CODE
      PUSH BX ;Save unit count
ABORT: LDS BX,[PTRSAV]
ASSUME DS:NOTHING
      POP AX
      MOV BYTE PTR [BX].MEDIA,AL ;Unit count
      MOV [DRVMAX],AL
      MOV WORD PTR [BX].TRANS,OFFSET DRV$INIT ;SET
                                   ;BREAK ADDRESS
      MOV [BX].TRANS+2,CS
      MOV WORD PTR [BX].COUNT,OFFSET INITAB
                                   ;SET POINTER TO BPB ARRAY
      MOV [BX].COUNT+2,CS
      JMP EXIT

;
; PUT SWITCH IN CL, VALUE IN BX
;
SCAN_SWITCH:
      XOR BX,BX

```

```

        MOV     CX,BX
        LODSB
        CMP     AL,10
        JZ      NUMRET
        CMP     AL,"-"
        JZ      GOT_SWITCH
        CMP     AL,"/"
        JNZ     SCAN_SWITCH
GOT_SWITCH:
        CMP     BYTE PTR [SI+1],":"
        JNZ     TERROR
        LODSB
        OR      AL,20H           ; CONVERT TO LOWER CASE
        MOV     CL,AL           ; GET SWITCH
        LODSB                   ; SKIP ":"
;
; GET NUMBER POINTED TO BY [SI]
;
; WIPES OUT AX,DX ONLY      BX RETURNS NUMBER
;
GETNUM1:LODSB
        SUB     AL,"0"
        JB     CHKRET
        CMP     AL,9
        JA     CHKRET
        CBW
        XCHG   AX,BX
        MOV     DX,10
        MUL    DX
        ADD    BX,AX
        JMP    GETNUM1

CHKRET: ADD     AL,"0"
        CMP     AL," "
        JBE    NUMRET
        CMP     AL,"-"
        JZ     NUMRET
        CMP     AL,"/"
        JZ     NUMRET

TERROR: POP     DS           ; GET RID OF RETURN ADDRESS
        JMP    WERROR

NUMRET: DEC     SI
        RET

ERRMSG1 DB     "SMLDRV: Bad number of drives",13,10,"$"
ERRMSG2 DB     "SMLDRV: Invalid parameter",13,10,"$"
CODE     ENDS
        END

```

2.8.2 Character Device Driver

The following program illustrates a character device driver program.

```

;***** A CHARACTER DEVICE *****
TITLE   VT52 CONSOLE FOR 2.0   (IBM)

;::::::::::::::::::::::::::::::::::::::::::::::::::::::::::
;
;       IBM ADDRESSES FOR I/O
;
;::::::::::::::::::::::::::::::::::::::::::::::::::::::::::

        CR=13                ;CARRIAGE RETURN
        BACKSP=8             ;BACKSPACE
        ESC=1BH
        BRKADR=6CH          ;006C BREAK VECTOR ADDRESS
        ASNMAX=200          ;SIZE OF KEY ASSIGNMENT BUFFER

CODE    SEGMENT BYTE

        ASSUME CS:CODE,DS:NOTHING,ES:NOTHING
;-----
;
;       C O N - CONSOLE DEVICE DRIVER
;
CONDEV:                                ;HEADER FOR DEVICE "CON"
        DW          -1,-1
        DW          10000000000010011B ;CON IN AND CON OUT
        DW          STRATEGY
        DW          ENTRY
        DB          'CON'

;-----
;
;       COMMAND JUMP TABLES
CONTBL:
        DW          CON$INIT
        DW          EXIT
        DW          EXIT
        DW          CMDERR
        DW          CON$READ
        DW          CON$RDND
        DW          EXIT
        DW          CON$FLSH
        DW          CON$WRIT
        DW          CON$WRIT
        DW          EXIT
        DW          EXIT

CMDTABL DB          'A'

```

```

DW      CUU          ;cursor up
DB      'B'
DW      CUD          ;cursor down
DB      'C'
DW      CUF          ;cursor forward
DB      'D'
DW      CUB          ;cursor back
DB      'H'
DW      CUH          ;cursor position
DB      'J'
DW      ED           ;erase display
DB      'K'
DW      EL           ;erase line
DB      'Y'
DW      CUP          ;cursor position
DB      'j'
DW      PSCP         ;save cursor position
DB      'k'
DW      PRCP         ;restore cursor position
DB      'y'
DW      RM           ;reset mode
DB      'x'
DW      SM           ;set mode
DB      00

```

PAGE

```

;-----
;
;      Device entry point
;
CMDLEN  =      0      ;LENGTH OF THIS COMMAND
UNIT    =      1      ;SUB UNIT SPECIFIER
CMD     =      2      ;COMMAND CODE
STATUS  =      3      ;STATUS
MEDIA   =      13     ;MEDIA DESCRIPTOR
TRANS   =      14     ;TRANSFER ADDRESS
COUNT  =      18     ;COUNT OF BLOCKS OR CHARACTERS
START   =      20     ;FIRST BLOCK TO TRANSFER

PTRSAV  DD      0

STRATP  PROC     FAR

STRATEGY:
        MOV     WORD PTR CS:[PTRSAV],BX
        MOV     WORD PTR CS:[PTRSAV+2],ES
        RET

STRATP  ENDP

ENTRY:
        PUSH    SI
        PUSH    AX
        PUSH    CX
        PUSH    DX

```

```

    PUSH    DI
    PUSH    BP
    PUSH    DS
    PUSH    ES
    PUSH    BX

    LDS     BX,CS:[PTRSAV] ;GET POINTER TO I/O PACKET

    MOV     CX,WORD PTR DS:[BX].COUNT ;CX = COUNT

    MOV     AL,BYTE PTR DS:[BX].CMD
    CBW
    MOV     SI,OFFSET CONTBL
    ADD     SI,AX
    ADD     SI,AX
    CMP     AL,11
    JA     CMDERR

    LES     DI,DWORD PTR DS:[BX].TRANS

    PUSH    CS
    POP     DS

    ASSUME  DS:CODE

    JMP     WORD PTR [SI] ;GO DO COMMAND

PAGE
;=====
;=
;=      SUBROUTINES SHARED BY MULTIPLE DEVICES
;=
;=====
;-----
;
;      EXIT - ALL ROUTINES RETURN THROUGH THIS PATH
;
BUS$EXIT: ;DEVICE BUSY EXIT
    MOV     AH,0000001B
    JMP     SHORT ERR1

CMDERR:
    MOV     AL,3 ;UNKNOWN COMMAND ERROR

ERR$EXIT:
    MOV     AH,10000001B ;MARK ERROR RETURN
    JMP     SHORT ERR1

EXITP    PROC    FAR

EXIT:    MOV     AH,00000001B
ERR1:    LDS     BX,CS:[PTRSAV]
    MOV     WORD PTR [BX].STATUS,AX ;MARK
    ;OPERATION COMPLETE

```

```

        POP     BX
        POP     ES
        POP     DS
        POP     BP
        POP     DI
        POP     DX
        POP     CX
        POP     AX
        POP     SI
        RET
                                ;RESTORE REGS AND RETURN
EXITP  ENDP
;-----
;
;      BREAK KEY HANDLING
;
BREAK:
        MOV     CS:ALTAH,3          ;INDICATE BREAK KEY SET
INTRET: IRET

PAGE
;
;      WARNING - Variables are very order dependent,
;              so be careful when adding new ones!
;
WRAP   DB      0                   ; 0 = WRAP, 1 = NO WRAP
STATE  DW      S1
MODE   DB      3
MAXCOL DB      79
COL    DB      0
ROW    DB      0
SAVCR  DW      0
ALTAH  DB      0                   ;Special key handling
;-----
;
;      CHRROUT - WRITE OUT CHAR IN AL USING CURRENT ATTRIBUTE
;
ATTRW  LABEL   WORD
ATTR   DB      00000111B          ;CHARACTER ATTRIBUTE
BPAGE  DB      0                   ;BASE PAGE
base   dw      0b800h

chrout: cmp     al,13
        jnz    trylf
        mov    [col],0
        jmp    short setit

trylf:  cmp     al,10
        jz     lf
        cmp    al,7
        jnz    tryback

torom:  mov     bx,[attrw]
        and    bl,7
        mov    ah,14

```

```

        int      10h
ret5:   ret

tryback:
        cmp     al,8
        jnz    outchr
        cmp     [col],0
        jz     ret5
        dec    [col]
        jmp    short setit

outchr:
        mov     bx,[attrw]
        mov     cx,1
        mov     ah,9
        int     10h
        inc    [col]
        mov     al,[col]
        cmp     al,[maxcol]
        jbe    setit
        cmp     [wrap],0
        jz     outchrl
        dec    [col]
        ret

outchrl:
lf:     mov     [col],0
        inc    [row]
        cmp     [row],24
        jb     setit
        mov     [row],23
        call   scroll

setit:  mov     dh,row
        mov     dl,col
        xor    bh,bh
        mov     ah,2
        int     10h
        ret

scroll: call   getmod
        cmp     al,2
        jz     myscroll
        cmp     al,3
        jz     myscroll
        mov     al,10
        jmp    torom

myscroll:
        mov     bh,[attr]
        mov     bl,' '
        mov     bp,80
        mov     ax,[base]
        mov     es,ax
        mov     ds,ax
        xor    di,di
        mov     si,160

```



```

        mov     cx,23*80
        cld
        cmp     ax,0b800h
        jz      colorcard

        rep     movsw
        mov     ax,bx
        mov     cx,bp
        rep     stosw
sret:   push    cs
        pop     ds
        ret

colorcard:
        mov     dx,3dah
wait2:  in      al,dx
        test    al,8
        jz      wait2
        mov     al,25h
        mov     dx,3d8h
        out     dx,al          ;turn off video
        rep     movsw
        mov     ax,bx
        mov     cx,bp
        rep     stosw
        mov     al,29h
        mov     dx,3d8h
        out     dx,al          ;turn on video
        jmp     sret

GETMOD: MOV     AH,15
        INT     16          ;get column information
        MOV     BPAGE,BH
        DEC     AH
        MOV     WORD PTR MODE,AX
        RET

;-----
;
;      CONSOLE READ ROUTINE
;
CON$READ:
        JCXZ    CON$EXIT
CON$LOOP:
        PUSH    CX          ;SAVE COUNT
        CALL    CHRIN       ;GET CHAR IN AL
        POP     CX
        STOSB             ;STORE CHAR AT ES:DI
        LOOP   CON$LOOP
CON$EXIT:
        JMP     EXIT

;-----
;
;      INPUT SINGLE CHAR INTO AL
;
CHRIN:  XOR     AX,AX

```

```

        XCHG    AL,ALTAH    ;GET CHARACTER & ZERO ALTAH
        OR      AL,AL
        JNZ     KEYRET

INAGN:  XOR     AH,AH
        INT     22

ALT10:  OR      AX,AX      ;Check for non-key after BREAK
        JZ      INAGN
        OR      AL,AL      ;SPECIAL CASE?
        JNZ     KEYRET
        MOV     ALTAH,AH    ;STORE SPECIAL KEY
KEYRET: RET

;-----
;
;      KEYBOARD NON DESTRUCTIVE READ, NO WAIT
;
CON$RDND:
        MOV     AL,[ALTAH]
        OR      AL,AL
        JNZ     RDEXIT

RD1:    MOV     AH,1
        INT     22
        JZ      CONBUS
        OR      AX,AX
        JNZ     RDEXIT
        MOV     AH,0
        INT     22
        JMP     CON$RDND

RDEXIT: LDS     BX,[PTRSAV]
        MOV     [BX].MEDIA,AL
EXVEC:  JMP     EXIT
CONBUS: JMP     BUS$EXIT

;-----
;
;      KEYBOARD FLUSH ROUTINE
;
CON$FLSH:
        MOV     [ALTAH],0    ;Clear out holding buffer

        PUSH    DS
        XOR     BP,BP
        MOV     DS,BP      ;Select segment 0
        MOV     DS:BYTE PTR 41AH,1EH ;Reset KB queue head
                                ;pointer
        MOV     DS:BYTE PTR 41CH,1EH ;Reset tail pointer
        POP     DS
        JMP     EXVEC

;-----
;
;      CONSOLE WRITE ROUTINE
;
CON$WRIT:

```

```

        JCXZ    EXVEC
        PUSH   CX
        MOV    AH,3           ;SET CURRENT CURSOR POSITION
        XOR    BX,BX
        INT    16
        MOV    WORD PTR [COL],DX
        POP    CX

CON$LP: MOV    AL,ES:[DI]     ;GET CHAR
        INC    DI
        CALL   OUTC          ;OUTPUT CHAR
        LOOP  CON$LP        ;REPEAT UNTIL ALL THROUGH
        JMP    EXVEC

COUT:   STI
        PUSH   DS
        PUSH   CS
        POP    DS
        CALL   OUTC
        POP    DS
        IRET

OUTC:   PUSH   AX
        PUSH   CX
        PUSH   DX
        PUSH   SI
        PUSH   DI
        PUSH   ES
        PUSH   BP
        CALL   VIDEO
        POP    BP
        POP    ES
        POP    DI
        POP    SI
        POP    DX
        POP    CX
        POP    AX
        RET

;-----
;
;   OUTPUT SINGLE CHAR IN AL TO VIDEO DEVICE
;
VIDEO:  MOV    SI,OFFSET STATE
        JMP    [SI]

S1:     CMP    AL,ESC         ;ESCAPE SEQUENCE?
        JNZ   S1B
        MOV   WORD PTR [SI],OFFSET S2
        RET

S1B:    CALL   CHROUT
S1A:    MOV    WORD PTR [STATE],OFFSET S1
        RET

```

```
S2:      PUSH      AX
        CALL     GETMOD
        POP      AX
        MOV      BX,OFFSET CMDTABL-3
S7A:     ADD      BX,3
        CMP      BYTE PTR [BX],0
        JZ       S1A
        CMP      BYTE PTR [BX],AL
        JNZ      S7A
        JMP      WORD PTR [BX+1]

MOVCUR:  CMP      BYTE PTR [BX],AH
        JZ       SETCUR
        ADD      BYTE PTR [BX],AL
SETCUR:  MOV      DX,WORD PTR COL
        XOR      BX,BX
        MOV      AH,2
        INT     16
        JMP     S1A

CUP:     MOV      WORD PTR [SI],OFFSET CUP1
        RET
CUP1:    SUB      AL,32
        MOV      BYTE PTR [ROW],AL
        MOV      WORD PTR [SI],OFFSET CUP2
        RET
CUP2:    SUB      AL,32
        MOV      BYTE PTR [COL],AL
        JMP     SETCUR

SM:      MOV      WORD PTR [SI],OFFSET S1A
        RET

CUH:     MOV      WORD PTR COL,0
        JMP     SETCUR

CUF:     MOV      AH,MAXCOL
        MOV      AL,1
CUF1:    MOV      BX,OFFSET COL
        JMP     MOVCUR

CUB:     MOV      AX,00FFH
        JMP     CUF1

CUU:     MOV      AX,00FFH
CUU1:    MOV      BX,OFFSET ROW
        JMP     MOVCUR

CUD:     MOV      AX,23*256+1
        JMP     CUU1
```

```

PSCP:  MOV    AX,WORD PTR COL
        MOV    SAVCR,AX
        JMP    SETCUR

PRCP:  MOV    AX,SAVCR
        MOV    WORD PTR COL,AX
        JMP    SETCUR

ED:    CMP    BYTE PTR [ROW],24
        JAE   EL1

        MOV    CX,WORD PTR COL
        MOV    DH,24
        JMP    ERASE

EL1:   MOV    BYTE PTR [COL],0
EL:    MOV    CX,WORD PTR [COL]
EL2:   MOV    DH,CH
ERASE: MOV    DL,MAXCOL
        MOV    BH,ATTR
        MOV    AX,0600H
        INT   16
ED3:   JMP    SETCUR

RM:    MOV    WORD PTR [SI],OFFSET RM1
        RET

RM1:   XOR    CX,CX
        MOV    CH,24
        JMP    EL2

CON$INIT:
        int    11h
        and   al,00110000b
        cmp   al,00110000b
        jnz  iscolor
        mov   [base],0b000h           ;look for bw card

iscolor:
        cmp   al,00010000b           ;look for 40 col mode
        ja   setbrk
        mov   [mode],0
        mov   [maxcol],39

setbrk:
        XOR    BX,BX
        MOV    DS,BX
        MOV    BX,BRKADR
        MOV    WORD PTR [BX],OFFSET BREAK
        MOV    WORD PTR [BX+2],CS

        MOV    BX,29H*4
        MOV    WORD PTR [BX],OFFSET COUT
        MOV    WORD PTR [BX+2],CS

```

```
LDS      BX,CS:[PTRSAV]
MOV      WORD PTR [BX].TRANS,OFFSET CON$INIT
          ;SET BREAK ADDRESS
MOV      [BX].TRANS+2,CS
JMP      EXIT

CODE     ENDS
        END
```

CHAPTER 3

MS-DOS TECHNICAL INFORMATION

3.1 MS-DOS INITIALIZATION

MS-DOS initialization consists of several steps. Typically, a ROM (Read Only Memory) bootstrap obtains control, and then reads the boot sector off the disk. The boot sector then reads the following files:

IO.SYS
MSDOS.SYS

Once these files are read, the boot process begins.

3.2 THE COMMAND PROCESSOR

The command processor supplied with MS-DOS (file COMMAND.COM.) consists of 3 parts:

1. A resident part resides in memory immediately following MSDOS.SYS and its data area. This part contains routines to process Interrupts 23H (CONTROL-C Exit Address) and 24H (Fatal Error Abort Address), as well as a routine to reload the transient part, if needed. All standard MS-DOS error handling is done within this part of COMMAND.COM. This includes displaying error messages and processing the Abort, Retry, or Ignore messages.
2. An initialization part follows the resident part. During startup, the initialization part is given control; it contains the AUTOEXEC file processor setup routine. The initialization part determines the segment address at which programs can be loaded. It is overlaid by the first program COMMAND.COM loads because it is no longer needed.

3. A transient part is loaded at the high end of memory. This part contains all of the internal command processors and the batch file processor.

The transient part of the command processor produces the system prompt (such as A>), reads the command from keyboard (or batch file) and causes it to be executed. For external commands, this part builds a command line and issues the EXEC system call (Function Request 4BH) to load and transfer control to the program.

3.3 MS-DOS DISK ALLOCATION

The MS-DOS area is formatted as follows:

Reserved area - variable size
First copy of file allocation table - variable size
Second copy of file allocation table - variable size (optional)
Additional copies of file allocation table - variable size (optional)
Root directory - variable size
File data area

Allocation of space for a file in the data area is not pre-allocated. The space is allocated one cluster at a time. A cluster consists of one or more consecutive sectors; all of the clusters for a file are "chained" together in the File Allocation Table (FAT). (Refer to Section 3.5, "File Allocation Table.") There is usually a second copy of the FAT kept, for consistency. Should the disk develop a bad sector in the middle of the first FAT, the second can be used. This avoids loss of data due to an unusable disk.

3.4 MS-DOS DISK DIRECTORY

FORMAT builds the root directory for all disks. Its location on disk and the maximum number of entries are dependent on the media.

Since directories other than the root directory are regarded as files by MS-DOS, there is no limit to the number of files they may contain.

All directory entries are 32 bytes in length, and are in the following format (note that byte offsets are in hexadecimal):

0-7 Filename. Eight characters, left aligned and padded, if necessary, with blanks. The first byte of this field indicates the file status as follows:

00H The directory entry has never been used. This is used to limit the length of directory searches, for performance reasons.

2EH The entry is for a directory. If the second byte is also 2EH, then the cluster field contains the cluster number of this directory's parent directory (0000H if the parent directory is the root directory). Otherwise, bytes 01H through 0AH are all spaces, and the cluster field contains the cluster number of this directory.

E5H The file was used, but it has been erased.

Any other character is the first character of a filename.

8-0A Filename extension.

0B File attribute. The attribute byte is mapped as follows (values are in hexadecimal):

01 File is marked read-only. An attempt to open the file for writing using the Open File system call (Function Request 3DH) results in an error code being returned. This value can be used along with other values below. Attempts to delete the file with the Delete File system call (13H) or Delete a Directory Entry (41H) will also fail.

02 Hidden file. The file is excluded from normal directory searches.

04 System file. The file is excluded from normal directory searches.

08 The entry contains the volume label in the first 11 bytes. The entry contains no other usable information

(except date and time of creation), and may exist only in the root directory.

- 10 The entry defines a sub-directory, and is excluded from normal directory searches.
- 20 Archive bit. The bit is set to "on" whenever the file has been written to and closed.

Note: The system files (IO.SYS and MSDOS.SYS) are marked as read-only, hidden, and system files. Files can be marked hidden when they are created. Also, the read-only, hidden, system, and archive attributes may be changed through the Change Attributes system call (Function Request 43H).

0C-15 Reserved.

16-17 Time the file was created or last updated. The hour, minutes, and seconds are mapped into two bytes as follows:

Offset 17H

H	H	H	H	H	M	M	M
7			3	2			

Offset 16H

M	M	M	S	S	S	S	S
		5	4				0

where:

H is the binary number of hours (0-23)
M is the binary number of minutes (0-59)
S is the binary number of two-second increments

18-19 Date the file was created or last updated. The year, month, and day are mapped into two bytes as follows:

Offset 19H

Y	Y	Y	Y	Y	Y	Y	M
7					1		0

Offset 18H

M	M	M	D	D	D	D	D
		5	4				0

where:

Y is 0-119 (1980-2099)
M is 1-12
D is 1-31

1A-1B Starting cluster; the cluster number of the first cluster in the file.

Note that the first cluster for data space on all disks is cluster 002.

The cluster number is stored with the least significant byte first.

NOTE

Refer to Section 3.5.1, "How to Use the File Allocation Table," for details about converting cluster numbers to logical sector numbers.

1C-1F File size in bytes. The first word of this four-byte field is the low-order part of the size.

3.5 FILE ALLOCATION TABLE (FAT)

The following information is included for system programmers who wish to write installable device drivers. This section explains how MS-DOS uses the File Allocation Table to convert the clusters of a file to logical sector numbers. The driver is then responsible for locating the logical sector on disk. Programs must use the MS-DOS file management function calls for accessing files; programs that access the FAT are not guaranteed to be upwardly-compatible with future releases of MS-DOS.

The File Allocation Table is an array of 12-bit entries (1.5 bytes) for each cluster on the disk. The first two FAT entries map a portion of the directory; these FAT entries indicate the size and format of the disk.

The second and third bytes currently always contain FFH.

The third FAT entry, which starts at byte offset 4, begins the mapping of the data area (cluster 002). Files in the data area are not always written sequentially on the disk. The data area is allocated one cluster at a time, skipping over clusters already allocated. The first free cluster found will be the next cluster allocated, regardless of its physical location on the disk. This permits the most efficient utilization of disk space because clusters made available by erasing files can be allocated for new files.

Each FAT entry contains three hexadecimal characters:

- 000 If the cluster is unused and available.
- FF7 The cluster has a bad sector in it. MS-DOS will not allocate such a cluster. CHKDSK counts the number of bad clusters for its report. These bad clusters are not part of any allocation chain.
- FF8-FFF Indicates the last cluster of a file.
- XXX Any other characters that are the cluster number of the next cluster in the file. The cluster number of the first cluster in the file is kept in the file's directory entry.

The File Allocation Table always begins on the first section after the reserved sectors. If the FAT is larger than one sector, the sectors are contiguous. Two copies of the FAT are usually written for data integrity. The FAT is read into one of the MS-DOS buffers whenever needed (open, read, write, etc.). For performance reasons, this buffer is given a high priority to keep it in memory as long as possible.

3.5.1 How To Use The File Allocation Table

Use the directory entry to find the starting cluster of the file. Next, to locate each subsequent cluster of the file:

1. Multiply the cluster number just used by 1.5 (each FAT entry is 1.5 bytes long).
2. The whole part of the product is an offset into the FAT, pointing to the entry that maps the cluster just used. That entry contains the cluster number of the next cluster of the file.
3. Use a MOV instruction to move the word at the calculated FAT offset into a register.
4. If the last cluster used was an even number, keep the low-order 12 bits of the register by ANDing it with FFF; otherwise, keep the high-order 12 bits by shifting the register right 4 bits with a SHR instruction.
5. If the resultant 12 bits are FF8H-FFFH, the file contains no more clusters. Otherwise, the 12 bits contain the cluster number of the next cluster in the file.

To convert the cluster to a logical sector number (relative sector, such as that used by Interrupts 25H and 26H and by DEBUG):

1. Subtract 2 from the cluster number.
2. Multiply the result by the number of sectors per cluster.
3. Add to this result the logical sector number of the beginning of the data area.

3.6 MS-DOS STANDARD DISK FORMATS

On an MS-DOS disk, the clusters are arranged on disk to minimize head movement for multi-sided media. All of the space on a track (or cylinder) is allocated before moving on to the next track. This is accomplished by using the sequential sectors on the lowest-numbered head, then all the sectors on the next head, and so on until all sectors on all heads of the track are used. The next sector to be used will be sector 1 on head 0 of the next track.

For disks, the following table can be used:

# Sides	Sectors/Track	FAT size Sectors	Dir Sectors	Dir Entries	Sectors/Cluster
1	8	1	4	64	1
2	8	1	7	112	2
1	9	2	4	64	1
2	9	2	7	112	2

Figure 4. 5-1/4" Disk Format

The first byte of the FAT can sometimes be used to determine the format of the disk. The following 5-1/4" formats have been defined for the IBM Personal Computer, based on values of the first byte of the FAT. The formats in Table 3.1 are considered to be the standard disk formats for MS-DOS.

Table 3.1 MS-DOS Standard Disk Formats

	5-1/4	5-1/4	5-1/4	5-1/4	8	8	8
No. sides	1	1	2	2	1	1	2
Tracks/side	40	40	40	40	77	77	77
Bytes/ sector	512	512	512	512	128	128	1024
Sectors/ track	8	9	8	9	26	26	8
Sectors/allocation unit	1	1	2	2	4	4	1
Reserved sectors	1	1	1	1	1	4	1
No. FATs	2	2	2	2	2	2	2
Root directory entries	64	64	112	112	68	68	192
No. sectors	320	360	640	720	2002	2002	616
Media Descriptor Byte	FE	FC	FF	FD	FE*	FD	FE*
Sectors for 1 FAT	1	2	1	2	6	6	2

*The two media descriptor bytes that are the same for 8" disks (FEH) is not a misprint. To establish whether a disk is single- or double-density, a read of a single-density address mark should be made. If an error occurs, the media is double-density.

CHAPTER 4

MS-DOS CONTROL BLOCKS AND WORK AREAS

4.1 TYPICAL MS-DOS MEMORY MAP

0000:0000	Interrupt vector table
XXXX:0000	IO.SYS - MS-DOS interface to hardware
XXXX:0000	MSDOS.SYS - MS-DOS interrupt handlers, service routines (Interrupt 21H functions) MS-DOS buffers, control areas, and installed device drivers
XXXX:0000	Resident part of COMMAND.COM - Interrupt handlers for Interrupts 22H (Terminate Address), 23H (CONTROL-C Exit Address), 24H (Fatal Error Abort Address) and code to reload the transient part
XXXX:0000	External command or utility - (.COM or .EXE file)
XXXX:0000	User stack for .COM files (256 bytes)
XXXX:0000	Transient part of COMMAND.COM - Command interpreter, internal commands, batch processor

1. Memory map addresses are in segment:offset format. For example, 0090:0000 is absolute address 0900H.
2. User memory is allocated from the lowest end of available memory that will meet the allocation request.

4.2 MS-DOS PROGRAM SEGMENT

When an external command is typed, or when you execute a program through the EXEC system call, MS-DOS determines the lowest available free memory address to use as the start of the program. This area is called the Program Segment.

The first 256 bytes of the Program Segment are set up by the EXEC system call for the program being loaded into memory. The program is then loaded following this block. An .EXE file with minalloc and maxalloc both set to zero is loaded as high as possible.

At offset 0 within the Program Segment, MS-DOS builds the Program Segment Prefix control block. The program returns from EXEC by one of four methods:

1. A long jump to offset 0 in the Program Segment Prefix
2. By issuing an INT 20H with CS:0 pointing at the PSP
3. By issuing an INT 21H with register AH=0 with CS:0 pointing at the PSP, or 4CH and no restrictions on CS
4. By a long call to location 50H in the Program Segment Prefix with AH=0 or Function Request 4CH

NOTE

It is the responsibility of all programs to ensure that the CS register contains the segment address of the Program Segment Prefix when terminating via any of these methods, except Function Request 4CH. For this reason, using Function Request 4CH is the preferred method.

All four methods result in transferring control to the program that issued the EXEC. During this returning process, Interrupts 22H, 23H, and 24H (Terminate Address, CONTROL-C Exit Address, and Fatal Error Abort Address) addresses are restored from the values saved in the Program Segment Prefix of the terminating program. Control is then given to the terminate address. If this is a program returning to COMMAND.COM, control transfers to its resident portion. If a batch file was in process, it is continued;

otherwise, COMMAND.COM performs a checksum on the transient part, reloads it if necessary, then issues the system prompt and waits for you to type the next command.

When a program receives control, the following conditions are in effect:

For all programs:

The segment address of the passed environment is contained at offset 2CH in the Program Segment Prefix.

The environment is a series of ASCII strings (totaling less than 32K) in the form:

NAME=parameter

Each string is terminated by a byte of zeros, and the set of strings is terminated by another byte of zeros. The environment built by the command processor contains at least a COMSPEC= string (the parameters on COMSPEC define the path used by MS-DOS to locate COMMAND.COM on disk). The last PATH and PROMPT commands issued will also be in the environment, along with any environment strings defined with the MS-DOS SET command.

The environment that is passed is a copy of the invoking process environment. If your application uses a "keep process" concept, you should be aware that the copy of the environment passed to you is static. That is, it will not change even if subsequent SET, PATH, or PROMPT commands are issued.

Offset 50H in the Program Segment Prefix contains code to call the MS-DOS function dispatcher. By placing the desired function request number in AH, a program can issue a far call to offset 50H to invoke an MS-DOS function, rather than issuing an Interrupt 21H. Since this is a call and not an interrupt, MS-DOS may place any code appropriate to making a system call at this position. This makes the process of calling the system portable.

The Disk Transfer Address (DTA) is set to 80H (default DTA in the Program Segment Prefix).

File control blocks at 5CH and 6CH are formatted from the first two parameters typed when the command was entered. If either parameter contained a pathname, then the corresponding FCB contains only the valid drive number. The filename field will not be valid.

An unformatted parameter area at 81H contains all the characters typed after the command (including leading and imbedded delimiters), with the byte at 80H set to the number of characters. If the <, >, or parameters were typed on the command line, they (and the filenames associated with them) will not appear in this area; redirection of standard input and output is transparent to applications.

Offset 6 (one word) contains the number of bytes available in the segment.

Register AX indicates whether or not the drive specifiers (entered with the first two parameters) are valid, as follows:

AL=FF if the first parameter contained an invalid drive specifier (otherwise AL=00)

AH=FF if the second parameter contained an invalid drive specifier (otherwise AH=00)

Offset 2 (one word) contains the segment address of the first byte of unavailable memory. Programs must not modify addresses beyond this point unless they were obtained by allocating memory via the Allocate Memory system call (Function Request 48H).

For Executable (.EXE) programs:

DS and ES registers are set to point to the Program Segment Prefix.

CS, IP, SS, and SP registers are set to the values passed by MS-LINK.

For Executable (.COM) programs:

All four segment registers contain the segment address of the initial allocation block that starts with the Program Segment Prefix control block.

All of user memory is allocated to the program. If the program invokes another program through Function Request 4BH, it must first free some memory through the Set Block (4AH) function call, to provide space for the program being executed.

The Instruction Pointer (IP) is set to 100H.

The Stack Pointer register is set to the end of the program's segment. The segment size at offset 6 is reduced by 100H to allow for a stack of that size.

A word of zeros is placed on top of the stack. This is to allow a user program to exit to COMMAND.COM by doing a RET instruction last. This assumes, however, that the user has maintained his stack and code segments.

Figure 5 illustrates the format of the Program Segment Prefix. All offsets are in hexadecimal.

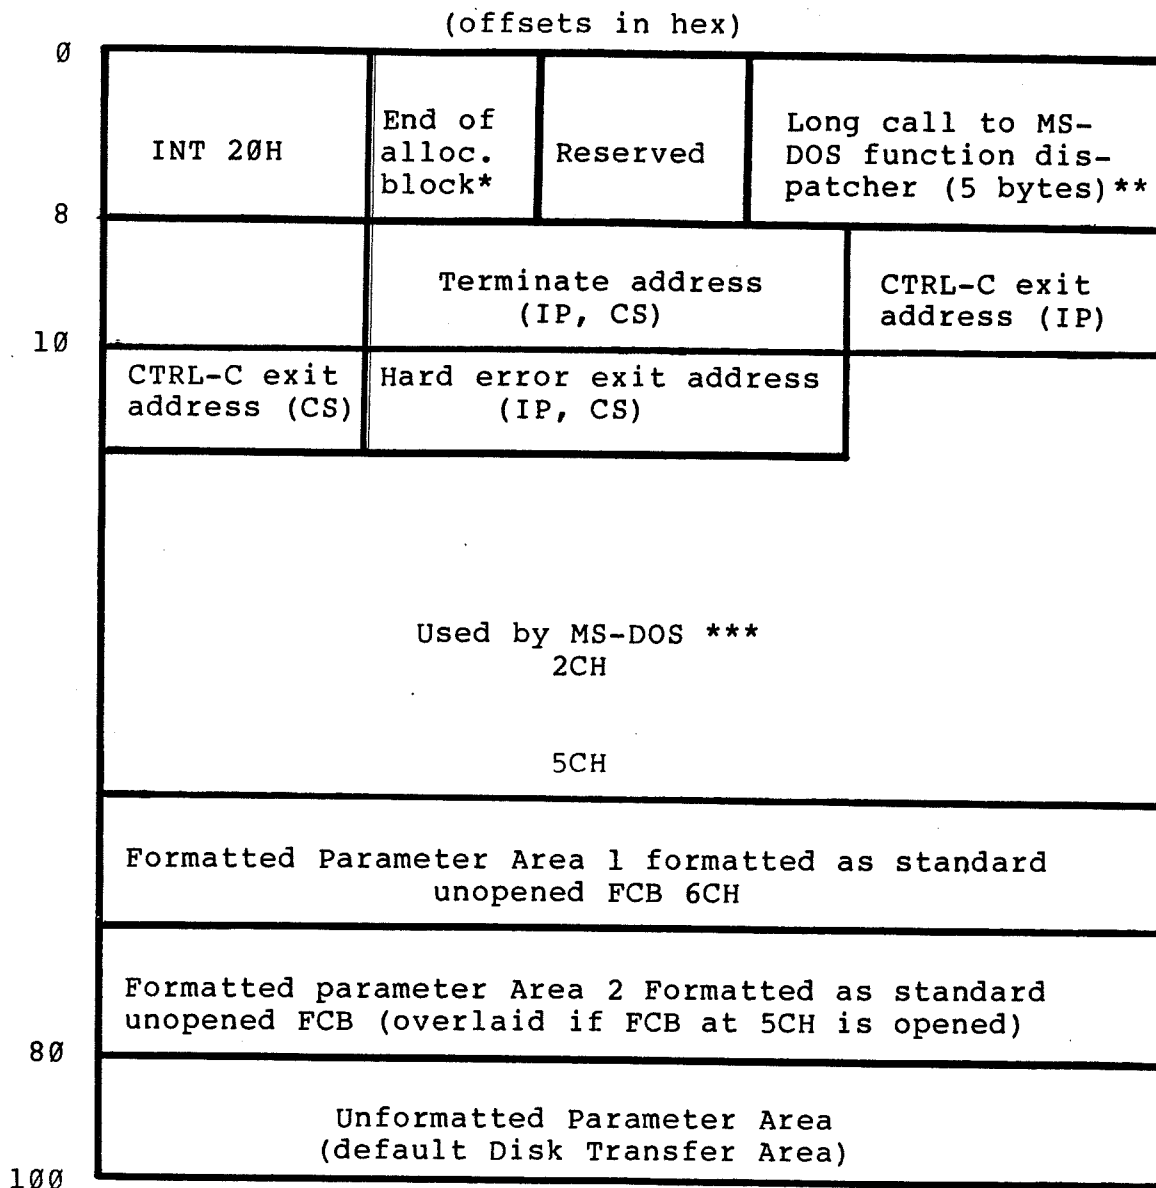


Figure 5. Program Segment Prefix

IMPORTANT

Programs must not alter any part of the Program Segment Prefix below offset 5CH.

CHAPTER 5

.EXE FILE STRUCTURE AND LOADING

NOTE

This chapter describes .EXE file structure and loading procedures for systems that use a version of MS-DOS that is lower than 2.0. For MS-DOS 2.0 and higher, use Function Request 4BH, Load and Execute a Program, to load (or load and execute) an .EXE file.

The .EXE files produced by MS-LINK consist of two parts:

Control and relocation information

The load module

The control and relocation information is at the beginning of the file in an area called the header. The load module immediately follows the header.

The header is formatted as follows. (Note that offsets are in hexadecimal.)

Offset	Contents
00-01	Must contain 4DH, 5AH.
02-03	Number of bytes contained in last page; this is useful in reading overlays.
04-05	Size of the file in 512-byte pages, including the header.
06-07	Number of relocation entries in table.

08-09	Size of the header in 16-byte paragraphs. This is used to locate the beginning of the load module in the file.
0A-0B	Minimum number of 16-byte paragraphs required above the end of the loaded program.
0C-0D	Maximum number of 16-byte paragraphs required above the end of the loaded program. If both minalloc and maxalloc are 0, then the program will be loaded as high as possible.
0E-0F	Initial value to be loaded into stack segment before starting program execution. This must be adjusted by relocation.
10-11	Value to be loaded into the SP register before starting program execution.
12-13	Negative sum of all the words in the file.
14-15	Initial value to be loaded into the IP register before starting program execution.
16-17	Initial value to be loaded into the CS register before starting program execution. This must be adjusted by relocation.
18-19	Relative byte offset from beginning of run file to relocation table.
1A-1B	The number of the overlay as generated by MS-LINK.

The relocation table follows the formatted area described above. This table consists of a variable number of relocation items. Each relocation item contains two fields: a two-byte offset value, followed by a two-byte segment value. These two fields contain the offset into the load module of a word which requires modification before the module is given control. The following steps describe this process:

1. The formatted part of the header is read into memory. Its size is 1BH.

2. A portion of memory is allocated depending on the size of the load module and the allocation numbers (0A-0B and 0C-0D). MS-DOS attempts to allocate FFFFH paragraphs. This will always fail, returning the size of the largest free block. If this block is smaller than minalloc and loadsize, then there will be no memory error. If this block is larger than maxalloc and loadsize, MS-DOS will allocate (maxalloc + loadsize). Otherwise, MS-DOS will allocate the largest free block of memory.
3. A Program Segment Prefix is built in the lowest part of the allocated memory.
4. The load module size is calculated by subtracting the header size from the file size. Offsets 04-05 and 08-09 can be used for this calculation. The actual size is downward-adjusted based on the contents of offsets 02-03. Based on the setting of the high/low loader switch, an appropriate segment is determined at which to load the load module. This segment is called the start segment.
5. The load module is read into memory beginning with the start segment.
6. The relocation table items are read into a work area.
7. Each relocation table item segment value is added to the start segment value. This calculated segment, plus the relocation item offset value, points to a word in the load module to which is added the start segment value. The result is placed back into the word in the load module.
8. Once all relocation items have been processed, the SS and SP registers are set from the values in the header. Then, the start segment value is added to SS. The ES and DS registers are set to the segment address of the Program Segment Prefix. The start segment value is added to the header CS register value. The result, along with the header IP value, is the initial CS:IP to transfer to before starting execution of the program.

INDEX

.COM file	2-12
Absolute Disk Read (Interrupt 25H) . .	1-23
Absolute Disk Write (Interrupt 26H) . .	1-25
Allocate Memory (Function 48H)	1-128
Archive bit	3-6
ASCIZ	1-107
Attribute field	2-4
Attributes	1-12
AUTOEXEC file	3-2
Auxiliary Input (Function 03H)	1-36
Auxiliary Output (Function 04H)	1-37
Basic	1-1
BIOS	1-25, 2-6
BIOS Parameter Block	2-10, 2-13
Bit 8	2-9
Bit 9	2-9
Block device example	2-20
Block devices	2-1, 2-8, 2-10, 2-16
Boot sector	2-14
BPB	2-10
BPB pointer	2-12
Buffered Keyboard Input (Function 0AH)	1-45
BUILD BPB	2-4, 2-8, 2-13
Busy bit	2-9, 2-17 to 2-18
Case mapping	1-108
Change Attributes (Function 43H)	1-120
Change Current Directory (Function 3BH)	1-111
Character device	2-1, 2-5
Example	2-34
Check Keyboard Status (Function 0BH) . .	1-47
CLOCK device	2-4, 2-19
Close a File Handle (Function 3EH) . . .	1-115
Close File (Function 10H)	1-53
Cluster	3-3
Command code field	2-7
Command processor	3-2
COMMAND.COM	3-1 to 3-2
COMSPEC=	4-3
CON device	2-5
CONFIG.SYS	2-6, 2-12
Console input/output calls	1-3
Control blocks	4-1
Control information	5-1
CONTROL-C Check (Function 33H)	1-102
CONTROL-C Exit Address (Interrupt 23H)	1-19, 3-2
CP/M-compatible calling sequence	1-28

Create a File (Function 3CH)	1-112
Create File (Function 16H)	1-65
Create Sub-Directory (Function 39H)	1-109
Current Disk (Function 19H)	1-69
DATE	2-19
Delete a Directory Entry (Function 41H)	1-118
Delete File (Function 13H)	1-59
Device drivers	3-7
Creating	2-5
Dumb	2-11
Example	2-20, 2-34
Installing	2-6
Smart	2-11
Device header	2-3
Direct Console I/O (Function 06H)	1-40
Direct Console Input (Function 07H)	1-42
Directory entry	1-6
Disk allocation	3-3
Disk Directory	3-4
Disk errors	1-22
Disk format	
IBM	3-3
MS-DOS	3-7
Disk I/O calls	1-3
Disk Reset (Function 0DH)	1-49
Disk Transfer Address	1-63, 4-3
Display Character (Function 02H)	1-35
Display String (Function 09H)	1-44
Done bit	2-9
Driver	2-2
Dumb device driver	2-11
Duplicate a File Handle (Function 45H)	1-125
Error codes	1-20
Error handling	3-2
Example Block Device Driver	2-20
Example Character Device Driver	2-34
EXE files	5-1
Extended File Control Block	1-6
FAT	1-11, 2-8, 2-13, 3-3, 3-7
FAT ID byte	2-13, 2-15
Fatal Error Abort Address (Interrupt 24H)	1-20, 3-2
FCB	4-7
File Allocation Table	1-11, 3-3, 3-7
File Control Block	1-3, 1-51
Extended	1-6, 4-10
Fields	1-4, 1-7
Opened	1-3
Standard	4-8
Unopened	1-3
File control Block	4-7
File Size (Function 23H)	1-76
Filename separators	1-88

Filename terminators	1-88
Find Match File (Function 4EH)	1-136
FLUSH	2-18
Flush Buffer (Function 0CH)	1-48
Force Duplicate of Handle (Function 46H)	1-126
FORMAT	3-4
Fortran	1-2
Free Allocated Memory (Function 49H)	1-129
Function call parameters	2-11
Function dispatcher	1-28
Function Request (Interrupt 21H)	1-18, 4-3
Function Requests	
Function 00H	1-33
Function 01H	1-34
Function 02H	1-35
Function 03H	1-36
Function 04H	1-37
Function 05H	1-38
Function 06H	1-40
Function 07H	1-42
Function 08H	1-43
Function 09H	1-44
Function 0AH	1-45
Function 0BH	1-47
Function 0CH	1-48
Function 0DH	1-49, 1-63
Function 0EH	1-50
Function 0FH	1-51, 1-65
Function 10H	1-53
Function 11H	1-55
Function 12H	1-57
Function 13H	1-59
Function 14H	1-61
Function 15H	1-63
Function 16H	1-65
Function 17H	1-67
Function 19H	1-69
Function 1AH	1-70
Function 21H	1-72
Function 22H	1-74
Function 23H	1-76
Function 24H	1-78
Function 25H	1-19, 1-79
Function 27H	1-81
Function 28H	1-84
Function 29H	1-87
Function 2AH	1-90
Function 2BH	1-92
Function 2CH	1-94
Function 2DH	1-95
Function 2EH	1-97
Function 2FH	1-99
Function 30H	1-100
Function 31H	1-101

Function 33H	1-102
Function 35H	1-104
Function 36H	1-105
Function 38H	1-106
Function 39H	1-109
Function 3AH	1-110
Function 3BH	1-111
Function 3CH	1-112
Function 3DH	1-113
Function 3EH	1-115
Function 3FH	1-116
Function 40H	1-117
Function 41H	1-118
Function 42H	1-119
Function 43H	1-120
Function 44H	1-121
Function 45H	1-125
Function 46H	1-126
Function 47H	1-127
Function 48H	1-128
Function 49H	1-129
Function 4AH	1-130
Function 4BH	1-131
Function 4CH	1-134
Function 4DH	1-135
Function 4EH	1-136
Function 4FH	1-138
Function 54H	1-139
Function 56H	1-140
Function 57H	1-141
Get Date (Function 2AH)	1-90
Get Disk Free Space (Function 36H)	1-105
Get Disk Transfer Address (Function 2FH)	1-99
Get DOS Version Number (Function 30H)	1-100
Get Interrupt Vector (Function 35H)	1-104
Get Time (Function 2CH)	1-94
Get/Set Date /Time of File (Function 57H)	1-141
Header	5-1
Hidden files	1-57, 3-5
Hierarchical directories	1-11
High-level languages	1-1
I/O Control for Devices (Function 44H)	1-121, 2-4
IBM disk format	3-3
INIT	2-5, 2-10 to 2-12
Initial allocation block	1-101
Installable device drivers	2-5
Instruction Pointer	4-4
Internal stack	1-29
Interrupt entry point	2-1
Interrupt handlers	1-19, 4-1
Interrupt-handling routine	1-80

Interrupts	1-14
Interrupt 20H	1-16, 1-33
Interrupt 21H	1-18, 1-28
Interrupt 22H	1-19
Interrupt 23H	1-19, 1-34 to 1-35, 1-38, 1-43, 1-45
Interrupt 24H	1-20
Interrupt 25H	1-23
Interrupt 26H	1-25
Interrupt 27H	1-27
IO.SYS	3-1, 3-6
IOCTL bit	2-4
Keep Process (Function 31H)	1-101
Load and Execute Program (Function 4BH)	1-131
Load module	5-1 to 5-2
Local buffering	2-6
Logical sector	3-7
Logical sector numbers	3-8
Macro	1-10
MEDIA CHECK	2-8, 2-12
Media descriptor byte	2-10 to 2-11, 2-15
Modify Allocated Memory Blocks (Function 4AH)	1-130
Move a Directory Entry (Function 56H)	1-140
Move File Pointer (Function 42H)	1-119
MS-DOS initialization	3-1
MS-DOS memory map	4-1
MS-LINK	5-1 to 5-2
MSDOS.SYS	3-1 to 3-2, 3-6
Multiple media	2-11
Name field	2-5
NON DESTRUCTIVE READ NO WAIT	2-17
Non IBM format	2-8
Non IBM format bit	2-4, 2-13
NUL device	2-4
Offset 50H	1-28
Open a File (Function 3DH)	1-113
Open File (Function 0FH)	1-51
Parse File Name (Function 29H)	1-87
Pascal	1-2
PATH	4-3
Pointer to Next Device field	2-3
Print Character (Function 05H)	1-38
Printer input/output calls	1-3
Program segment	4-2
Program Segment Prefix	1-2 to 1-3, 1-20, 1-28, 4-2
Program Terminate (Interrupt 20H)	1-16
PROMPT	4-3

Random Block Read (Function 27H) . . .	1-81
Random Block Write (Function 28H) . . .	1-84
Random Read (Function 21H)	1-72
Random Write (Function 22H)	1-74
Read From File/Device (Function 3FH) . .	1-116
Read Keyboard (Function 08H)	1-43
Read Keyboard and Echo (Function 01H)	1-34
Read Only Memory	3-1
READ or WRITE	2-16
Record Size	1-63
Registers	1-29
Relocation information	5-1
Relocation item offset value	5-3
Relocation table	5-2
Remove a Directory Entry (Function 3AH)	1-110
Rename File (Function 17H)	1-67
Request Header	2-6
Retrieve Return Code (Function 4DH) . .	1-135
Return Country-Dependent Info. (Function 38H)	1-106
Return Current Setting (Function 54H)	1-139
Return Text of Current Directory (Function 47H)	1-127
Returning control to MS-DOS	1-2
ROM	3-1
Root directory	1-11, 3-4
Search for First Entry (Function 11H)	1-55, 4-10
Search for Next Entry (Function 12H) . .	1-57
Select Disk (Function 0EH)	1-50
Sequential Read (Function 14H)	1-61
Sequential Write (Function 15H)	1-63
SET	4-3
Set Date (Function 2BH)	1-92
Set Disk Transfer Address (Function 1AH)	1-70
Set Relative Record (Function 24H) . . .	1-78
Set Time (Function 2DH)	1-95
Set Vector (Function 25H)	1-19, 1-79
Set/Reset Verify Flag (Function 2EH) . .	1-97
Smart device driver	2-11
Start segment value	5-3
STATUS	2-18
Status word	2-9
Step Through Directory (Function 4FH)	1-138
Strategy entry point	2-1
Strategy routines	2-5
System files	1-57, 3-5
System prompt	3-2
Terminate a Process (Function 4CH) . . .	1-134
Terminate Address (Function 4CH)	4-2
Terminate Address (Interrupt 22H)	1-19, 3-2
Terminate But Stay Resident (Interrupt 27H)	1-27

Terminate Program (Function 00H) . . .	1-33
TIME	2-19
Type-ahead buffer	2-18
Unit code	2-7
User stack	1-21, 4-1
Volume label	3-5
Wild card characters	1-57, 1-59, 1-88
Write to a File/Device (Function 40H)	1-117
Xenix-compatible calls	1-11

